

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [EasyHome](#) /
- › [EasyHome Sleep Sound Machine \(Model CWN-T6\) Instruction Manual](#)

EasyHome CWN-T6

EasyHome Sleep Sound Machine (Model CWN-T6) Instruction Manual

Your guide to peaceful sleep and relaxation.

1. PRODUCT OVERVIEW

The EasyHome Sleep Sound Machine, Model CWN-T6, is designed to create a calming environment for improved sleep, relaxation, and focus. It features a wide selection of soothing sounds, adjustable night light, and convenient timer functions.



Figure 1: EasyHome Sleep Sound Machine (Model CWN-T6). This image shows the compact black unit with its top-mounted control panel and illuminated ring light.

2. PACKAGE CONTENTS

- EasyHome Sleep Sound Machine (Model CWN-T6)
- USB Power Cable
- User Manual (this document)

Note: A USB power adapter (wall plug) is not included and must be supplied by the user.

3. SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all components from the packaging.
2. **Power Connection:** Insert the small end of the provided USB power cable into the power input port on the EasyHome Sleep Sound Machine.

3. **Power Source:** Connect the USB-A end of the cable to a compatible USB power adapter (not included) and plug the adapter into a standard electrical outlet. The device is designed for corded electric operation.
4. **Placement:** Place the sound machine on a stable, flat surface, away from water and direct heat sources. For optimal sound distribution, ensure the speaker on the bottom is not obstructed.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- Press the **Power button** (🔌) to turn the device ON or OFF.

4.2 Sound Selection

The device offers 30 soothing sounds, including:

- White noise (3 variations)
 - Fan sounds (2 variations)
 - Rain sounds (4 variations, including thunder rain)
 - Sea waves (3 variations)
 - Water drop, River, Singing birds, Campfire, Fireplace
 - Lullabies (3 variations), Piano, Bless song, Meditation, Stars in the night, Brook
- Press the **Next Sound button** (▶) to cycle through the available sounds.
 - Press the **Previous Sound button** (◀) to go back to the previous sound.

30 Soothing Sounds



Figure 2: Visual representation of the 30 available soothing sounds, including nature sounds and lullabies.

4.3 Volume Adjustment

The device features 32 levels of volume control.

- Press the **Volume Up button** (🔊) to increase the volume.
- Press the **Volume Down button** (🔇) to decrease the volume.



Figure 3: The sound machine positioned on a nightstand, illustrating its volume capabilities.

4.4 Night Light Function

The integrated night light offers 12 colors and 10 levels of brightness.

- Press the **Light button** (🔆) to turn the night light ON or OFF.
- While the light is ON, press the **Color Cycle button** (🌈) to cycle through the 12 available colors.
- To adjust brightness, press and hold the **Light button** (🔆) and then use the **Volume Up/Down buttons** to select one of the 10 brightness levels.

12 Colors Night Light



Figure 4: The sound machine showcasing its 12 adjustable night light colors.

10 Adjustable Brightness



Figure 5: Illustration of the 10 adjustable brightness levels for the night light feature.

4.5 Timer Function

The device can play continuously or automatically shut off after a set period.

- Press the **Timer button** (🕒) to cycle through the timer options: 60 minutes, 120 minutes, 180 minutes, 240 minutes, or continuous play (indicated by an infinity symbol).

5 Timer Options



1Hour



2Hours



3Hours



4Hours



Continuous



Figure 6: The control panel indicating the 5 available timer settings.

4.6 Memory Function

The EasyHome Sleep Sound Machine remembers your last selected sound, light color, brightness, and volume settings when powered off and on again. This eliminates the need to reconfigure settings each time you use the device.

5. MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the device in a cool, dry place when not in use.
- **Safety:** Ensure the device is unplugged before cleaning or if it will not be used for an extended period. Keep out of reach of children and pets.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Not properly connected to power.	Ensure the USB cable is securely connected to both the device and a working USB power adapter/outlet.
No sound or low volume.	Volume is too low or muted.	Increase the volume using the Volume Up button. Check if the sound is set to a very quiet option.
Night light is not working.	Light function is turned off.	Press the Light button to turn it on. If it's on, try cycling through colors or adjusting brightness.
Device turns off unexpectedly.	Timer function is active.	Check the timer setting. If continuous play is desired, ensure the infinity symbol is selected.

7. SPECIFICATIONS

- **Model Number:** CWN-T6
- **Dimensions:** 4.53 x 4.37 x 3.54 inches
- **Weight:** 10.23 ounces (0.29 Kilograms)
- **Power Source:** Corded Electric
- **Number of Sounds:** 30
- **Night Light Colors:** 12
- **Night Light Brightness Levels:** 10
- **Volume Levels:** 32
- **Timer Options:** Continuous, 60 min, 120 min, 180 min, 240 min
- **Material:** Acrylonitrile Butadiene Styrene (ABS), Plastic

8. WARRANTY AND SUPPORT

The EasyHome Sleep Sound Machine comes with a **365-day warranty** from the date of purchase, covering manufacturing defects and malfunctions under normal use.

For any questions, technical assistance, or warranty claims, please contact EasyHome customer support through the retailer's platform or visit the official EasyHome website for contact information.

This product has been approved by FCC, CE, and RoHS certification. For safe operation, please refer to the user manual for proper usage instructions.

