

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Bissell](#) /

› [BISSELL CROSSWAVE Vacuum Filters Instruction Manual for Models 2955N, 2832E, 3400N, 3479N, 3401N, Cordless Max, and X7 Cordless Pet Series](#)

Bissell 3350F

BISSELL CROSSWAVE Vacuum Filters Instruction Manual

Model: 3350F

PRODUCT OVERVIEW

This document provides instructions for the BISSELL CROSSWAVE Vacuum Filters, designed as original accessories for various BISSELL CrossWave models. These filters are crucial for maintaining optimal cleaning performance and air quality.

Compatibility: This filter is compatible with BISSELL CrossWave Cordless Max, X7 Cordless Pet, and 2955N, 2832E, 3400N, 3479N, & 3401N Series vacuum cleaners.



Image: A single BISSELL CrossWave vacuum filter, showing its black frame and white pleated filter material.

INSTALLATION AND REPLACEMENT

The filter is designed for easy removal, washing, and replacement without the need for special tools.

1. **Removal:** Locate the filter compartment on your BISSELL CrossWave vacuum. Open the compartment and carefully remove the old filter.
2. **Installation:** Insert the new BISSELL CrossWave Vacuum Filter into the compartment, ensuring it is seated correctly. Close the compartment securely.



Ordnungsgemäß gewartete Filter
tragen dazu bei, die Wiedereinbringung
von Staub und anderen Partikeln in
die Luft zu reduzieren

Image: A close-up of the BISSELL CrossWave filter, highlighting its easy insertion and replacement feature.



Wechseln Sie Ihren Filter je nach Nutzung alle 6 Monate aus

Image: A person pointing to the water tank area of a BISSELL CrossWave vacuum cleaner while it is docked on its charging station, illustrating the product in a home setting.

MAINTENANCE

Regular maintenance of your filter is essential for maximizing cleaning performance and reducing the re-release of dust, pollen, and other particles into the air.

- **Cleaning:** If necessary, rinse the filter under cold water.
- **Drying:** Allow the filter to air dry completely for 24 hours before re-inserting it into the vacuum.
- **Replacement Frequency:** Replace the filter every 6 months, or more frequently depending on usage, to ensure optimal performance.



Designed for BISSELL® CrossWave® X7 Series

Image: A BISSELL CrossWave X7 Series vacuum cleaner in use on a hard floor, cleaning up a spill. A cat is walking in the background.



Saubere Luft mit **BISSELL®** Staubsaugerfiltern

Image: A person sitting on a carpeted floor, petting a large dog, with a BISSELL CrossWave vacuum cleaner visible in the background, illustrating a pet-friendly home environment where regular filter replacement is beneficial.

SPECIFICATIONS

Product Dimensions	1.18 x 3.54 x 4.06 inches
Item Weight	2.47 ounces (70 Grams)
Manufacturer	BISSELL
Model Number	3350F
Included Components	Filter
Number of Pieces	1
Care Instructions	Replace every 6 months

© 2026 BISSELL. All rights reserved.

For further assistance, please refer to your BISSELL vacuum cleaner's main instruction manual or visit the official BISSELL website.

