

[Manuals.plus](#) /

› [Top Knobs](#) /

› Top Knobs Harrison Pull TK3165PC Instruction Manual

Top Knobs TK3165PC

Top Knobs Harrison Pull TK3165PC Instruction Manual

Model: TK3165PC | Finish: Polished Chrome

1. PRODUCT OVERVIEW

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Top Knobs Harrison Pull, model TK3165PC. The Harrison Pull is a cabinet hardware component designed to enhance both the functionality and aesthetic appeal of your cabinetry.



Figure 1: Top Knobs Harrison Pull TK3165PC, Polished Chrome finish, front view.

2. INSTALLATION INSTRUCTIONS

The Top Knobs Harrison Pull is designed for straightforward installation. Follow these steps carefully to ensure proper mounting.

Tools Required:

- Drill
- Drill bits (appropriate size for mounting screws)
- Measuring tape or ruler
- Pencil or marker
- Screwdriver (Phillips or flathead, depending on screw type)

Installation Steps:

1. **Measure and Mark:** Carefully measure and mark the desired location for the pull on your cabinet door or drawer. Ensure the center-to-center spacing of 7 9/16 inches (192mm) is accurately marked.
2. **Drill Pilot Holes:** Using the appropriate drill bit, drill pilot holes at the marked locations. The drill bit should be slightly smaller than the mounting screws to prevent wood splitting.
3. **Align the Pull:** Position the Harrison Pull over the drilled holes, ensuring proper alignment.
4. **Secure the Pull:** Insert the mounting screws from the inside of the cabinet door or drawer and thread them into the pull. Tighten securely with a screwdriver, but avoid overtightening to prevent damage to the cabinet or pull.



Figure 2: Side profile of the Harrison Pull, illustrating mounting points.

3. OPERATION

To operate the Harrison Pull, simply grasp the pull firmly and apply gentle force to open or close the cabinet door or drawer. The pull is designed for smooth and comfortable use.

4. MAINTENANCE

To preserve the polished chrome finish and overall appearance of your Top Knobs Harrison Pull, follow these maintenance guidelines:

- **Cleaning:** Clean regularly with a soft, damp cloth.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, harsh chemicals, or polishing agents, as these can damage the polished chrome finish.
- **Drying:** Always dry the pull thoroughly after cleaning to prevent water spots.

5. TROUBLESHOOTING

Should you encounter any issues with your Harrison Pull, refer to the following common troubleshooting tips:

- **Loose Pull:** If the pull becomes loose, gently tighten the mounting screws from the inside of the cabinet door or drawer using a screwdriver. Do not overtighten.
- **Difficulty Installing:** Ensure that pilot holes are drilled correctly and are precisely aligned with the pull's mounting points. Do not force screws, as this can strip the threads or damage the cabinet.

6. PRODUCT SPECIFICATIONS

Detailed specifications for the Top Knobs Harrison Pull TK3165PC:

Attribute	Specification
Brand	Top Knobs
Model Number	TK3165PC
Material	Brass (Handle), Zinc (Overall)
Finish	Polished Chrome
Center to Center Spacing	7 9/16 inches (192mm)
Projection Distance	1.25 inches
Item Weight	0.41 Pounds (approx. 6.6 ounces)
Product Dimensions	1 x 1 x 1 inches (approximate, refers to packaging or general size)
UPC	196275004482



Figure 3: Top-down view of the Harrison Pull, illustrating center-to-center spacing.

7. WARRANTY AND SUPPORT

Your Top Knobs Harrison Pull is backed by a **Limited Lifetime Warranty**, ensuring quality and durability.

For warranty claims, technical assistance, or any product-related inquiries, please contact Top Knobs customer support directly. Detailed warranty information and contact options can be found on the official Top Knobs website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question