

[Manuals.plus](#) /

> [GE](#) /

> GE Universal Remote Control with Roku or Fire TV Streaming Remote Compartment, use with Samsung, Vizio, LG, Sony, Sharp, Apple TV, TCL, Smart TVs, Streaming Players, Blu-ray, DVD, 4-Device, 59046 Fire TV Replacement Remote

GE 59046

GE Universal Remote Control with Roku or Fire TV Streaming Remote Compartment

Model: 59046

INTRODUCTION

The GE 4-Device Universal Remote Control is designed to consolidate control of your home entertainment equipment. This remote features a patent-pending design that includes an adaptable compartment to securely house your Roku or Fire TV streaming remote, providing complete functionality and control. It is programmable for up to four devices and compatible with most major brands, supporting thousands of audio/video devices. This manual provides instructions for setup, operation, maintenance, and troubleshooting to ensure optimal use of your universal remote.

KEY FEATURES

- **Multi-device control:** Operate your Roku or Fire TV streaming device and up to 4 different audio and video components such as TVs, Blu-ray/DVD players, cable/satellite receivers, soundbars, other streaming media players and more.
- **Innovative, patent-pending design:** An adaptable compartment on the back of the remote houses a compatible Roku or Fire TV streaming remote (sold separately) so you're always ready to stream your favorite content. The Roku remote fits perfectly into the compartment, while the included insert simply snaps into place to accommodate the slim profile of the Fire TV remote.
- **Best remote code library:** This universal remote works with all major brands and supports thousands of the latest audio and video devices.
- **Simple setup:** Preprogrammed for immediate use with Samsung TVs, this universal remote provides trouble-free setup with auto code search, master volume control to let you adjust the volume level no matter which device is being used and easy-to-follow online videos to walk you through the setup process step by step. Requires 2 AA batteries (not included).
- **U.S.-based technical support:** Backed by a limited-lifetime replacement pledge and free U.S.-based technical support that is available Monday-Friday, 7AM-8PM, Central Time to assist with any questions or issues.

1. Battery Installation

The GE Universal Remote requires 2 AA batteries (not included). To install:

1. Press the arrow and slide the back cover upward to remove it.
2. Insert 2 AA batteries, ensuring correct polarity (+/-).
3. Replace the back cover by sliding it down until it clicks into place.



Image: The GE Universal Remote Control, showing its full button layout and the compartment for a streaming remote.

2. Inserting Your Roku or Fire TV Remote

This universal remote features a compartment to integrate your existing Roku or Fire TV streaming remote.

1. With the back cover removed, insert your Roku or Fire TV remote into the designated slot.

2. If using a Fire TV remote, snap the included insert into the cradle before adding the Fire TV remote for a secure fit. Some Fire TV remotes may not require the insert.
3. Ensure the streaming remote is securely seated.
4. Replace the back cover.



Image: A detailed view of the GE Universal Remote's compartment, illustrating how Roku and Fire TV remotes are inserted.

Your Amazon Fire TV* or Roku remote sits securely in the Flip & Slide™ cradle



Image: A hand holding the GE Universal Remote with a Fire TV remote inserted, showing the 'Flip & Slide' cradle mechanism and the optional insert.

3. Programming for Devices

The remote is preprogrammed for immediate use with Samsung TVs. For other devices, use the auto code search feature or refer to the online videos for step-by-step programming instructions.

Your browser does not support the video tag.

Video: An official product video demonstrating the setup and use of the GE 4-Device Universal Remote Companion for Roku and Fire TV. It shows how to insert batteries, integrate a streaming remote, and use both the universal and streaming remote functions.

OPERATION

Using the Universal Remote Functions

The universal remote allows control of up to four different audio and video components. Use the device selection buttons (TV, STR, DVD, AUD) at the top to switch between controlling different devices.

- **Power Button:** Turns selected device on/off.
- **Input Button:** Cycles through input sources on your TV.
- **Volume Control:** Adjusts volume. Master volume control allows adjusting volume regardless of the selected device.
- **Channel Navigation:** Changes channels.
- **Numeric Keypad:** For direct channel entry or menu navigation.
- **Playback Controls:** Play, pause, stop, fast forward, rewind for media players.
- **Menu/Navigation:** Access menus and navigate using the directional pad and OK button.



Preprogrammed for Samsung TVs
Control your Samsung TV via TV button — no programming required
Easy-to-program universal remote controls up to 4 devices

Image: An annotated diagram of the GE Universal Remote highlighting key button functions such as device selection, channel navigation, media controls, and home/menu navigation.

Using the Integrated Streaming Remote

When your Roku or Fire TV remote is housed in the compartment, you can use its native functions directly. Simply flip the universal remote to access your streaming remote and operate it as usual for streaming content.

SPECIALLY DESIGNED FOR

Roku

AND

Amazon FireTV

STREAMING DEVICE REMOTES*

Patent-pending design combines a full-featured universal remote with your Roku or Amazon Fire TV streaming remote for superior device control!

Compatible with most Amazon Fire TV remotes and Roku Express, Express, Premiere, Premiere*, Streaming Stick and Streaming Stick* models only

*Flip & Slide cradle does not accommodate the audio jack for Roku remotes



Image: A visual representation of the GE Universal Remote alongside a Roku streaming remote, demonstrating how the patent-pending design combines both for superior device control.

MAINTENANCE

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's performance diminishes or it stops responding. Always use fresh AA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Check battery polarity or replace with new AA batteries.
Device not responding to remote.	Incorrect device mode selected or remote not programmed.	Ensure the correct device button (TV, STR, DVD, AUD) is selected. Reprogram the remote for the device if necessary.
Streaming remote not working when inserted.	Streaming remote batteries are dead or not properly seated.	Remove the streaming remote and check its batteries. Ensure it is properly inserted into the universal remote's compartment.
Some functions not working.	Remote not fully programmed or device specific functions.	Ensure the remote is fully programmed for your device. Some advanced functions may not be supported by universal remotes.

SPECIFICATIONS

- **Product Dimensions:** 11.02 x 4.53 x 1.46 inches
- **Item Weight:** 6.3 ounces
- **Item Model Number:** 59046
- **Max Number of Supported Devices:** 4
- **Compatible Devices:** Television, VCR, DVD/Blu-ray Player, Home Theater, Cable/Satellite Receivers, Soundbars, Streaming Media Players
- **Color:** Black
- **Power Source:** 2 AA batteries (not included)



Image: A visual representation of the GE Universal Remote Control with its key dimensions (length, width, thickness) indicated.

WARRANTY AND SUPPORT

This product is backed by a limited-lifetime replacement pledge. For any questions or issues, free U.S.-based technical support is available Monday-Friday, 7 AM-8 PM, Central Time.

Please refer to the official GE website or the product packaging for the most current support contact information.