

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Amazon Basics](#) /

› [Amazon Basics Adjustable Rolling Garment Rack - Chrome - Instruction Manual](#)

## Amazon Basics GAR-053C

# Amazon Basics Adjustable Rolling Garment Rack - Chrome - Instruction Manual

Model: GAR-053C

## INTRODUCTION

This instruction manual provides detailed information for the assembly, operation, and maintenance of your Amazon Basics Adjustable Rolling Garment Rack. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of the product.

## SAFETY INFORMATION

- Always ensure all parts are securely fastened before placing items on the rack.
- Do not overload the rack beyond its specified weight capacity of 10 kg (22 lbs).
- Keep small parts and packaging materials away from children and pets.
- Use the product on a flat, stable surface to prevent tipping.
- Do not hang from or climb on the garment rack.

## PACKAGE CONTENTS

Before assembly, verify that all components are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

- 1x Horizontal Hanging Bar (Chrome)
- 2x Adjustable Vertical Poles (Chrome/Black)
- 2x Base Supports (Black)
- 4x Wheels (2 with locking mechanism)
- 2x Lower Support Bars (Black)
- Assorted connectors and fasteners



Image: Components of the Amazon Basics Adjustable Rolling Garment Rack, showing the horizontal bar, vertical poles, base supports, and wheels.

## SETUP AND ASSEMBLY

Assembly typically requires one person. Refer to the image below for visual guidance during assembly.

- 1. Attach Wheels to Base Supports:** Insert the four wheels into the designated holes on the underside of the two black base supports. Ensure the two locking wheels are placed on the same side for easier access. Press firmly until they click into place.
- 2. Connect Lower Support Bars:** Insert the ends of the two lower support bars into the corresponding holes on the base supports. These bars provide stability to the base.

3. **Insert Vertical Poles:** Slide the black lower sections of the adjustable vertical poles into the upright openings on the base supports. Ensure they are fully seated.
4. **Attach Horizontal Hanging Bar:** Place the chrome horizontal hanging bar onto the top of the two vertical poles. The black plastic connectors on the horizontal bar should align with the top of the vertical poles. Secure them by pressing down or tightening any integrated fasteners.
5. **Adjust Height (Optional):** Loosen the black adjustment clamps on the vertical poles. Extend the chrome upper sections of the poles to the desired height. Tighten the clamps securely to lock the height.



Image: The Amazon Basics Rolling Garment Rack fully assembled and ready for use.

## OPERATING INSTRUCTIONS

## Adjusting Height

The garment rack features adjustable height to accommodate various clothing lengths.

1. Locate the black adjustment clamps on each vertical pole.
2. Open or loosen both clamps.
3. Carefully raise or lower the chrome upper section of the poles to the desired height. Ensure both sides are adjusted evenly.
4. Close or tighten both clamps firmly to secure the poles in place.



Image: Detail of the height adjustment clamp and the connection point for the horizontal bar.

## Moving the Garment Rack

The integrated wheels allow for easy relocation of the rack.

1. Ensure the locking mechanisms on the wheels are disengaged (unlocked).
2. Gently push or pull the rack to its new location.
3. Once in position, engage the locking mechanisms on the two designated wheels to prevent unintended movement.



Image: Detail of the base of the garment rack, showing the wheels and lower support bars.

## MAINTENANCE

- **Cleaning:** Wipe down the metal and plastic surfaces with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish.
- **Regular Checks:** Periodically check all connections and fasteners to ensure they remain tight and secure. Retighten if necessary.
- **Wheel Care:** Keep the wheels free of dust, hair, and debris to ensure smooth rolling.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Rack is unstable or wobbly.	Loose connections; uneven surface; overloaded.	Ensure all screws and clamps are tightened. Move the rack to a flat, level surface. Reduce the weight of items on the rack.
Wheels do not roll smoothly.	Debris in wheels; wheels locked.	Clean any debris from the wheel casters. Ensure wheel locks are disengaged.
Height adjustment clamps do not hold.	Clamps not tightened sufficiently; excessive weight.	Ensure clamps are fully tightened. Do not exceed the maximum weight capacity.

## SPECIFICATIONS

- **Model Number:** GAR-053C
- **Material:** Metal (Chrome finish)
- **Adjustable Dimensions (L x W x H):** 91.5-145 cm x 42 cm x 134-161 cm (approximately 36-57 inches x 16.5 inches x 53-63 inches)
- **Product Weight:** 2.18 kg (4.8 lbs)
- **Maximum Load Capacity:** 10 kg (22 lbs)
- **Features:** Telescopic design for adjustable height, smooth-rolling casters (two with locking brakes).



Image: The Amazon Basics Garment Rack with key dimensions (height and width) indicated.

## WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the Amazon Basics official website or contact Amazon customer service directly. Keep your purchase receipt for any warranty claims.

## Related Documents - GAR-053C



## Amazon Basics 3-Tier Rolling Utility Cart - User Manual and Assembly Guide

Comprehensive user manual and assembly guide for the Amazon Basics 3-Tier Rolling Utility or Kitchen Cart. Includes safety instructions, specifications, cleaning, maintenance, delivery content, and assembly steps.