

[Manuals.plus](#) /

› [MohMus](#) /

› MohMus Premium Vacuum Cleaner Bags Instruction Manual for Karcher WD 3, MV 3, Parkside, and Compatible Models

MohMus 56

MohMus Premium Vacuum Cleaner Bags Instruction Manual

Model: 56

INTRODUCTION

Welcome to the instruction manual for your MohMus Premium Vacuum Cleaner Bags. These high-quality, multi-layer paper dust bags are designed to provide efficient dust collection and filtration for a range of compatible vacuum cleaner models. Please read these instructions carefully before installation and use to ensure optimal performance and longevity of your vacuum cleaner.

PRODUCT FEATURES

- **Contents:** 5 pieces of vacuum cleaner bags.
- **Material:** Made from high-quality, multi-layer paper for enhanced durability and filtration.
- **Compatibility:** Suitable for various Karcher, Parkside, Rowenta Bully, and other compatible vacuum cleaner models.
- **Efficient Dust Collection:** Designed to effectively capture fine dust and debris, maintaining a clean environment.



Image: MohMus Premium vacuum cleaner bags. Our vacuum cleaner dust bags are made of multi-layer and strong paper, ensuring durability and effective filtration.

COMPATIBILITY

These vacuum cleaner bags are compatible with a wide range of models. Please verify your vacuum cleaner model against the list below:

- **Karcher:** A 2201, A 2204, A 2204 AF, A 2206 X, A 2236 X pt, A 2251 Me F1, A 2254 Me, A 2504, A 2534 pt, A 2554 Me, A 2604, A 2656 X Plus, A 2901, MV 3, MV 3 P, SE 4001, SE 4002, WD 3, WD 3 P, WD 3 Premium, WD 3 200, WD 3 300 M, WD 3 500 P, 6.959-130, 6.959.130.0
- **Parkside:** PNTS 1250, PNTS 1300 / A1, PNTS 30/5, PNTS 30/6, PNTS 30 / 6S, PNTS 35/5, PNTS 38
- **Rowenta:** ZR-81, Bully
- **Other Compatible Models:** Swirl Handy Bag R 23 - R23, Bosch Siemens Typ X - W, Einhell, Darel XWDA 150, Calor, Gisowatt, Fakir, Thomas, Shop Vac, Philips, DeLonghi, Goblin.

SETUP: INSTALLING THE VACUUM CLEANER BAG

Follow these steps to correctly install a new vacuum cleaner bag:

1. **Safety First:** Always ensure the vacuum cleaner is unplugged from the power outlet before attempting any installation or maintenance.
2. **Open Compartment:** Open the vacuum cleaner's dust compartment. Refer to your specific vacuum cleaner's user manual for precise instructions on how to access this compartment.
3. **Remove Old Bag:** Carefully remove the old, full dust bag. Dispose of it responsibly according to local waste disposal guidelines.
4. **Prepare New Bag:** Gently unfold a new MohMus Premium vacuum cleaner bag.
5. **Install New Bag:** Align the bag's cardboard collar with the vacuum cleaner's bag holder or inlet nozzle. Push firmly until the bag is securely in place. Ensure there are no gaps around the collar that could allow dust to escape.
6. **Close Compartment:** Close the dust compartment cover securely until it latches.
7. **Ready for Use:** Plug in the vacuum cleaner. It is now ready for operation.

OPERATING: WHEN TO REPLACE THE BAG

For optimal performance and to maintain consistent suction power, replace the vacuum cleaner bag regularly:

- **Fill Level:** Replace the bag when it is approximately two-thirds full. Overfilling can significantly reduce suction power and put unnecessary strain on the vacuum cleaner's motor.
- **Reduced Suction:** If you notice a decrease in suction power, even if the bag does not appear completely full, it may be time for a replacement.
- **Damage:** Replace the bag immediately if it is damaged or torn, as this can lead to dust escaping into the vacuum cleaner's motor or back into your environment.

MAINTENANCE: BAG DISPOSAL

Proper disposal of used vacuum cleaner bags is important for hygiene and to prevent dust re-release:

- **Careful Removal:** When the bag is full, carefully remove it from the vacuum cleaner to prevent dust from escaping.
- **Sealing:** If your vacuum cleaner bag features a self-sealing mechanism on its collar, activate it before removal. If not, you may gently fold and tape the opening to contain dust.
- **Disposal:** Dispose of the sealed bag with your regular household waste, adhering to any local waste management regulations.

TROUBLESHOOTING: COMMON ISSUES

Here are solutions to common issues you might encounter:

Reduced Suction Power

- **Full Bag:** Check if the vacuum cleaner bag is full and replace it if necessary.
- **Improper Installation:** Ensure the bag is correctly installed and securely sealed within the dust compartment.
- **Blockages:** Inspect the vacuum cleaner's hose, filters, and nozzles for any blockages that might be impeding airflow.

Dust Leaking from Vacuum Cleaner

- **Bag Seating:** Verify that the bag is properly seated and that the dust compartment cover is fully closed and latched.
- **Bag Damage:** Check the bag for any tears, punctures, or damage. Replace the bag if it is compromised.

Bag Tearing During Removal

- **Handle Carefully:** Always handle full bags with care, as they can be heavy and more susceptible to tearing.
- **Avoid Overfilling:** Ensure the bag is not overfilled. Replacing the bag when it is two-thirds full reduces stress on the paper material.

SPECIFICATIONS

Brand	MohMus
Model Number	56
Material	Multi-layer Paper
Dimensions (L x W x H)	28 x 19 x 2.3 cm
Item Weight (approx. for 5 bags)	340 g
Quantity per Pack	5

WARRANTY AND CUSTOMER SUPPORT

MohMus Premium Vacuum Cleaner Bags are manufactured to high standards for durability and effective performance. If you encounter any issues or have questions regarding the product, please refer to the troubleshooting section of this manual or contact your retailer for assistance.

Return Policy: A 30-day refund or replacement policy is typically available from the point of purchase. Please consult your specific seller or platform for detailed return and exchange procedures.

Spare Parts: As these are consumable items, specific spare parts information is generally not applicable or available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

