

UrbanX BN59-01175N

UrbanX Universal Remote Control Instruction Manual

For Samsung Smart TVs (Models BN59-01175N, BN59-01199F, AA59-00786A, and Compatible Series)

1. INTRODUCTION

This manual provides instructions for the UrbanX Universal Remote Control, designed as a replacement for various Samsung Smart TV models. This remote offers seamless functionality without requiring complex programming.

Compatible Samsung TV Models include:

- BN59-01175N
- BN59-01199F
- AA59-00741A
- AA59-00786A
- AA59-00602A
- BN59-01247A
- BN59-01175B
- AA59-00818A
- AA59-00603A
- BN59-01199G
- AA59-00622A
- AA59-00496A
- AA59-01180A
- BN59-01268D
- AA59-00666A
- AA59-01289A
- AA59-00600A

- And other similar Samsung Smart TV models.

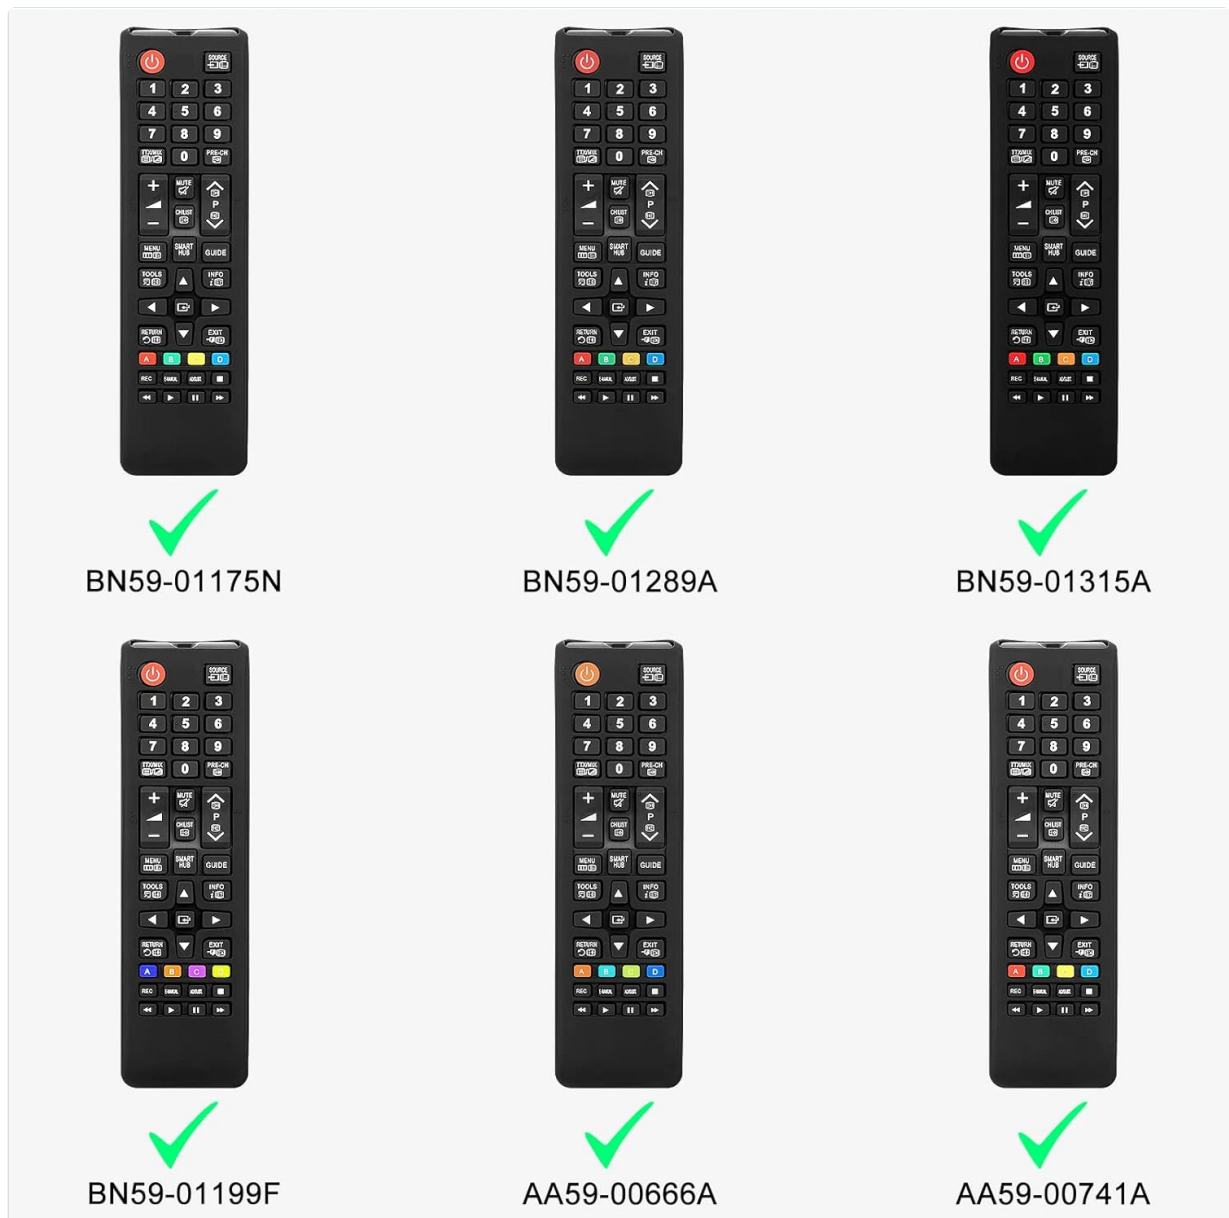


Figure 1: Visual representation of compatible remote control models.

2. PACKAGE CONTENTS

The UrbanX Universal Remote Control package includes the following items:

- 1 x UrbanX Universal Remote Control
- 1 x Silicone Protective Case

Note: 2 AAA batteries are required for operation and are not included in the package. Please purchase them separately.



Figure 2: Contents of the UrbanX Universal Remote Control package.

Premium Silicone



High Flexibility



Non-toxic



Lightweight



Figure 3: Features of the silicone protective case.

3. SETUP

The UrbanX Universal Remote Control is designed for immediate use with compatible Samsung Smart TVs. No programming or complex setup is required.

3.1 Installing Batteries

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA batteries, ensuring correct polarity (+ and -).
4. Close the battery compartment cover securely.

3.2 Attaching the Silicone Protective Case

The included silicone case provides protection and improved grip for your remote control.

1. Gently slide the remote control into the silicone case, starting from the top or bottom.
2. Ensure all buttons align correctly with the case's openings.
3. Verify that the infrared (IR) signal window at the top of the remote is unobstructed by the case.



Figure 4: Detailed view of remote features and case application.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the UrbanX Universal Remote Control is ready to operate your compatible Samsung Smart TV.

4.1 Basic Functions

- **Power Button (●):** Turns the TV on or off.
- **Number Buttons (0-9):** Direct channel selection.
- **Volume Up/Down (+/-):** Adjusts the TV volume.
- **Channel Up/Down (CH +/-):** Changes TV channels.
- **Mute:** Silences the TV audio.
- **Source:** Selects input sources (HDMI, AV, etc.).
- **Menu/Smart Hub/Guide:** Accesses TV menus, Smart Hub, or program guide.
- **Navigation Buttons (Up, Down, Left, Right, Enter):** Navigates through menus and selections.
- **Return/Exit:** Returns to the previous screen or exits a menu.
- **Color Buttons (A, B, C, D):** Used for specific functions within certain applications or menus.

The remote provides stable performance and a farther transmitting distance for reliable operation.

Figure 5: Remote control in use, highlighting ease of setup and stable performance.

4.2 Smart TV Application Access

This remote includes dedicated buttons for popular streaming services, providing quick access to:

- Netflix
- Prime Video
- Hulu
- YouTube
- FreeviewPlay (if applicable to your region/TV model)

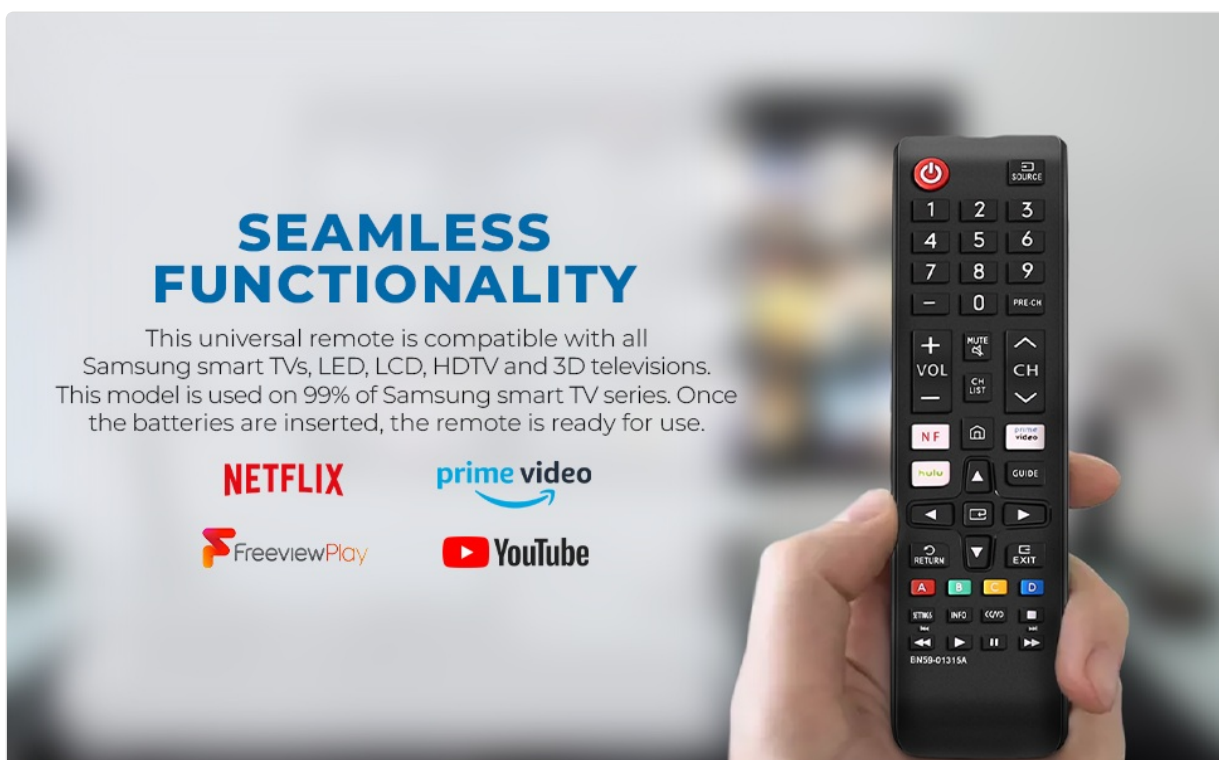


Figure 6: Remote control with quick access buttons for streaming services.

5. MAINTENANCE

5.1 Cleaning

- Wipe the remote control and silicone case with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water. Avoid harsh chemicals or abrasive cleaners.
- Ensure no liquid enters the remote control's internal components.

5.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops functioning. Always replace both AAA batteries simultaneously with new ones.

5.3 Protection and Storage

The included silicone case helps protect the remote from accidental drops and provides a slip-resistant grip.



Figure 7: The silicone case provides protection against drops.
The remote also features an adjustable anti-lost wrist strap to prevent misplacement.



Figure 8: The wrist strap helps prevent losing the remote.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote is not responding.	<ul style="list-style-type: none"> Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote is out of range. 	<ul style="list-style-type: none"> Replace batteries with new AAA batteries, ensuring correct polarity. Remove any objects blocking the line of sight to the TV's IR receiver. Move closer to the TV.
Some buttons are not working.	<ul style="list-style-type: none"> Dirty contacts under the buttons. Remote control damage. 	<ul style="list-style-type: none"> Clean the remote control (refer to Maintenance section). If cleaning does not resolve the issue, the remote may be damaged and require replacement.

Problem	Possible Cause	Solution
Remote works intermittently.	<ul style="list-style-type: none">• Low battery power.• Interference from other electronic devices.	<ul style="list-style-type: none">• Replace batteries.• Ensure no other devices are causing IR interference.

7. SPECIFICATIONS

Feature	Detail
Brand	UrbanX
Model Number	BN59-01175N
Compatible Devices	Samsung Smart TVs (LCD, LED, 3D, HDTV, QLED), Home Theater
Max Number of Supported Devices	1
Special Feature	Universal, No Programming Required
Color	Black
Product Dimensions	2 x 1 x 4 inches (approximately)
Item Weight	3.87 ounces (approximately)
Power Source	2 x AAA Batteries (not included)
Connectivity Technology	Infrared (IR)



Ergonomic



Lightweight



Infrared control



Long-lasting



Functional

REPLACEMENT SMART TV REMOTE CONTROL

Figure 9: Key features of the UrbanX Universal Remote Control.

8. WARRANTY AND SUPPORT

Specific warranty information is not provided in the product details. For warranty claims or technical support, please contact UrbanX customer service through the retailer where the product was purchased. You may also visit the [UrbanX Store on Amazon](#) for additional product information or to contact the seller, UrbanX USA (Seller ID: A2M1DK69L6WDGN).

