

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WORKPRO](#) /

› [WORKPRO 20V Cordless String Trimmer/Edger & Leaf Blower User Manual](#)

WORKPRO B09M3H6LG3

WORKPRO 20V Cordless String Trimmer/Edger & Leaf Blower User Manual

Model: B09M3H6LG3

INTRODUCTION

Thank you for choosing the WORKPRO 20V Cordless String Trimmer/Edger and Leaf Blower combo. This manual provides essential information for the safe operation, assembly, maintenance, and troubleshooting of your new tools. Please read this manual thoroughly before first use and keep it for future reference.



Image: The WORKPRO 20V Cordless String Trimmer/Edger and Leaf Blower, along with their respective batteries, chargers, and trimmer line spools.

SAFETY INFORMATION

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury. This includes,

but is not limited to:

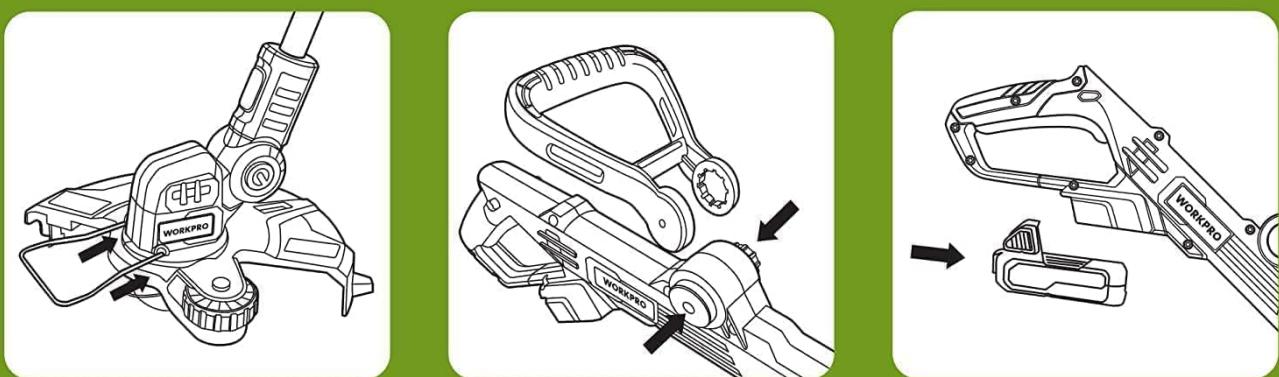
- Read all instructions before operating the tools.
- Wear appropriate personal protective equipment (PPE) such as safety glasses, gloves, and hearing protection.
- Keep children and bystanders away from the operating area.
- Do not operate the tools in wet conditions or in the presence of flammable liquids or gases.
- Ensure the battery is fully charged before use and removed when not in use or during maintenance.
- Inspect the tools for damage before each use. Do not use if damaged.

INSTALLATION DEMONSTRATION



① Press together the nylon line spool and the spool cover

② Mount the protective hood on the motor head and screw



③ Attach the flower guard to the motor housing

④ Mount the auxiliary handle into the operating handle and rotate until it's at the correct angle.

⑤ Slot the battery pack into the device and make sure it clicks into place correctly



WARNING: Please carefully read and understand the operator's manual

Image: A visual guide demonstrating the installation steps for the string trimmer, including attaching the nylon line spool, protective hood, flower guard, auxiliary handle, and inserting the battery pack.

WARNING: Please carefully read and understand the operator's manual before using this product.

PACKAGE CONTENTS

Verify that all items are present in your package:

- WORKPRO 20V Cordless String Trimmer/Edger
- WORKPRO 20V Cordless Leaf Blower
- 20V Li-ion Battery (4.0Ah)
- Battery Charger
- Trimmer Line Spools (pre-installed and/or spare)
- Protective Guard for Trimmer
- Auxiliary Handle for Trimmer
- Operator's Manual

SETUP

1. Battery Charging

Before first use, fully charge the 20V Li-ion battery. Connect the charger to a standard power outlet and insert the battery. The charging indicator light will show the charging status. A full charge typically takes about 1 hour.



**larger battery capacity
no more worries about battery life**

Image: A hand inserting the 20V 4.0Ah battery into the battery slot of the leaf blower, highlighting the larger battery capacity.

2. String Trimmer/Edger Assembly

- 1. Install Trimmer Line Spool:** Press together the nylon line spool and the spool cover, then insert them into the trimmer head.
- 2. Mount Protective Hood:** Mount the protective hood onto the motor head and secure it with screws.
- 3. Attach Flower Guard:** Attach the flower guard to the motor housing.
- 4. Mount Auxiliary Handle:** Mount the auxiliary handle into the operating handle and rotate it until it's at the correct angle for comfortable use.
- 5. Insert Battery:** Slide the charged battery pack into the device until it clicks into place correctly.

INSTALLATION DEMOSTRATION



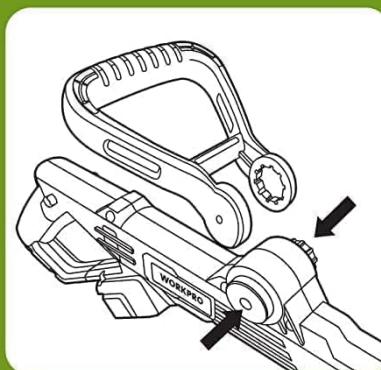
① Press together the nylon line spool and the spool cover




② Mount the protective hood on the motor head and screw



③ Attach the flower guard to the motor housing



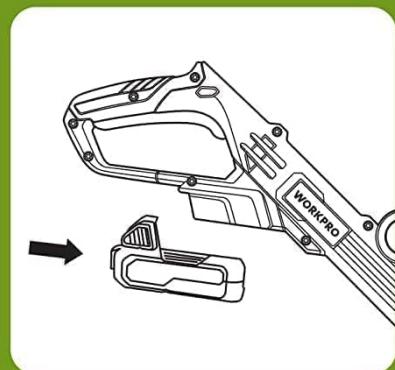④ Mount the auxiliary handle into the operating handle and rotate until it's at the correct angle.



⑤ Slot the battery pack into the device and make sure it clicks into place correctly

⚠ WARNING: Please carefully read and understand the operator's manual

Image: A visual guide demonstrating the installation steps for the string trimmer, including attaching the nylon line spool, protective hood, flower guard, auxiliary handle, and inserting the battery pack.

3. Leaf Blower Assembly

The leaf blower typically requires minimal assembly. Ensure the blower tube is securely attached to the main unit. Press the blower tube release button if needed to install or take apart the tube.

20V Max 4.0Ah Battery
longer battery life for more working

Variable Speed Dial
5 different speeds for different jobs

Ergonomic Grip

Blower Tube Release Button
easy to install or take apart

Hang Hole
perfect for storage
and save space

Scraper
to loosen stubborn debris



LIGHT WEIGHT **CONVENIENT** **LESS NOISE**

Image: A detailed diagram of the leaf blower, pointing out its key features such as the 20V Max 4.0Ah Battery, Variable Speed Dial, Ergonomic Grip, Blower Tube Release Button, Hang Hole, and an integrated Scraper.

OPERATING INSTRUCTIONS

1. String Trimmer/Edger Operation

- Power On/Off:** Press the power button to start or stop the trimmer.
- Adjustable Length:** The telescopic pole can be adjusted for different user heights. Loosen the collar, extend or retract the pole, and then tighten the collar to secure.
- Adjustable Cutting Head:** The cutting head can be adjusted to 90° positions for various tasks like trimming, edging, or light mowing. Press the adjustment button and rotate the head to the desired angle.
- Automatic Feeding Spool:** The innovative push-button spool system feeds line when needed, eliminating the need for bumping. The 12-inch cutting width and 6500 RPM no-load speed ensure efficient trimming.

3-IN-1 VERSATILE FUNCTION

Easily convert to different tools in seconds



Image: The WORKPRO tool demonstrating its 3-in-1 versatility, showing its use as a mower, an edger, and a trimmer for different lawn care needs.



Adjustable Length of Telescopic Pole

Suitable for people of different heights, no need to worry about the length being inappropriate

Image: A visual representation of the string trimmer's adjustable telescopic pole, illustrating its lowest (1-1/2 inch) and highest (11-4/5 inch) settings to accommodate different user heights.



90° Adjustable Positions of Cutting Head

It can be easily set to the most comfortable angle to avoid discomfort.

Image: A diagram illustrating the 90° adjustable positions of the string trimmer's cutting head, allowing for easy setting to the most comfortable angle.

2. Leaf Blower Operation

- **Power On/Off:** Press the power button to start or stop the blower.
- **Variable Speed Dial:** The leaf blower features a 5-speed variable speed dial. Rotate the dial to select the desired airflow for different tasks. Air volume can reach 350 CFM and airspeed 85 MPH, suitable for cleaning leaves in yards, gardens, and drains.
- **Lightweight Design:** Weighing only 5.7 lbs with the large battery, the blower is designed for comfortable one-handed use.



5-speed variable speed dial for plentiful control and versatility

Image: A close-up view of a hand operating the 5-speed variable speed dial on the leaf blower, demonstrating the control and versatility it offers.



Image: A man using the WORKPRO leaf blower to efficiently clear leaves and debris from a concrete sidewalk in a residential area.

MAINTENANCE

- **Cleaning:** After each use, clean the tools with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure no debris is lodged in vents or moving parts.
- **Trimmer Line Replacement:** When the trimmer line is depleted, replace the spool with a new one. Refer to the "Setup" section for spool installation steps. Use only recommended trimmer line (diameter: 1/16 inch).
- **Battery Care:** Store the battery in a cool, dry place away from direct sunlight. Do not store fully discharged. Charge the battery periodically if not used for extended periods.
- **Storage:** Store the tools in a dry, secure location, out of reach of children. The leaf blower has a hang hole for convenient storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Tool does not start.	Battery not charged or not properly inserted.	Ensure battery is fully charged and securely clicked into place.
Trimmer line not feeding.	Spool empty or line tangled.	Replace spool or untangle line. Ensure correct line diameter (1/16 inch).
Reduced power/performance.	Low battery charge or debris obstruction.	Recharge battery. Clear any debris from cutting head or blower nozzle.
Blower not moving air effectively.	Nozzle obstructed or incorrect speed setting.	Check for obstructions in the nozzle. Adjust to a higher speed setting using the variable speed dial.

SPECIFICATIONS

- **Brand:** WORKPRO
- **Model:** B09M3H6LG3
- **Power Source:** Battery Powered (20V Li-ion)
- **Item Weight:** 5.7 Pounds (for blower with large battery)
- **String Trimmer Cutting Width:** 12 Inches
- **String Trimmer Speed:** 6500 RPM (no-load)
- **Leaf Blower Air Volume:** 350 CFM
- **Leaf Blower Airspeed:** 85 MPH
- **Assembly Required:** Yes

WARRANTY AND SUPPORT

WORKPRO products are manufactured to high-quality standards and are warranted against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official WORKPRO website.

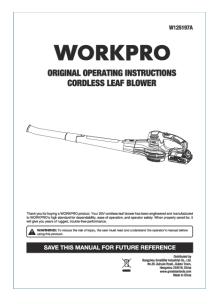
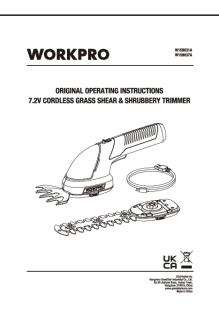
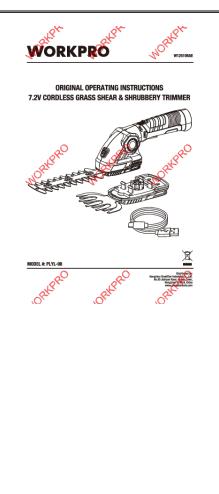
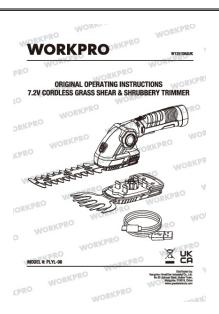
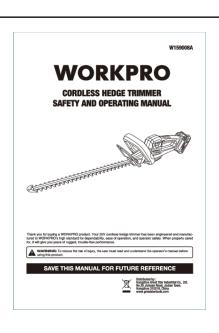
For technical support, replacement parts, or service inquiries, please contact WORKPRO customer service. Contact information can typically be found on the product packaging or the official brand website.

Online Resources:

- Visit the WORKPRO Store on Amazon: [WORKPRO Amazon Store](#)

© 2023 WORKPRO. All rights reserved.

Related Documents - B09M3H6LG3

	<p>WORKPRO Cordless Leaf Blower Operating Instructions and Safety Guide</p> <p>Comprehensive operating instructions and safety guidelines for the WORKPRO 20V Cordless Leaf Blower (Model W125197A). Covers product features, safe operation, maintenance, troubleshooting, and disposal.</p>
	<p>WORKPRO 7.2V Cordless Grass Shear & Shrubbery Trimmer User Manual</p> <p>Comprehensive operating instructions and safety guide for the WORKPRO W159031A and W159037A 7.2V Cordless Grass Shear & Shrubbery Trimmer. Learn about proper use, maintenance, charging, and safety precautions.</p>
	<p>WORKPRO 7.2V Cordless Grass Shear & Shrubbery Trimmer PLYL-98 User Manual</p> <p>Official operating instructions and safety guide for the WORKPRO 7.2V Cordless Grass Shear & Shrubbery Trimmer (Model PLYL-98). Learn about features, maintenance, and safe usage.</p>
	<p>WORKPRO Cordless Grass Shear & Shrubbery Trimmer User Manual</p> <p>Operating instructions for WORKPRO W159030A, W159033A, W159036A cordless grass shear and shrubbery trimmer. Covers safe use, maintenance, and technical details for garden care.</p>
	<p>WORKPRO 7.2V Cordless Grass Shear & Shrubbery Trimmer - Operating Instructions and Safety Guide</p> <p>Official operating instructions and safety guidelines for the WORKPRO 7.2V Cordless Grass Shear & Shrubbery Trimmer, model numbers PLYL-98, PLYL-98A, W125106A, W125106AUK. It covers product features, safety precautions, proper usage, maintenance, technical specifications, and the UKCA Declaration of Conformity.</p>
	<p>WORKPRO W159008A Cordless Hedge Trimmer: Safety and Operating Manual</p> <p>Comprehensive safety and operating manual for the WORKPRO W159008A 20V Cordless Hedge Trimmer. Learn about product features, safe usage, maintenance, and troubleshooting.</p>

