

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [KOMERY](#) /

> [KOMERY Camcorder AF2 User Manual](#)

KOMERY AF2

KOMERY 4K 56MP UHD Camcorder User Manual

Model: AF2 | Brand: KOMERY

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your KOMERY 4K 56MP UHD Camcorder. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience. Keep this manual for future reference.



Image: The KOMERY 4K UHD Video Camera highlighting its key features such as 4K resolution, 56MP photos, PC camera function, 360-degree remote, WiFi, Night Vision, HD output, 18X zoom, Face Detect, Anti-Shake, Touch Screen, and Time-Lapse capabilities.

PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact

customer support.

- KOMERY 4K 56MP UHD Camcorder (AF2)
- External Microphone
- Li-ion Batteries (x3)
- 32GB SD Card
- Lens Hood
- Stabilizer Handle
- Mini Tripod (Sponge Scaffolds)
- 2.4G Remote Control
- USB Cable
- HD Cable (HDMI)
- Camera Bag
- User Manual



Image: The KOMERY camcorder displayed with its full set of accessories, including the external microphone, stabilizer handle, lens hood, remote control, three batteries, 32GB SD card, mini tripod, and cables.

PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your camcorder.

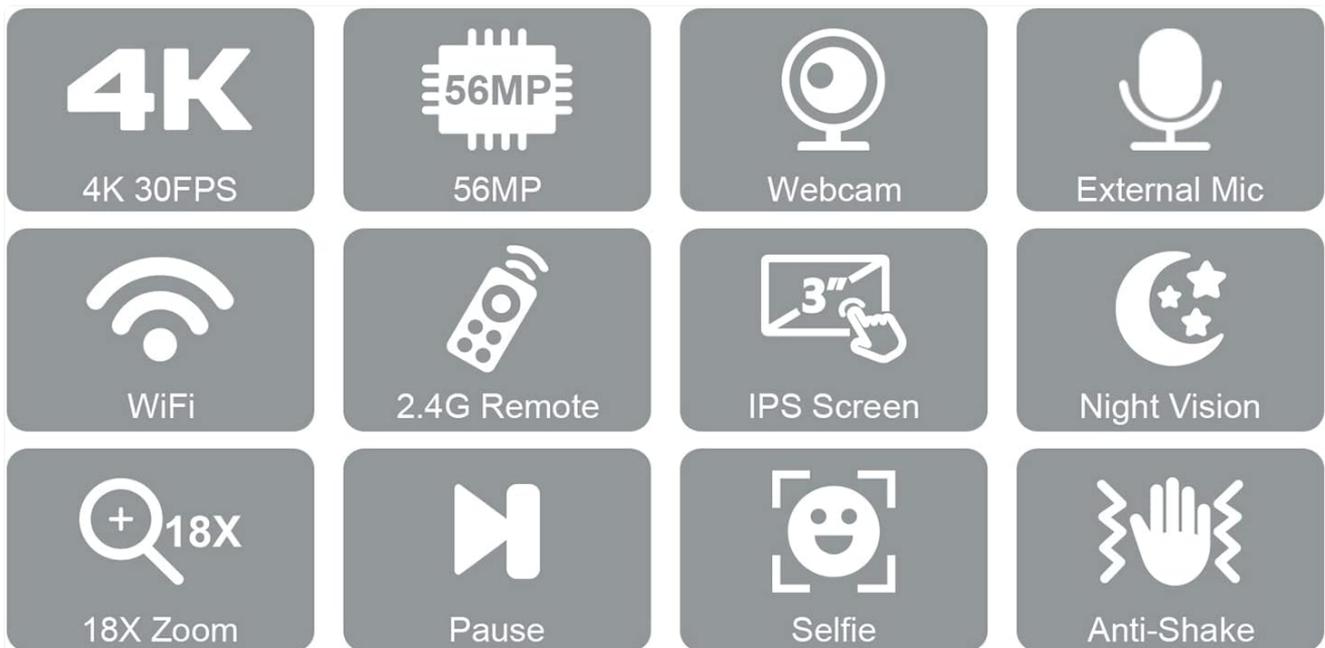


Image: A front view of the KOMERY camcorder with icons illustrating its features: 4K 30FPS, 56MP, Webcam function, External Mic support, WiFi, 2.4G Remote, 3-inch IPS Screen, Night Vision, 18X Digital Zoom, Pause function, Selfie mode, and Anti-Shake stabilization.

SETUP

1. Charging the Battery

Before initial use, fully charge all provided batteries. Connect the camcorder to a power source using the USB cable. The charging indicator will show the charging status.



Image: A comparison of battery specifications, showing the KOMERY NP-40 Li-ion battery pack with 3.8V, 1700mAh capacity, and 6.29Wh.

2. Inserting and Formatting the SD Card

Insert the 32GB SD card into the designated slot. For optimal performance and to prevent recording issues, it is recommended to format the SD card before its first use with the camcorder.

1. Press the **MENU** button.
2. Use the **W/T** button to navigate to the Setup page.
3. Page down to find the **Format** function on the second page.
4. Press **OK** to confirm and complete the formatting process.


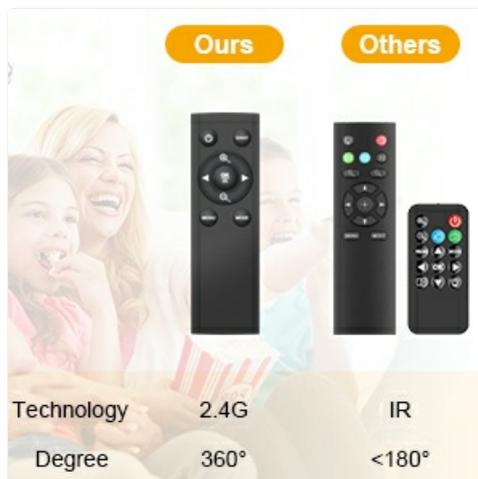


Image: A 32GB SD card shown alongside the camcorder, indicating its inclusion and importance for storage.

3. Attaching External Microphone

Attach the external microphone to the hot shoe mount on top of the camcorder. Ensure it is securely fastened and connected to the microphone input port for enhanced audio recording.

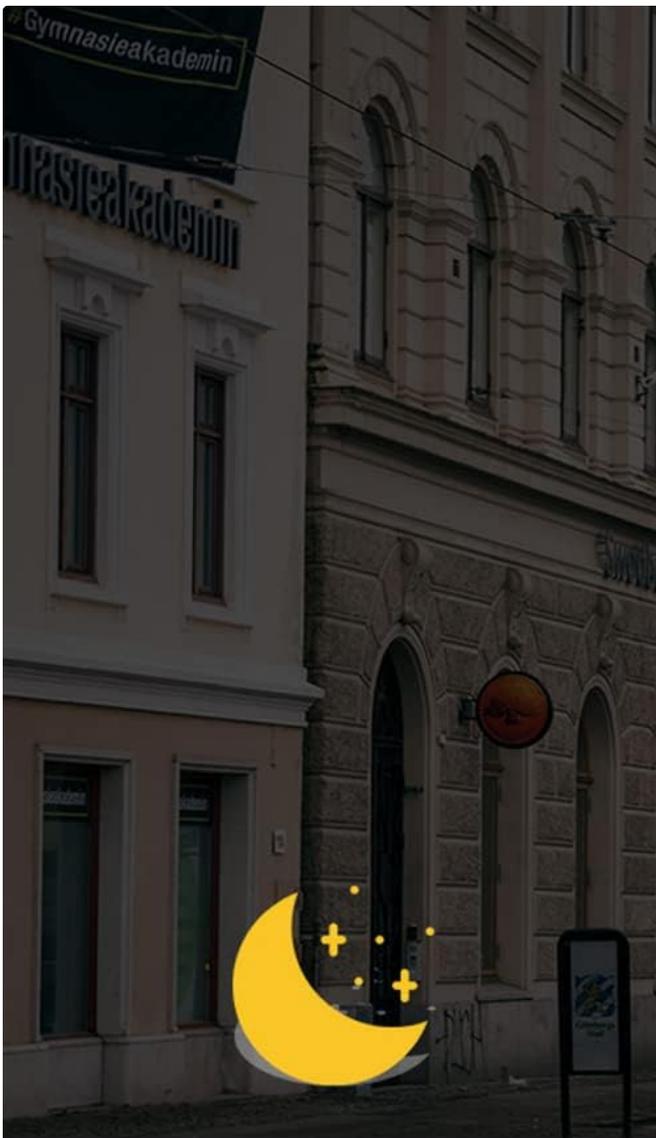

Night Vision



Day Vision

Image: A detailed view of the stereo microphone with its foam windscreen, showing its connection point and hot shoe compatibility. A small LED fill light is shown in the inset, indicating the hot shoe can also be used for other accessories (fill light not included).

4. Attaching Lens Hood and Stabilizer

Attach the lens hood to the front of the lens to reduce glare and protect the lens. The stabilizer handle can be mounted to the bottom of the camcorder for improved grip and stability during handheld recording.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the power button located on the camcorder to turn the device on or off.

2. Recording Video and Taking Photos

Switch between video and photo modes using the mode button. Press the record/shutter button to start/stop video recording or to capture a still image.

3. Zoom Function

Use the W (Wide) and T (Telephoto) buttons to adjust the 18X digital zoom. W zooms out, and T zooms in.

4. Night Vision Mode

Activate the IR Night Vision feature for recording in low-light or dark conditions. Refer to the camcorder's menu settings to enable this function.



Image: A split image demonstrating the difference between Night Vision and Day Vision, showing a city street scene in both dark (moon icon) and daylight (sun icon) conditions.

5. WiFi Connectivity and Remote Control

The camcorder supports WiFi connectivity for remote control via a smartphone application and includes a 2.4G remote control for convenient operation from a distance.

Stereo Microphone with Hot Shoes (Fill light not included)



Image: A scene depicting the use of the 2.4G remote control and a smartphone app to control the camcorder, emphasizing its remote operation capabilities.



Image: A comparison highlighting the 2.4G remote control technology with 360-degree operation, contrasting it with typical IR remotes that have limited angles.

6. Live Streaming

To use your camcorder for live streaming, follow these steps:

1. Connect your camera to the computer using the provided USB cable.
2. Press the **Page Down** button to choose **PC Camera** mode.
3. Press the **MODE/OK** button to confirm. You can then begin live streaming.

Note: For technical reasons, this camcorder does not support live stream on Mac operating systems.



Image: A visual representation of the camcorder connected to a laptop for live streaming, showing a person cooking and being broadcast live.

How to live streaming:

Step 1: Connect your camera to the computer via the provided **USB cable**.

Step 2: Press the Page Down button to choose PC Camera mode.

Step 3: Press the MODE/OK button to confirm, you can go live then. Nothing else is needed.

(Sorry, for technical reasons, this camcorder does not support live stream on Mac)

How long can the battery last?

Some customers said the battery can only last 10 minutes, this only happens that they didn't charge the battery for the first time use. Please fully charge the battery first use.

How to format the SD card?

Please format the SD card for first use. Here is how: Press MENU, then press the W/T button to get into the Setup page, then Page down to find the Format function on the second page, press OK. The format is done.

Why the camcorder can't record consistently?

All the SD cards use the FAT32 format. But there is a feature of FAT32 format: A single FAT32 file cannot exceed 4G, otherwise, it can't be read. The length of each file is determined by the video resolution.

What can I do if the sound is too low?

1. Please fully charge the microphone before use.
2. Please adjust the volume by the W/T button when playback.
3. Please make sure the sound which is to be recorded is normal.
4. Please email us on Amazon, we will give you a solution.

Image: A diagram illustrating the three steps for live streaming: connecting to a computer via USB, selecting PC Camera mode, and going live.

MAINTENANCE

To ensure the longevity and optimal performance of your camcorder, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the camcorder body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials or harsh chemicals.
- **Storage:** Store the camcorder in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Use the provided camera bag for protection during storage and transport.
- **Battery Care:** Remove batteries if the camcorder will not be used for an extended period. Store batteries in a cool, dry place.
- **SD Card Care:** Handle the SD card carefully. Avoid bending or exposing it to static electricity.

TROUBLESHOOTING

This section addresses common issues you might encounter with your camcorder.

What can I do if the picture/video is not normal or the parts are broken?

Such cases may happen occasionally due to transportation. If you had any problems, please let us know and we will give you a solution.

How to contact u*s after placing an order:

1. Go to [Your Orders](#).
2. Find your order in the list.
3. Select **Problem with order**.
4. Choose your topic from list displayed.
5. Select **Contact seller**.

Image: A graphic presenting common troubleshooting questions related to the camcorder's battery life, recording consistency, sound level, and physical condition.

1. How long can the battery last?

Battery life can vary. If you experience short battery life, ensure you fully charge the battery before its first use. Subsequent charges should also be complete for optimal performance.

2. Why the camcorder can't record consistently?

All SD cards used with this camcorder must be in FAT32 format. A single FAT32 file cannot exceed 4GB. If a recording exceeds this limit, it cannot be read. The length of each file is determined by the video resolution. Ensure your recording sessions do not exceed the 4GB file size limit for continuous recording.

3. What can I do if the sound is too low?

1. Fully charge the external microphone before use.
2. Adjust the volume using the **W/T** button during playback.
3. Ensure the sound source being recorded is at a normal level.
4. If issues persist, contact customer support via Amazon for assistance.

4. What can I do if the picture/video is not normal or the parts are broken?

Such cases may occasionally occur due to transportation or manufacturing defects. If you encounter any problems with the picture/video quality or if any parts are broken, please contact us for a solution.

SPECIFICATIONS

Brand	KOMERY
Model Name	AF2
Video Capture Resolution	4K
Flash Memory Type	SD
Supported Audio Format	AAC
Screen Size	3 Inches
Connectivity Technology	Infrared, Wi-Fi
Special Features	Lightweight, Infrared, Anti-Shake
Lens Type	Zoom
Water Resistance Level	Not Water Resistant
Item Weight	2.31 pounds
Package Dimensions	7.83 x 6.3 x 3.98 inches



Image: A visual comparison demonstrating the difference in clarity and detail between 1080P, 2.7K, and 4K video resolutions, highlighting the superior quality of 4K.

WARRANTY AND SUPPORT

KOMERY is committed to providing excellent customer service. If you have any questions, concerns, or require support for your product, please contact us directly through Amazon.

How to contact us after placing an order:

1. Go to your [Your Orders](#) page on Amazon.
2. Find your order for the KOMERY Camcorder in the list.
3. Select **Problem with order**.
4. Choose your topic from the displayed list.
5. Select **Contact seller** to send us a message.

We aim to provide a reply within 12 hours to assist you with any inquiries or issues.



Image: Customer service representatives with headsets, symbolizing the support available for product inquiries.

