

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Burton](#) /

› [Burton Men's Winter Shelter Three-in-one Top User Manual](#)

Burton 234001

Burton Men's Winter Shelter Three-in-one Top User Manual

Model: 234001

INTRODUCTION

The Burton Men's Winter Shelter Three-in-one Top is a versatile outerwear system designed for adaptable warmth and protection in varying winter conditions. It consists of an outer shell jacket and an inner insulated vest, which can be worn together or separately.

PRODUCT COMPONENTS

- **Outer Shell Jacket:** A durable, weather-resistant jacket with a full-button front and a zippered chest pocket.
- **Inner Insulated Vest:** A lightweight, quilted vest designed to provide additional warmth.



Image 1: Front view of the Burton Men's Winter Shelter Three-in-one Top in Calla Green. Shows the outer shell jacket with button closure and chest pocket.





Image 2: Back view of the Burton Men's Winter Shelter Three-in-one Top in Calla Green, illustrating the garment's rear design.





Image 3: Front view of the inner insulated vest component in black, which can be worn separately or integrated into the outer jacket.



Image 4: Detail illustrating the attachment points for securing the inner insulated vest to the outer shell jacket.

SETUP AND CONFIGURATION

Wearing as a Three-in-one System:

1. Lay the outer shell jacket flat with the inside facing up.
2. Align the inner insulated vest with the outer jacket. The vest typically has loops or snaps that correspond to attachment points inside the jacket's collar and cuffs.
3. Secure the vest to the jacket using the designated attachment points. This ensures the vest stays in place when worn.
4. Once attached, the two pieces function as a single, integrated garment.

Wearing Components Separately:

- **Outer Shell Jacket:** Can be worn alone as a lightweight, weather-resistant layer.
- **Inner Insulated Vest:** Can be worn alone for core warmth in milder conditions or as a mid-layer under other outerwear.

OPERATING INSTRUCTIONS

The Burton Winter Shelter Three-in-one Top is designed for ease of use in various outdoor activities. Its primary function is to provide adaptable warmth and protection.

Adjustments:

- **Cuff Closures:** The outer jacket features adjustable cuffs, typically with snap or button closures, to seal out cold and moisture.
- **Pockets:** Utilize the various pockets for storing small essentials. The outer jacket includes a zippered chest pocket for secure storage.

Maintenance and Care

Proper care will extend the life and performance of your Burton Winter Shelter Three-in-one Top. Always refer to the care label inside the garment for specific instructions.

General Care:

- **Machine Wash:** Wash in cold water on a gentle cycle with similar colors.
- **Detergent:** Use a mild detergent. Avoid bleach or fabric softeners, as these can damage the fabric's water-resistant properties.
- **Drying:** Tumble dry on low heat or hang to dry. Avoid high heat, which can damage synthetic fibers.
- **Ironing:** Do not iron.
- **Storage:** Store in a cool, dry place away from direct sunlight when not in use.

Troubleshooting

This section addresses common questions and minor issues you might encounter with your product.

Issue: Garment feels less warm than expected.

- **Solution:** Ensure both the outer jacket and inner vest are worn together for maximum insulation. Check that the vest is properly attached to the jacket. Consider layering additional base layers underneath for extreme cold.

Issue: Fabric appears to be losing water repellency.

- **Solution:** The outer fabric may require re-treatment with a Durable Water Repellent (DWR) spray after extended use and washing. Follow the instructions on a reputable DWR product designed for technical outerwear.

Specifications

Feature	Detail
Model Number	234001
Brand	Burton
Department	Men's
Fabric Type	100% Polyester
Origin	Imported
Care Instructions	Machine Wash
First Available Date	November 17, 2021

Sizing Information (US Regular)

Brand Size	Chest (in)	Waist (in)	Sleeve Length (in)
XXS	32 - 34	27 - 29	32
XS	34 - 36.5	29 - 31	32 - 32.5
S	36.5 - 39	31 - 33	32.5 - 33
M	39 - 41	33 - 35	33
L	41 - 43	35 - 37	33.5
XL	43 - 46	37 - 40	33.5 - 34
XXL	46 - 50	40 - 44	34 - 35
3XL	50 - 54	44 - 51	35

WARRANTY AND SUPPORT

For information regarding product warranty, returns, or additional support, please refer to the official Burton website or contact their customer service directly.

While specific warranty details are not provided in this manual, Burton typically offers a limited lifetime warranty on many of its products, covering defects in materials and workmanship.

Online Support: [Visit Burton Support](#)