

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [eleror](#) /
- > [eleror Pro X6s Invisible Wireless Earbuds User Manual](#)

eleror Pro X6s

eleror Pro X6s Invisible Wireless Earbuds User Manual

Model: Pro X6s

INTRODUCTION

Thank you for choosing the eleror Pro X6s Invisible Wireless Earbuds. This manual provides detailed instructions for setting up, operating, and maintaining your earbuds to ensure optimal performance and longevity. Please read this manual thoroughly before use.



Image: The eleror Pro X6s Invisible Wireless Earbuds and their compact charging case.

PACKAGE CONTENTS

Ensure all items are present in the package:

- eleror Pro X6s Invisible Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- Ear Cushions (various sizes)
- User Manual (this document)

PRODUCT OVERVIEW

The eleror Pro X6s earbuds are designed for discreet and comfortable listening. They feature a semi-in-ear design, Bluetooth 5.0 connectivity, and touch controls.



Image: Earbud dimensions (19mm x 16mm) shown next to a penny for scale, highlighting their compact size.



Image: A close-up of an earbud comfortably seated in an ear canal, demonstrating its discreet fit.

SETUP

1. Initial Charging

Before first use, fully charge the earbuds and charging case.

1. Place both earbuds into the charging case.
2. Close the charging case lid.
3. Connect the USB charging cable to the charging port on the case and to a power source.
4. Allow approximately 1 hour for a full charge. The indicator lights on the case will show charging status.



Image: Visual instructions for initial charging, wearing the earbuds, and touch controls.

2. Bluetooth Pairing

To connect your earbuds to a device:

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode (indicator lights will flash).
3. On your device (smartphone, tablet, laptop), enable Bluetooth.
4. Search for "Pro X6s" in the list of available Bluetooth devices.
5. Select "Pro X6s" to connect. Once connected, the earbud indicator lights will stop flashing.
6. If pairing fails, place the earbuds back in the case, close the lid, wait a few seconds, and repeat the steps.



Image: Diagram illustrating Bluetooth 5.0 technology, emphasizing low power consumption, instant response, and stable transmission.

OPERATING INSTRUCTIONS

1. Wearing the Earbuds

For optimal sound quality and comfort:

1. Identify the Left (L) and Right (R) earbuds.
2. Gently insert each earbud into your ear canal.
3. Rotate the earbud slightly until it feels secure and comfortable. The semi-in-ear design should sit snugly without causing pressure.

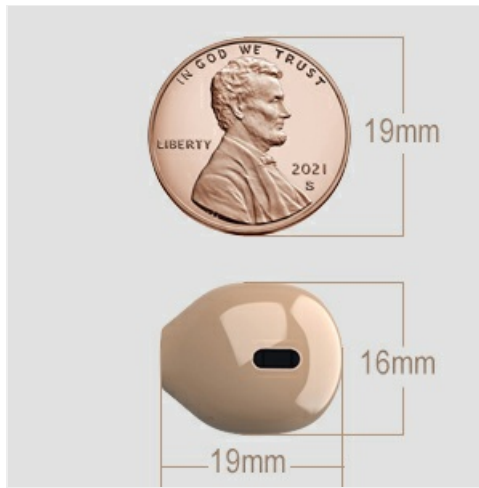 


Image: A close-up showing the correct placement of the earbud in the ear for a secure and discreet fit.

2. Touch Controls

The eleror Pro X6s earbuds feature intuitive touch controls. The control functions are generally mirrored on both earbuds unless specified.

Touch Control Functions

Action	Function (Left Earbud)	Function (Right Earbud)
Tap Once	Answer/End Call, Play/Pause Music	Answer/End Call, Play/Pause Music
Tap Twice	Volume Down	Volume Up
Tap Triple	Previous Track	Next Track
Press and Hold (2 seconds)	Reject Call, Activate Voice Assistant	Reject Call, Activate Voice Assistant
Tap Triple (when disconnected)	Reset Earbud	Reset Earbud

Pro X6s



Image: A visual guide to the touch control functions for answering calls, playing/pausing music, skipping tracks, and activating voice assistant.

3. Power On/Off

- **Power On:** Open the charging case, or take the earbuds out of the case. They will automatically power on.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging.

MAINTENANCE

1. Cleaning

- Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Gently clean the ear tips and speaker mesh to remove any earwax or debris.

2. Storage

- When not in use, store the earbuds in their charging case to protect them and keep them charged.
- Store in a cool, dry place, away from extreme temperatures and direct sunlight.

3. Water Resistance (IPX5)

The earbuds are rated IPX5 water resistant, meaning they can resist splashes and sweat. They are not designed for submersion in water or for use during swimming. Ensure earbuds are dry before placing them back in the charging case.



Image: Earbuds shown with water splashing, illustrating their IPX5 water resistance against sweat and light rain.

TROUBLESHOOTING

Common Issues and Solutions


Problem	Possible Cause	Solution
Earbuds not pairing	Low battery, out of range, pairing mode not active, previous connection issue.	<ul style="list-style-type: none"> ◦ Ensure earbuds are charged. ◦ Place earbuds back in case, close lid, then open to re-enter pairing mode. ◦ Ensure device Bluetooth is on and within 15 meters. ◦ Forget "Pro X6s" from your device's Bluetooth list and try pairing again.
Only one earbud working	Earbuds not properly connected to each other or one is not charged.	<ul style="list-style-type: none"> ◦ Ensure both earbuds are charged. ◦ Place both earbuds back in the charging case, close the lid, then open them again to force re-connection. ◦ Perform a factory reset (Tap Triple when disconnected).
Low volume or poor sound quality	Earbuds not seated correctly, ear tips dirty, device volume low.	<ul style="list-style-type: none"> ◦ Adjust earbud position for a secure fit. ◦ Clean ear tips and speaker mesh. ◦ Increase volume on both your device and the earbuds (Tap Twice on right earbud).
Earbuds not charging	Charging cable issue, dirty charging contacts, case low on battery.	<ul style="list-style-type: none"> ◦ Ensure the charging cable is securely connected. ◦ Try a different USB charging cable and power adapter. ◦ Clean the charging contacts on both the earbuds and the case with a dry cotton swab. ◦ Ensure the charging case itself has sufficient battery.

SPECIFICATIONS


Feature	Detail
Model Name	Pro X6s
Bluetooth Version	5.0
Wireless Range	Up to 15 meters (49 feet)
Battery Life (Earbuds)	Up to 6 hours per charge
Total Battery Life (with Case)	Up to 24 hours
Charging Time	Approximately 1 hour
Water Resistance Rating	IPX5 (splash and sweat resistant)
Earbud Weight	3 grams (each)
Charging Case Weight	34 grams
Frequency Response	20 Hz - 20 kHz
Sensitivity	16 dB
Impedance	16 Ohm
Control Method	Touch
Earpiece Shape	Half In-Ear

1. Before Use

 Take the earbuds out, put them back in the case, close the lid, and charge it for 10 minutes

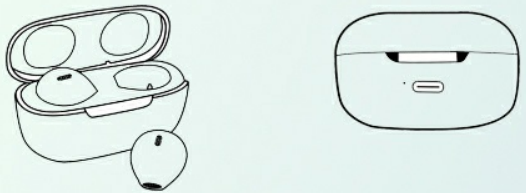

 3. How to Control

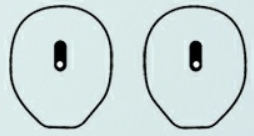

Tap Triple	▶	◀	Tap Triple
Tap Once	📶	📶	Tap Once
Press and Hold for 2 seconds	📶	📶	Press and Hold for 2 seconds
Tap Triple (when disconnected)	Reset	Reset	Tap Triple (When disconnected)
Tap Twice	🔊	🔊	Tap Twice

2. How to Wear

Place the earbuds in your ear canal and rotate to lock




Image: Graphic illustrating the battery life of up to 6 hours per charge for the earbuds and up to 24 hours total with the charging case.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your

purchase or visit the official eleror website. Keep your proof of purchase for warranty claims.