



[Manuals.plus](#) /

> [GOCHANGE](#) /

> GOCHANGE 13-inch Classroom Political Globe User Manual - Model GOCHANGEWG1

GOCHANGE GOCHANGEWG1

GOCHANGE 13-inch Classroom Political Globe User Manual

Model: GOCHANGEWG1

1. INTRODUCTION

Welcome to the GOCHANGE 13-inch Classroom Political Globe user manual. This guide provides essential information for the proper setup, operation, and maintenance of your new educational globe. Please read these instructions carefully to ensure optimal use and longevity of your product.

2. PRODUCT OVERVIEW

The GOCHANGE Classroom Political Globe is designed as an interactive teaching tool, featuring a detailed political map and a writable surface. Its robust construction ensures durability for educational environments.

Key Features:

- **HD Waterproof Film:** Allows for marking and easy cleaning.
- **360° Rotation:** Enables comprehensive exploration of geographical regions.
- **Clear Political Map:** Displays countries, capitals, major cities, oceans, and geographical features.
- **Durable Construction:** Made from high-quality ABS plastic for longevity.
- **Lightweight Design:** Easy to handle and move.



Figure 2.1: The GOCHANGE 13-inch Classroom Political Globe. This image shows the complete globe with its blue oceans and multi-colored landmasses, mounted on a black stand.

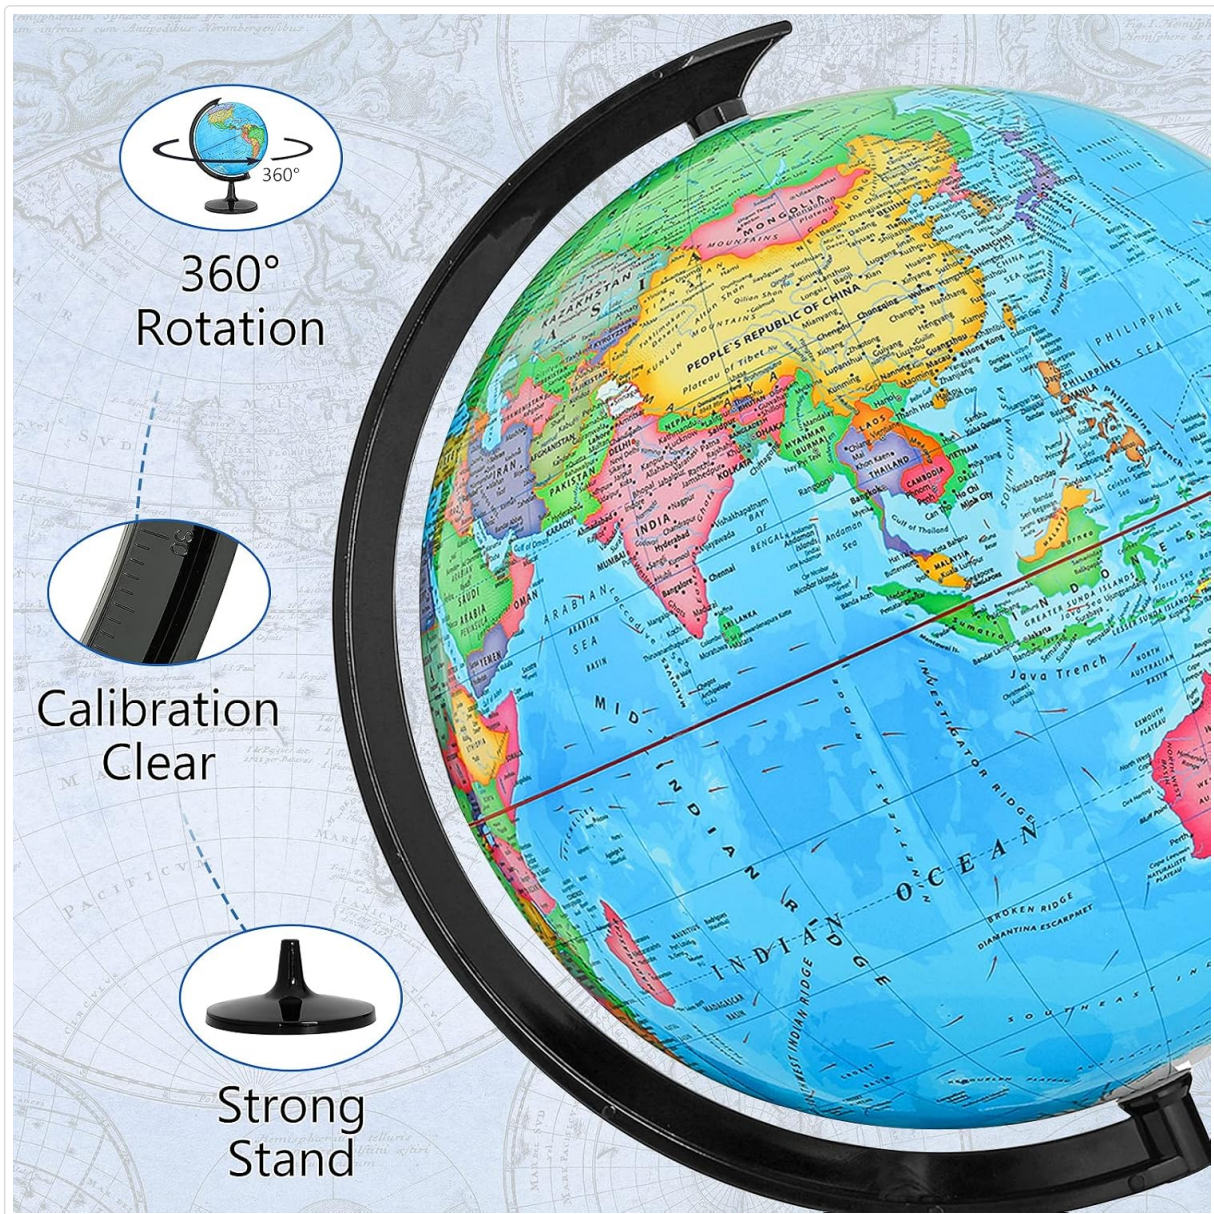


Figure 2.2: Key features of the globe, including 360-degree rotation, clear calibration markings on the meridian, and the sturdy black base for stability.

3. SETUP AND ASSEMBLY

The GOCHANGE globe requires minimal assembly. Follow these steps to set up your globe:

1. Unpack all components: the globe sphere, the meridian (arc), and the base.
2. Align the cross buckle on the bottom of the globe sphere with the buckle on the top of the base.
3. Gently push the globe sphere onto the base until it clicks securely into place.
4. Ensure the globe can rotate freely within the meridian.



Figure 3.1: Assembly steps for the GOCHANGE globe. This diagram illustrates how to connect the globe sphere to its stand, ensuring proper alignment and rotation.

4. OPERATING INSTRUCTIONS

4.1. 360° Rotation

The globe is designed to spin 360 degrees on its axis, allowing for easy viewing of all geographical areas. Gently rotate the globe with your hand to explore different continents, oceans, and countries.

4.2. Writable Surface

The globe features an HD waterproof film surface that is writable and erasable. Use dry-erase markers (not included) to mark or highlight specific locations, such as country capitals, significant cities, or geographical features. This feature enhances interactive learning and memory retention.



Figure 4.1: The GOCHANGE globe in an educational setting. A teacher is shown interacting with students, using the globe as a visual aid for learning geography.

5. MAINTENANCE

5.1. Cleaning and Care

To clean the writable surface, use a soft, damp cloth to wipe away any dry-erase marker markings. For general cleaning of the globe and base, use a soft, dry cloth. Avoid abrasive cleaners or solvents, as these may damage the surface or printed map details. Ensure the globe is dry before storing or using again.

6. TROUBLESHOOTING

If you encounter any issues with your GOCHANGE globe, please refer to the following common solutions:

- **Markings not erasing completely:** Ensure you are using dry-erase markers. For stubborn marks, a small amount of rubbing alcohol on a soft cloth can be used, followed by wiping with a damp cloth.
- **Globe not spinning smoothly:** Check for any debris or obstructions around the axis points. Ensure the globe is correctly seated in its base as per assembly instructions.
- **Globe feels unstable:** Verify that the base is placed on a flat, stable surface. Re-check the assembly to ensure the globe is securely attached to the base.

7. SPECIFICATIONS

Detailed technical specifications for the GOCHANGE 13-inch Classroom Political Globe:

Feature	Detail
Brand	GOCHANGE
Model Number	GOCHANGEWG1
Item Diameter	13 Inches
Full Length (Height)	19.7 Inches (approximate, based on product title)
Item Weight	3.29 pounds
Color	Blue
Material	ABS Plastic; HD Waterproof Film
Map Type	Political Globe
Base Material	ABS Plastic
UPC	681541242175



Figure 7.1: Dimensions of the GOCHANGE globe. This image provides a visual representation of the globe's 13-inch diameter and its overall height of approximately 19.5 inches.

8. WARRANTY AND SUPPORT

GOCHANGE products are manufactured to high-quality standards. For information regarding warranty coverage, product support, or to report any issues, please refer to the contact information provided with your purchase or visit the official GOCHANGE website. Please retain your proof of purchase for warranty claims.