

[Manuals.plus](#) /

› [eleror](#) /

› eleror Pro X6s Mini Bluetooth Earbuds User Manual

eleror Pro X6s

eleror Pro X6s Mini Bluetooth Earbuds User Manual

Model: Pro X6s

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your eleror Pro X6s Mini Bluetooth Earbuds. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

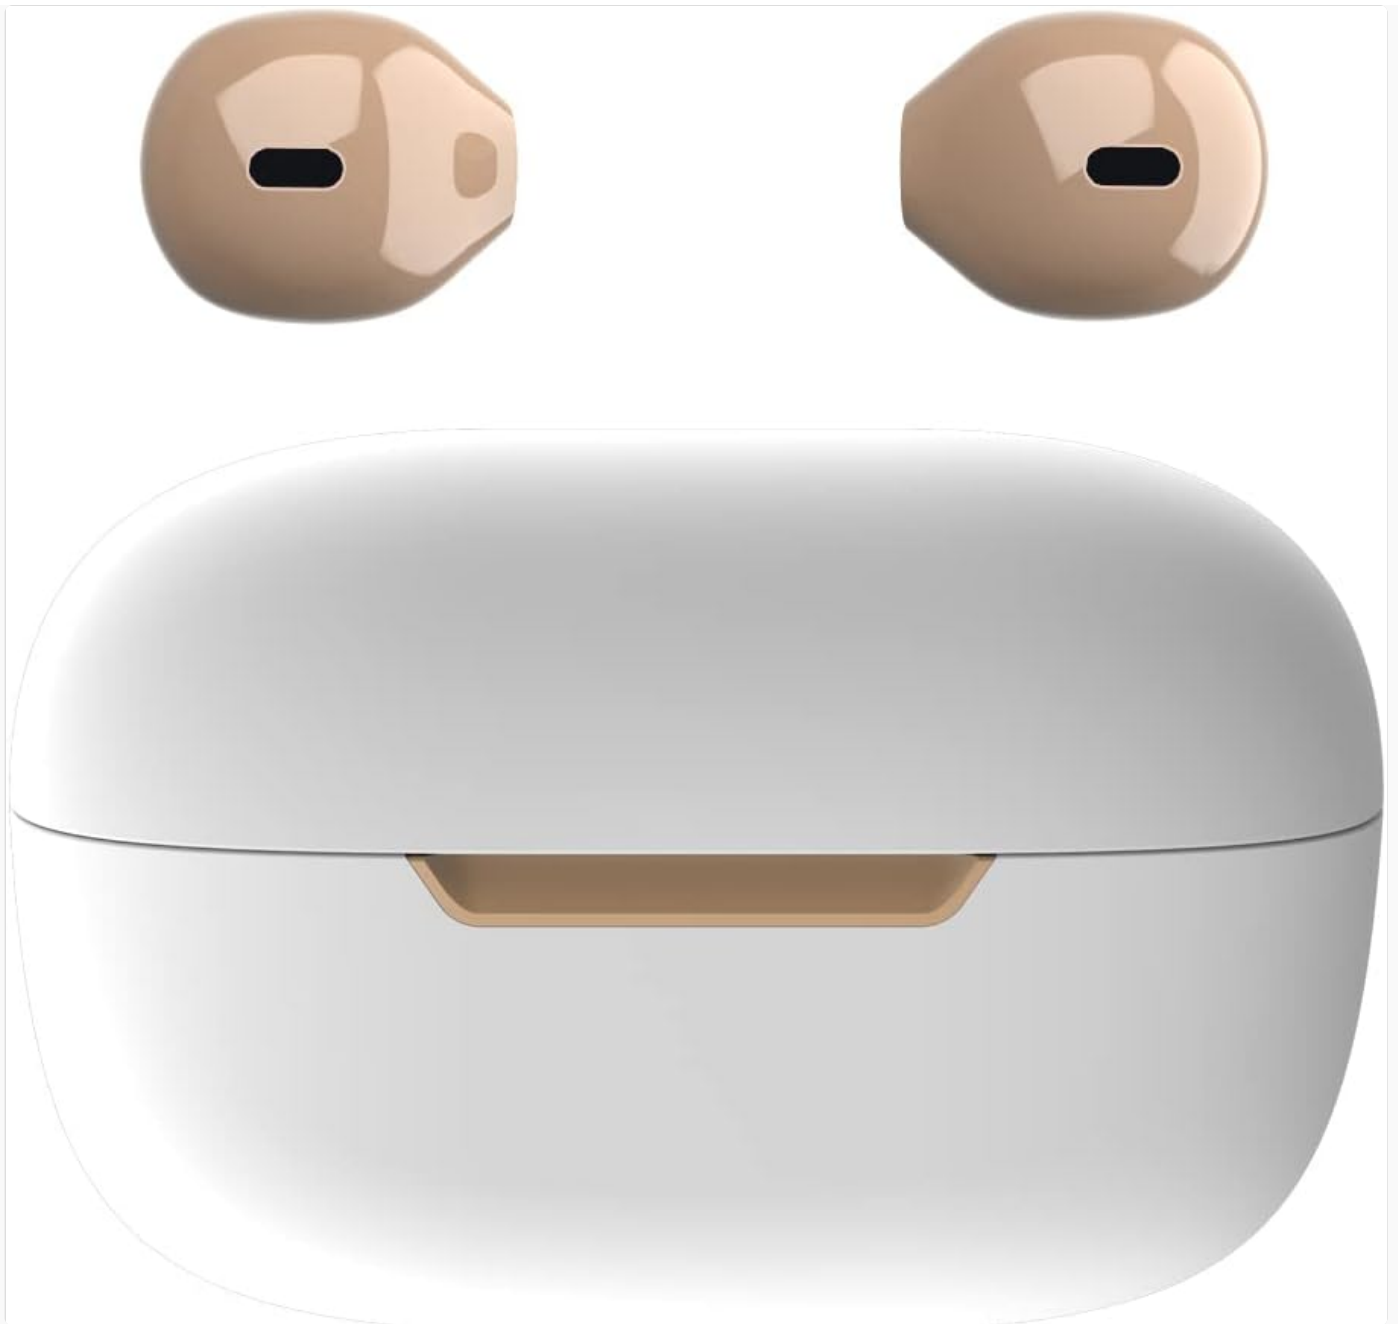


Image: eleror Pro X6s Mini Bluetooth Earbuds and their charging case. The earbuds are small and nude-colored, designed for a discreet fit.

PACKAGE CONTENTS

Ensure all items are present in the package:

- eleror Pro X6s Mini Bluetooth Earbuds (Left and Right)
- Portable Charging Case
- USB Type-C Charging Cable
- User Manual (this document)

SETUP

1. Initial Charge

Before first use, place both earbuds into the charging case. Close the lid and connect the charging case to a power source using the provided USB Type-C cable. Charge for at least 10 minutes to activate the earbuds and ensure

sufficient power for initial pairing.



Image: Step 1 of the setup process, illustrating placing earbuds into the charging case and connecting the case for charging.

2. **How to Wear**

Gently place the earbud into your ear canal. Rotate it slightly until it feels secure and comfortable. The semi-in-ear design ensures a snug fit without deep insertion.




Image: Step 2 of the setup process, demonstrating the correct way to insert and secure the earbud in the ear.

The earbuds feature an ambidextrous shape, allowing either earbud to be used in either ear for mono mode. This

provides flexibility for single-ear use during activities like driving or working.



Light Weight 2.7g

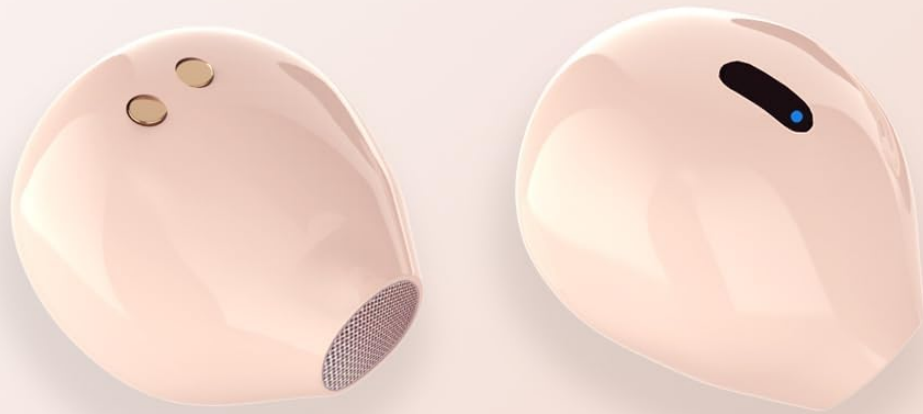

Semi In-Ear Design
No hangy-down part
L & R Ambidextrous shape, Interchangeable Wear

Image: Close-up of two eleror Pro X6s earbuds, highlighting their lightweight (2.7g) and semi-in-ear design, which allows for interchangeable wear in either ear.

3. **Bluetooth Pairing**

After initial charging, open the charging case. The earbuds will automatically enter pairing mode. On your device (smartphone, tablet, laptop), go to Bluetooth settings and select "Pro X6s" from the list of available devices. Once connected, you will hear a confirmation tone.

OPERATING INSTRUCTIONS

Touch Controls

The eleror Pro X6s earbuds feature intuitive touch controls. Refer to the diagram below for specific functions:



Image: Step 3 of the instruction manual, detailing touch control functions for answering/rejecting calls, playing/pausing music, skipping tracks, and resetting the earbuds.

- **Play/Pause:** Tap once on either earbud.
- **Answer/End Call:** Tap once on either earbud.
- **Reject Call:** Press and hold either earbud for 2 seconds.
- **Next Track:** Triple tap the right earbud.
- **Previous Track:** Triple tap the left earbud.
- **Volume Control:** Tap twice on either earbud (functionality may vary by device).
- **Voice Assistant:** Tap twice on either earbud (functionality may vary by device).
- **Reset:** Triple tap either earbud when disconnected.

Battery Life

The earbuds provide up to 5 hours of continuous music playback on a single charge. The portable charging case offers an additional 2 full recharges, extending the total battery life to approximately 20 hours.



6Hours
Per Charge



24Hours
Total battery life
3 Extra Charges for Earbuds



Image: Graphic illustrating 6 hours of battery life per earbud charge and 24 hours total with the charging case, including 3 extra charges.

Water Resistance (IPX5)

The Pro X6s earbuds are rated IPX5 water-resistant, meaning they are protected against low-pressure water jets from any direction. This makes them suitable for use during workouts, light rain, or when exposed to sweat. **Note:** IPX5 rating does not mean they can be submerged in water.

IPX5 Waterproof

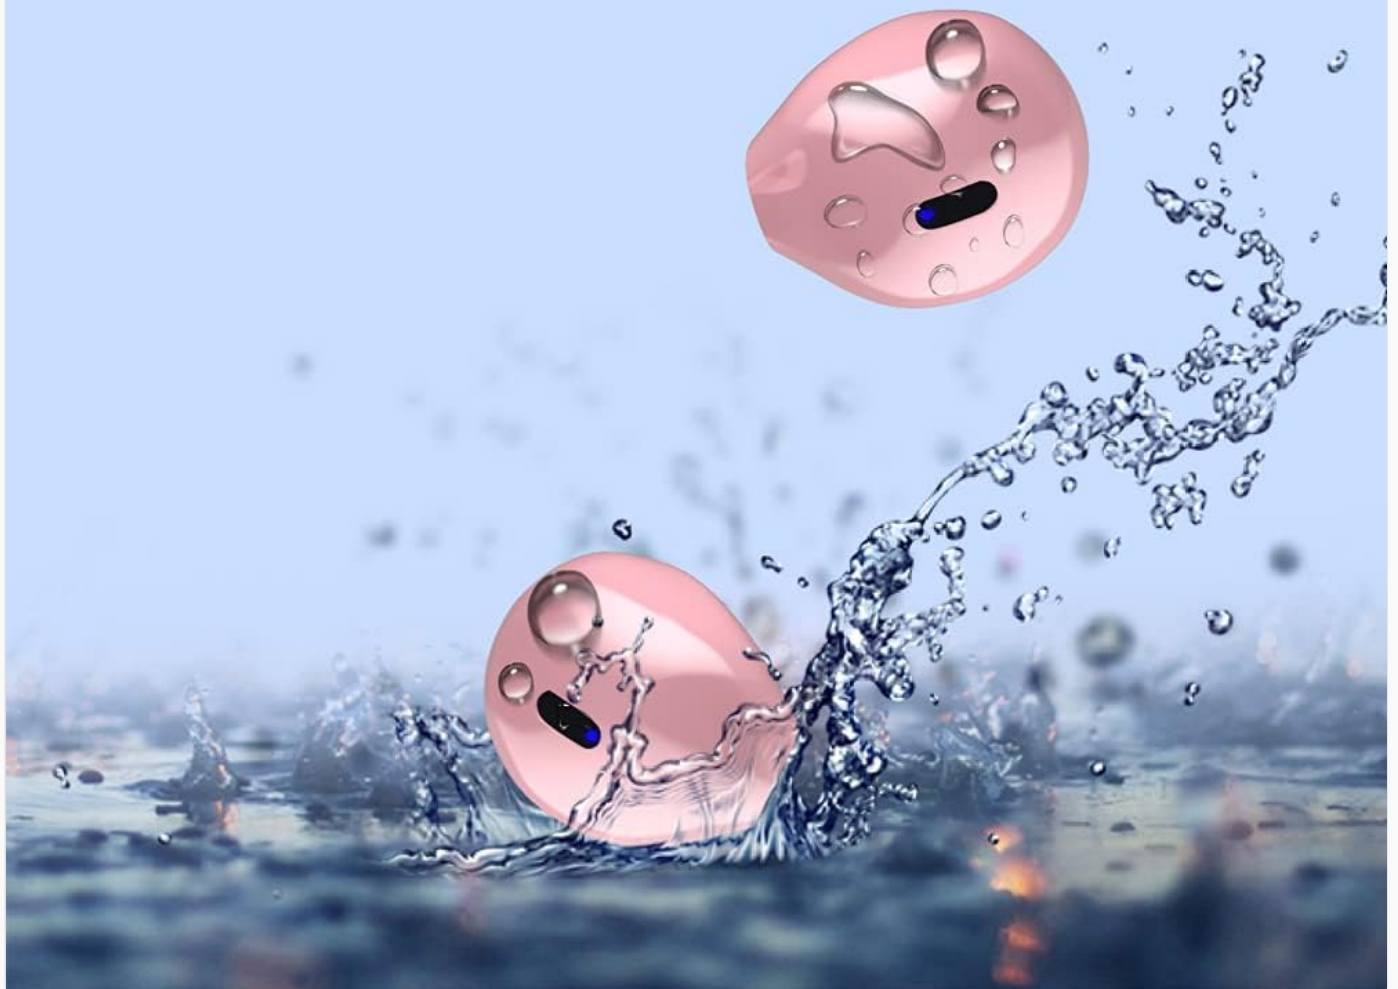


Image: Visual representation of the IPX5 waterproof feature, showing earbuds being splashed with water.

MAINTENANCE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Avoid using abrasive materials or harsh chemicals.
- **Charging Ports:** Ensure the USB-C charging port on the case is free from dust and debris.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.
- **Water Exposure:** While IPX5 rated, avoid prolonged exposure to water or submersion. If they get wet, dry them thoroughly before placing them back in the charging case or using them.

TROUBLESHOOTING

- **Earbuds not pairing with device:**

- a. Ensure earbuds are charged.
- b. Turn off Bluetooth on your device and turn it back on.
- c. Forget "Pro X6s" from your device's Bluetooth list and attempt to pair again.
- d. Place earbuds back in the case, close the lid, wait 5 seconds, then open the lid and try pairing.
- e. Perform a reset (triple tap either earbud when disconnected).

• **Only one earbud working:**

- a. Ensure both earbuds are charged.
- b. Place both earbuds back into the charging case, close the lid, and then open it again. This should re-sync them.
- c. If the issue persists, try resetting the earbuds as described above.

• **Low volume or poor sound quality:**

- a. Adjust the volume on both your device and the earbuds.
- b. Ensure the earbuds are properly seated in your ears.
- c. Clean any debris from the earbud speakers.
- d. Try playing audio from a different source or application.

• **Charging case not charging:**

- a. Ensure the USB-C cable is securely connected to both the case and the power source.
- b. Try a different USB-C cable or power adapter.
- c. Check the charging port for any obstructions.

SPECIFICATIONS

Feature	Detail
Model Name	Pro X6s
Brand	eleror
Connectivity Technology	Wireless (Bluetooth 5.0)
Bluetooth Range	15 Meters
Ear Placement	In Ear (Semi-in-Ear)
Control Type	Touch Control
Water Resistance Level	IPX5 (Waterproof)
Earbud Weight	3 Grams (0.106 ounces)
Earbud Battery Life	Up to 5 hours (continuous playback)
Total Battery Life (with case)	Up to 20 hours
Charging Time	1 Hour (earbuds)
Frequency Response	20 Hz - 20 kHz
Sensitivity	102 dB

Impedance	16 Ohm
Included Components	Cable, Charging Station, User Manual

WARRANTY INFORMATION

eleror products are covered by a manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your product or contact eleror customer support.

CUSTOMER SUPPORT

For further assistance, technical support, or inquiries, please visit the official eleror store or contact their customer service department.

Visit the eleror
Store

© 2025 eleror. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

