

Manuals.plus /

› PORTER-CABLE /

› Porter Cable OEM Dust Bag Instruction Manual

## PORTER-CABLE A23158

# Instruction Manual

## PORTER CABLE OEM DUST BAG

Model: A23158

### Introduction

This manual provides essential information for the proper installation, operation, and maintenance of your Porter Cable OEM Dust Bag, part number A23158. This genuine replacement part is designed to effectively collect dust and debris generated during sanding operations, ensuring a cleaner work environment and prolonging the life of your sander.

### Key Features

- Genuine OEM Porter Cable replacement part.
- Designed for effective dust collection.
- Durable construction for extended use.
- Measures approximately 9.00 x 3.15 x 1.70 inches.

### Compatibility

This dust bag (part number A23158) is compatible with the following Porter Cable sander models:

- 352 Type 5
- 352VS Type 5, 352VS Type 6, 352VS Type 7, 352VS Type 8
- 360 Type 10, 360 Type 11, 360 Type 8, 360 Type 9
- 360VS Type 10, 360VS Type 11, 360VS Type 8, 360VS Type 9
- 362 Type 10, 362 Type 11, 362 Type 9
- 362V Type 10, 362V Type 11, 362V Type 9
- 363 Type 10, 363 Type 8
- DWP362 Type 1
- J-351 Type 5

Please verify your sander's model and type number to ensure compatibility.

## Setup

---

Follow these steps to properly attach the dust bag to your compatible Porter Cable sander:

1. **Ensure Power is Off:** Before beginning, always disconnect your sander from the power source to prevent accidental startup.
2. **Locate Dust Port:** Identify the dust collection port on your sander. This is typically a circular or rectangular opening designed for dust extraction.
3. **Attach Dust Bag:** Align the opening of the dust bag with the sander's dust port. Securely attach the bag, ensuring a snug fit to prevent dust leakage. Some models may have a clamp or a twist-lock mechanism. Refer to your sander's specific manual for detailed attachment instructions if needed.
4. **Verify Connection:** Gently tug on the dust bag to confirm it is firmly attached and will not detach during operation.



*Image: The Porter Cable OEM Dust Bag (Model A23158) shown flat, displaying the brand logo. This bag is designed to attach to compatible sanders for dust collection.*

## Operating Instructions

---

Once the dust bag is securely attached, you can proceed with your sanding tasks. The dust bag will collect the majority of the sawdust and debris generated by the sander.

- **Monitor Dust Level:** Periodically check the dust bag during operation. A full dust bag will reduce the efficiency of dust collection and can put strain on the sander.
- **Empty Regularly:** Empty the dust bag before it becomes completely full. This maintains optimal dust collection performance.

## Maintenance

---

Regular maintenance of your dust bag will ensure its longevity and effective performance.

## 1. Emptying the Bag:

- Disconnect the sander from the power source.
- Remove the dust bag from the sander.
- Locate the zipper or opening on the dust bag.
- Empty the collected dust into a suitable waste container. Tap the bag gently to dislodge any clinging dust.

## 2. Cleaning the Bag:

- For optimal performance, the dust bag should be cleaned periodically.
- Shake the bag vigorously outdoors to remove fine dust particles.
- If necessary, the bag can be gently washed with mild soap and water. Ensure it is completely dry before reattaching to the sander to prevent moisture damage or mold growth.

3. **Inspection:** Regularly inspect the dust bag for any signs of wear, tear, or damage to the fabric or zipper. A damaged bag will not collect dust effectively.

4. **Replacement:** If the dust bag becomes significantly worn, torn, or no longer collects dust efficiently, it should be replaced with a genuine Porter Cable OEM Dust Bag (part number A23158) to maintain optimal performance and a clean work environment.

## Troubleshooting

Problem	Possible Cause	Solution
Dust escaping from bag/sander connection.	Bag not securely attached; Bag opening damaged; Dust port clogged.	Ensure bag is firmly attached. Inspect bag opening for damage. Clear any obstructions from the sander's dust port.
Poor dust collection.	Dust bag is full; Bag fabric is clogged with fine dust; Bag is damaged.	Empty the dust bag. Clean the dust bag thoroughly. Replace the dust bag if damaged.
Bag detaches during operation.	Improper attachment; Excessive vibration.	Re-attach the bag securely, ensuring any locking mechanisms are engaged. Check sander for unusual vibrations.

## Specifications

- **Part Number:** A23158
- **Brand:** PORTER-CABLE
- **Product Dimensions:** Approximately 9.00 x 3.15 x 1.70 inches
- **Item Weight:** 1.44 ounces
- **Material:** Fabric (specific composition not provided)
- **Compatibility:** Refer to the "Compatibility" section for a full list of compatible sander models.

## Warranty and Support

This Porter Cable OEM Dust Bag is a genuine replacement part designed to meet the quality standards of Porter Cable products. For specific warranty information regarding replacement parts, please refer to the documentation provided with your original Porter Cable sander or contact Porter Cable customer support directly.

For further assistance or inquiries, please visit the official Porter Cable website or contact their authorized service centers.