

[Manuals.plus](#) /

› [Accutime](#) /

› Accutime Disney Princess LED Watch PN4398 User Manual

Accutime PN4398

Accutime Disney Princess LED Watch PN4398 User Manual

Brand: Accutime | Model: PN4398

INTRODUCTION

This manual provides instructions for the Accutime Disney Princess LED Watch, model PN4398. This digital watch features a bright LED display and a comfortable acrylic strap, designed for children. It displays time, date, and seconds, with options for 12-hour or 24-hour format. Please read this manual carefully to ensure proper use and maintenance of your watch.





Figure 1: Accutime Disney Princess LED Watch PN4398.

PACKAGE CONTENTS

Ensure all items listed below are present in your package:

- Accutime Disney Princess LED Watch (PN4398)
- Integrated CR2032 Button Cell Battery
- Multilingual User Manual



Figure 2: Watch as received in its retail packaging.

PRODUCT FEATURES

The Accutime Disney Princess LED Watch is equipped with the following features:

- **LED Digital Display:** Bright, clear display showing time (hours, minutes, seconds), month, and day.
- **Time Formats:** Supports both 12-hour (with AM/PM indicator) and 24-hour time formats.
- **Easy Operation:** Two control buttons located on the right side of the watch case for setting time and date.
- **Durable Design:** Lightweight acrylic strap and case, featuring vibrant Disney Princess graphics.
- **Adjustable Strap:** Strap length of approximately 21.7 cm (8.5 inches) with multiple adjustment holes for a comfortable and secure fit on various wrist sizes.
- **Battery Conservation:** The LED display activates only when a button is pressed, automatically turning off after a few seconds to maximize battery life.



Figure 3: Close-up view of the LED display showing time.

SETUP

The Accutime Disney Princess LED Watch comes with an integrated CR2032 button cell battery. The watch is ready for use upon removal from its packaging. Please note that the battery is not rechargeable and cannot be replaced.

Initial Display Activation

To activate the LED display, simply press either of the two buttons located on the right side of the watch case. The display will illuminate for a few seconds and then turn off automatically to conserve battery power.



Figure 4: Watch on wrist, indicating button location for display activation.

OPERATING INSTRUCTIONS

The watch features two buttons on the right side of the case for all settings. For clarity, let's refer to them as Button A (top button) and Button B (bottom button).

Setting Time and Date

1. **Activate Display:** Press Button A or Button B to illuminate the LED display.
2. **Enter Setting Mode:** While the display is active, press and hold Button A for approximately 3 seconds until the hour digits begin to flash.
3. **Set Hours:** Press Button A repeatedly to advance the hour. Press Button B to confirm the hour and move to the minute setting.
4. **Set Minutes:** Press Button A repeatedly to advance the minute. Press Button B to confirm the minute and move to the month setting.
5. **Set Month:** Press Button A repeatedly to advance the month. Press Button B to confirm the month and move to the day setting.
6. **Set Day:** Press Button A repeatedly to advance the day. Press Button B to confirm the day and move to the 12/24-hour format setting.

7. **Select Time Format:** Press Button A to toggle between 12-hour (with AM/PM indicator) and 24-hour formats. Press Button B to confirm your selection and exit setting mode.

The display will automatically turn off after a few seconds if no buttons are pressed during the setting process.

MAINTENANCE

Proper care will extend the life of your Accutime Disney Princess LED Watch:

- **Cleaning:** Wipe the watch case and strap with a soft, dry cloth. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the finish and printed graphics.
- **Water Resistance:** This watch is **not waterproof**. Avoid exposing it to water, moisture, rain, or extreme humidity. Do not submerge the watch in water.
- **Storage:** Store the watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Battery:** The integrated CR2032 battery is designed for the product's lifespan and cannot be replaced or recharged. Attempting to open the watch case may damage the watch and void any implied warranty.

TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Problem	Possible Cause	Solution
Display does not light up.	Battery depleted or watch is in standby mode.	Press any button to activate the display. If it still doesn't light up, the integrated battery may be at the end of its life. As the battery is non-replaceable, the watch may need to be replaced.
Incorrect time/date displayed.	Time/date not set correctly or has been reset.	Follow the "Setting Time and Date" instructions in the Operating Instructions section to reset the time and date.

SPECIFICATIONS

Detailed technical specifications for the Accutime Disney Princess LED Watch PN4398:

Feature	Detail
Model Number	PN4398
Display Type	LED Digital
Strap Material	Acrylic
Strap Length	Approx. 21.7 cm (8.5 inches)

Feature	Detail
Case Dimensions (H x W x D)	3.8 cm x 3.7 cm x 0.9 cm (1.5 in x 1.46 in x 0.35 in)
Weight	24 grams (0.85 oz)
Battery Type	Integrated CR2032 Button Cell (Non-rechargeable, Non-replaceable)
Manufacturer	Accutime Watch Corp.

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided with your purchase or contact Accutime Watch Corp. directly through their official website or customer service channels. Please note that the integrated battery is not covered under typical replacement warranties due to its non-replaceable nature.