

[Manuals.plus](#) /

› [DECAKILA](#) /

› DECAKILA 3 In 1 Blender for Shakes and Smoothies, Food Processor, Ice Crushing, Grinder for kitchen, Countertop Blenders with 1.5L Glass Jar and Vegetable Chopper, 600W KUJB006M User Manual

DECAKILA KUJB006M

DECAKILA 3-in-1 Blender User Manual

Model: KUJB006M

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your DECAKILA 3-in-1 Blender. Retain this manual for future reference.

- Always unplug the appliance from the power supply before assembling, disassembling, or cleaning.
- Do not immerse the motor base in water or any other liquid. Clean only with a damp cloth.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Ensure the lid is securely locked in place before operating the blender.
- Do not overfill the blender jar or attachments.
- When blending hot liquids, use caution and do not fill the jar to its maximum capacity to prevent overflow and scalding.
- Do not use attachments not recommended or sold by the manufacturer.
- This appliance is for household use only.

PRODUCT OVERVIEW

The DECAKILA 3-in-1 Blender (Model KUJB006M) is a versatile kitchen appliance designed for blending, food processing, and grinding. It features a powerful 600W motor, a 1.5L glass jar, and includes specialized attachments for various culinary tasks, making it a convenient and space-saving solution for your kitchen.



The DECAKILA 3-in-1 Blender system, showcasing the main blender unit with its 1.5L glass jar filled with fruits and ice, alongside the smaller food processor and grinder attachments.

Components



An exploded view illustrating the main components of the DECAKILA blender, including the lid with built-in cup, toughened glass jar, removable 4-blades, 600W powerful motor, two speeds & pulse function, and slip-resistant feet.

- **Motor Base:** Contains the 600W motor and control dial.
- **1.5L Glass Jar:** Main blending container, BPA-free.
- **Blender Blade Assembly:** Four-blade system for efficient blending.
- **Lid with Built-in Cup:** Secure lid for the blender jar, with a removable measuring cup.
- **Food Processor Bowl:** Attachment for chopping vegetables and grinding meat.
- **Food Processor Blade:** Blade for the food processor attachment.
- **Grinder Cup:** Attachment for grinding coffee beans, nuts, and other dry ingredients.
- **Grinder Blade:** Blade for the grinder attachment.

SETUP

Before first use, ensure all packaging materials are removed and clean all removable parts as described in the 'Maintenance and Cleaning' section.

1. Place the motor base on a clean, dry, and stable surface. Ensure it is unplugged from the power outlet.
2. **For Blending:** Place the blender blade assembly onto the bottom of the glass jar. Securely attach the glass jar onto the motor base by twisting it clockwise until it locks into place.
3. **For Food Processing:** Place the food processor blade inside the food processor bowl. Securely attach the food processor bowl onto the motor base by twisting it clockwise until it locks into place.
4. **For Grinding:** Place the grinder blade inside the grinder cup. Securely attach the grinder cup onto the motor base by twisting it clockwise until it locks into place.
5. Once assembled, you can plug the appliance into a suitable power outlet.

OPERATING INSTRUCTIONS

Blender Function

The blender is ideal for making shakes, smoothies, purees, and crushing ice.

BLENDER FOR SHAKES AND SMOOTHIES WITH 2-SPEED ADJUSTMENT





The DECAKILA blender in use, demonstrating its capability to create various beverages like smoothies and juices.


1. Ensure the blender jar is securely attached to the motor base.
2. Add your ingredients to the glass jar. For best results, add liquids first, then soft ingredients, and finally harder ingredients or ice. Do not exceed the maximum fill line.
3. Place the lid securely on the glass jar. Ensure the built-in cup is in place.
4. Plug the blender into a power outlet.
5. Turn the control dial to your desired speed setting (1 or 2) or to 'P' for pulse function.
6. After blending, turn the dial to '0' (off) and unplug the appliance.
7. Carefully remove the jar from the base and pour out the contents.

Speed Settings


2 SPEEDS & PULSE

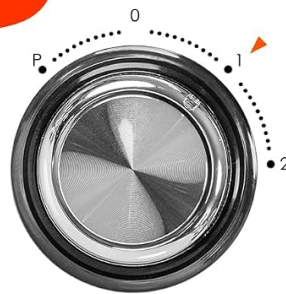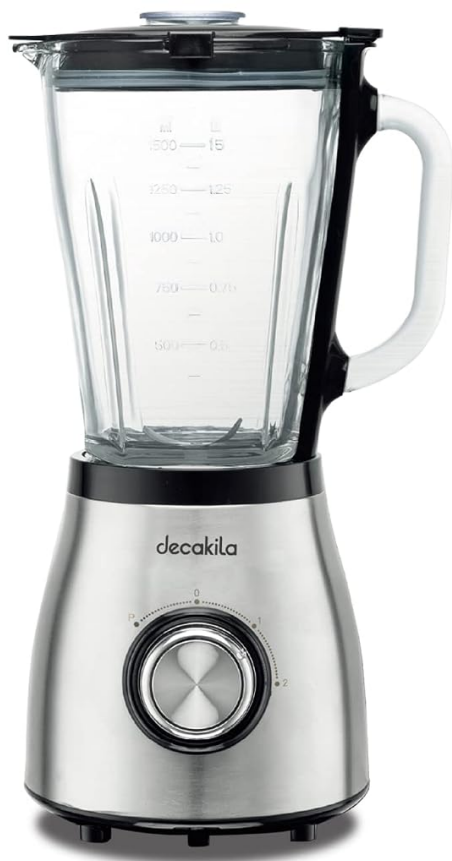

Speed 1 :
For vegetables and berries

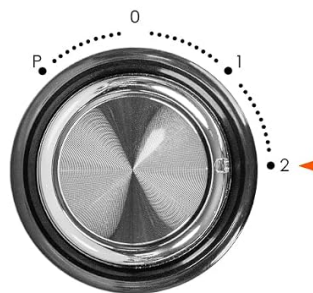

Speed 2 :
For hard fruits and nuts

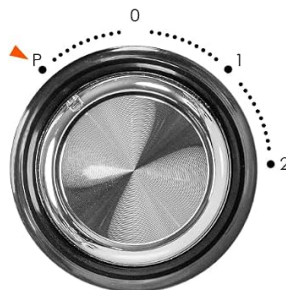

Pulse :
For ice crushing

A visual guide to the DECAKILA blender's control dial, showing settings for Speed 1 (vegetables and berries), Speed 2 (hard fruits and nuts), and Pulse (ice crushing).

Setting	Description	Recommended Use
0	Off	Turns the appliance off.

Setting	Description	Recommended Use
1	Low Speed	Ideal for softer ingredients like vegetables and berries.
2	High Speed	Suitable for harder ingredients such as hard fruits and nuts.
P	Pulse	Provides short bursts of maximum power, perfect for ice crushing or quick chopping.

Food Processor Function

The food processor attachment is designed for chopping vegetables, grinding meat, and preparing various ingredients.

FOR GRINDING MEAT AND FOR PROCESSING VEGETABLES AND INGREDIENTS



The DECAKILA food processor attachment in action, demonstrating its use for grinding meat and processing vegetables.

1. Ensure the food processor bowl with its blade is securely attached to the motor base.
2. Add pre-cut ingredients to the food processor bowl. Do not overfill.
3. Secure the lid on the food processor bowl.

4. Plug the appliance into a power outlet.
5. Turn the control dial to '1' or '2' for continuous processing, or use 'P' for pulse action to achieve desired consistency.
6. After processing, turn the dial to '0' (off) and unplug the appliance.
7. Carefully remove the bowl and blade to access the processed ingredients.

Grinder Function

The grinder attachment is suitable for grinding dry ingredients such as coffee beans, nuts, and spices.

FOR GRINDING COFFEE BEANS, NUTS, OTHER BEANS



The DECAKILA grinder attachment in use, specifically for grinding coffee beans, alongside various other beans and nuts it can process.

1. Ensure the grinder cup with its blade is securely attached to the motor base.
2. Add dry ingredients to the grinder cup. Do not overfill.
3. Secure the lid on the grinder cup.
4. Plug the appliance into a power outlet.
5. Turn the control dial to '1' or '2' for continuous grinding, or use 'P' for pulse action to achieve desired fineness.

6. After grinding, turn the dial to '0' (off) and unplug the appliance.
7. Carefully remove the cup and blade to access the ground ingredients.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will ensure the longevity and optimal performance of your DECAKILA 3-in-1 Blender.



The blender jar and blades are designed for easy cleaning, including rinsing with water.

1. Always unplug the appliance before cleaning.
2. **Glass Jar, Lids, and Blades:** The glass jar, all lids, and blade assemblies (blender, food processor, grinder) are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water. Rinse thoroughly and dry.
3. **Motor Base:** Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid. Do not use abrasive cleaners or scouring pads, as they may damage the surface.
4. For stubborn residue in the blender jar, fill it halfway with warm water and a drop of dish soap. Secure the lid and run the blender on speed '1' for a few seconds, then rinse.
5. Ensure all parts are completely dry before storing.

TROUBLESHOOTING

If you encounter issues with your DECAKILA 3-in-1 Blender, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; jar/attachment not correctly assembled.	Check power cord connection; test outlet with another appliance; ensure jar/attachment is securely locked onto the base.

Problem	Possible Cause	Solution
Motor stops during operation.	Overload protection activated; ingredients too large/hard.	Unplug, remove some ingredients, allow motor to cool for 15-20 minutes, then restart. Cut ingredients into smaller pieces.
Ingredients not blending/chopping properly.	Too little liquid; ingredients stuck; blades dull.	Add more liquid; use the pulse function or stop and stir ingredients; ensure blades are clean and sharp (if applicable).
Leakage from the bottom of the jar/attachment.	Blade assembly not tightened; seal ring missing or damaged.	Ensure blade assembly is tightly screwed onto the jar/cup; check if the rubber seal ring is correctly placed and undamaged. Replace if necessary.
Unusual noise or odor.	Overload; foreign object; motor issue.	Turn off immediately, unplug, and check for foreign objects. If problem persists, contact customer support. Do not continue to operate.

If the problem persists after attempting these solutions, please contact DECAKILA customer support for further assistance.

SPECIFICATIONS



Detailed dimensions of the DECAKILA blender and its attachments.

Feature	Detail
Brand	DECAKILA
Model	KUJB006M
Power/Wattage	600 Watt-hours
Voltage	120 Volts
Capacity (Blender Jar)	1.5 liters
Material	Glass, Stainless Steel
Number of Speeds	2 (plus Pulse function)
Product Dimensions	19 x 18.5 x 38.5 cm
Item Weight	4.6 kg
Color	Silver

Feature	Detail
Included Components	1 pcs blender, 1 pcs grinder, 1 pcs chopper

WARRANTY AND SUPPORT

Your DECAKILA 3-in-1 Blender is covered by a manufacturer's warranty against defects in material and workmanship. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration.

For technical support, warranty claims, or any questions not addressed in this manual, please contact DECAKILA customer service. Keep your purchase receipt as proof of purchase for warranty purposes.

For the most up-to-date contact information, please visit the official DECAKILA website or refer to the product packaging.