

[manuals.plus](#) /

- › [TIMEMORE](#) /
- › [TIMEMORE Chestnut C2MAX Manual Coffee Grinder User Manual](#)

TIMEMORE C2MAX

TIMEMORE Chestnut C2MAX Manual Coffee Grinder User Manual

MODEL: C2MAX

Introduction

Welcome to the TIMEMORE Chestnut C2MAX Manual Coffee Grinder. This manual provides essential information for the safe and efficient use of your new coffee grinder. Please read these instructions carefully before use and retain them for future reference.

Product Overview

Product Components

The TIMEMORE Chestnut C2MAX manual coffee grinder consists of several key parts designed for optimal performance and ease of use.



細部展示 detail display



Image: Exploded view of the grinder components. From top to bottom: Handle, Central Shaft, Body, Washer, Spring, Burr, Adjustment Dial, Adjustment Knob, Powder Receiver.

- **Handle:** Detachable for portability and storage.
- **Central Shaft:** Connects the handle to the burr.
- **Body:** Main housing for the grinding mechanism and bean hopper.
- **Burr:** Stainless steel conical burr for precise grinding.
- **Adjustment Dial/Knob:** Used to set the grind coarseness.
- **Powder Receiver:** Collects the ground coffee.

Key Features

- **Adjustable Coarseness:** Approximately 36 click settings for various brewing methods.
- **High-Precision Stainless Steel Burrs:** Ensures uniform grind size and durability.
- **Compact and Portable Design:** Ideal for home use and travel.
- **Easy to Clean:** Designed for straightforward disassembly and cleaning.

Setup

Initial Setup

1. **Unpack:** Carefully remove all components from the packaging. Verify that all parts are present as listed in the product overview.
2. **Initial Cleaning:** Before first use, clean the burrs and powder receiver with the included brush to remove any manufacturing residue. Do not wash the burrs with water.

3. **Assemble Handle:** Attach the handle to the central shaft. The handle may be magnetic for easy attachment and detachment.



We believe in the power of art and aesthetics and have the faith of excellent artisan spirit. In this fast world, we'd like to make products slowly and carefully. It's hard to make an original product but we like to fight with imperfection. We choose what we really need more than only benefits so we gain a lot including more and more reliable friendships. Meanwhile, our team is getting bigger and TIMEMORE becomes an influential brand in this market. We hope TIMEMORE can give people a choice of lifestyle, exquisite products and some good stories about Coffee.

TIMEMORE社の器具は国際的にも高く評価されています。



GOOD DESIGN AWARD 2020



Image: Product packaging and included accessories, such as the grinder, cleaning brush, and user manual.

Operating Instructions

Grinding Coffee

1. **Adjust Grind Size:** Refer to the "Coarseness Adjustment" section to select your desired grind setting.
2. **Load Beans:** Open the top lid and pour whole coffee beans into the hopper. The C2MAX can hold approximately 25-30g of coffee beans.
3. **Attach Handle:** Securely attach the handle to the central shaft.
4. **Grind:** Hold the grinder firmly and turn the handle clockwise to begin grinding. Continue until all beans have been ground.
5. **Collect Grounds:** Unscrew the powder receiver from the bottom of the grinder to access your freshly ground coffee.



商品とアフターサービス

TIME MORE 専門店にご愛顧を頂き、誠にありがとうございます。

「TIME MORE」でお検索になって、TIME MORE ブランドストアを確認できます。

コーヒーミル、フィルター、ウォータードリップ、スケール、ドリップスタンドなどがございます。

→保証書：TIME MORE 専門店より購入した製品は正規品で一年間の保証期間があり、

販売元はTIME MORE 専門店をご確認ください。

→説明書：正しい使用していただくため、商品を使用する前に日本語取扱説明書をお読んでください。

偶に説明書は英語になる可能性もあります。その場合は、電子版の日本語取扱説明書に

希望があれば、販売元：TIME MORE 専門店までご連絡ください。

→連絡方法：商品とアフターサービスについて、何かご不明点がございましたら、

気軽にお問い合わせください。当商品ページの「今すぐ買う」の下にある

「販売元：TIME MORE 専門店」をクリック→「質問する」をクリックして、ご購入いただいた商品を選択して進めてください。

Image: A user demonstrating the grinding process with the TIME MORE Chestnut C2MAX grinder.

Coarseness Adjustment

The TIME MORE Chestnut C2MAX features an external adjustment dial for precise grind size control. To adjust, hold the body of the grinder and turn the adjustment knob at the bottom. Each "click" represents a step in coarseness.

Turning the knob clockwise results in a finer grind, while turning it counter-clockwise results in a coarser grind.

Recommended Grind Settings (Approximate Clicks from Zero Point)



粗挽き

フレンチプレス
パーコレーター
(直火式抽出ポット)



中挽き

ドリップポット
ケトル
(平型フィルター)



中細挽き

ドリップ式
サイフォン式



イタリア式

エスプレッソマシン
モカポット

粒度が調節可能で
どんなタイプのコーヒーにも



細挽き



中挽き



中細挽き



粗挽き



エスプレッソ
10-14 クリック



ハンドドリップ
18-24 クリック



フレンチプレス
25-27 クリック

*白の損壊防止ため、6クリック以下に挽くことをしないでください。

Image: Visual guide for grind coarseness, illustrating different grind sizes and recommended click settings for various brewing methods.

Brew Method	Grind Type	Recommended Clicks
Espresso	Fine	10-14 clicks
Hand Drip	Medium	18-24 clicks
French Press	Coarse	25-27 clicks

Note: To prevent burr damage, avoid adjusting to less than 6 clicks. These settings are approximate and may vary based on bean type and personal preference.

Maintenance and Cleaning

Cleaning and Care

Regular cleaning ensures optimal performance and extends the lifespan of your grinder.

- Disassembly:** Remove the handle and unscrew the powder receiver. Carefully remove the adjustment dial, spring, and burr assembly.
- Brush Cleaning:** Use the provided brush to remove any residual coffee grounds from the burrs, central shaft, and powder receiver.
- Wipe Down:** Wipe the exterior of the grinder with a soft, dry cloth.
- Reassembly:** Reassemble the grinder in reverse order. Ensure all parts are securely fitted.

Important: Do not wash the burrs or internal metal components with water, as this can lead to rust and damage. Only the powder receiver can be rinsed with water if necessary, but ensure it is completely dry before reassembly.

Troubleshooting

Problem	Possible Cause	Solution
Difficulty turning handle / Grinder jammed	Beans are too hard or grind setting is too fine.	Adjust to a coarser setting. If jammed, carefully remove beans and clear any obstructions.
Inconsistent grind size	Burrs may be loose or worn.	Ensure the adjustment dial is securely tightened to your desired setting. If problem persists, contact support.
Static electricity causing grounds to stick	Dry beans or low humidity.	Before grinding, add a few drops of water to the whole beans (RDT method) or lightly mist the beans.
Handle detaches during grinding	Handle not securely attached or magnetic connection is weak.	Ensure the handle is fully seated on the central shaft. This model's handle is designed for easy detachment for portability.

Product Specifications

Feature	Detail
Brand	TIMEMORE
Model	Chestnut C2MAX
Materials	Aluminum alloy (body), Stainless steel (burr), PC (some parts)
Body Dimensions	147mm (height) x 52mm (diameter)
Handle Length	159mm
Weight	Approx. 505g
Bean Capacity	Approx. 30g

Feature	Detail
Grind Adjustment	Click-type, approx. 36 settings

Warranty and Customer Support

Your TIMEMORE Chestnut C2MAX Manual Coffee Grinder comes with **a one-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For any questions, concerns, or warranty service, please contact the seller directly. You can usually find seller contact information on the product's purchase page or by clicking on the "Sold by TIMEMORE" link.

For more information about TIMEMORE products, visit the official TIMEMORE Brand Store on Amazon: [TIMEMORE Brand Store](#).