

## DECAKILA KUEV003R

# DECAKILA 3-in-1 Breakfast Station Instruction Manual (Model KUEV003R)

Your comprehensive guide to operating and maintaining your DECAKILA 3-in-1 Breakfast Station.

## INTRODUCTION

Thank you for choosing the DECAKILA 3-in-1 Breakfast Station. This appliance combines a toaster oven, a 4-cup coffee maker, and a non-stick griddle into a single compact unit, designed for convenience. Please read this manual thoroughly before use to ensure safe and efficient operation.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.

- A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in this oven.
- Do not place cardboard, plastic, paper, or similar materials in the oven.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
- Use extreme caution when removing tray or disposing of hot grease.
- The coffee maker is for household use only.
- Do not operate the coffee maker without water.
- Ensure the coffee maker lid is securely closed during operation.
- The griddle surface will be hot during and after use. Use caution.

## PRODUCT COMPONENTS AND CONTROLS

Familiarize yourself with the various parts of your DECAKILA 3-in-1 Breakfast Station.



**Figure 1:** Overview of the DECAKILA 3-in-1 Breakfast Station, showing the toaster oven, coffee maker, griddle, and included accessories (bake tray, bake rack, frying pan, coffee pot, frying pan cover).

# Independent Control Area



Figure 2: Visual representation of the 3-in-1 functionality, highlighting the frying pan, toaster oven, and coffee machine components.

# 3 in 1 Breakfast Station



Frying Pan



Toaster oven



Coffee Machine



Figure 3: Close-up of the control panel, highlighting the Coffee Machine Switch, Oven Temperature Control, Oven Time Control, and Oven Power Indicator.



Figure 4: Detail of the anti-scald handle for safe operation of the oven door and griddle cover.

### Included Components:

- **Main Unit:** Combines toaster oven, coffee maker, and griddle.
- **Bake Tray:** For baking and collecting crumbs in the oven.
- **Bake Rack:** For toasting and placing items in the oven.
- **Non-stick Frying Pan:** For griddle cooking.
- **Coffee Pot (Carafe):** For collecting brewed coffee.
- **Frying Pan Cover (Glass Lid):** For the griddle.

### SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and accessories.
2. **Cleaning:** Before first use, wash the bake tray, bake rack, frying pan, coffee pot, and frying pan cover in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the main unit with a damp cloth.

3. **Placement:** Place the appliance on a stable, heat-resistant, and level surface, away from walls and flammable materials, ensuring adequate ventilation.

4. **Initial Burn-off (Toaster Oven):**

- Insert the bake tray and bake rack into the oven.
- Set the temperature control to maximum (230°C/450°F) and the timer to 15 minutes.
- Operate the oven empty for 15 minutes to burn off any manufacturing residues. A slight odor or smoke is normal during this process. Ensure the area is well-ventilated.
- Allow the oven to cool completely before proceeding.

5. **Initial Coffee Maker Cycle:**

- Fill the coffee maker water reservoir with clean water to the maximum fill line.
- Place the empty coffee pot on the warming plate.
- Turn the coffee maker switch to "ON" and allow a full cycle of water to brew through.
- Discard the water and allow the coffee maker to cool.

## OPERATING INSTRUCTIONS

---

### 1. Toaster Oven Operation

1. Place food on the bake rack or bake tray. Ensure the bake tray is always underneath the bake rack to catch crumbs or drips.
2. Slide the rack/tray assembly into the oven.
3. Close the oven door.
4. Set the desired temperature using the **Oven Temperature Control** knob (e.g., 150°C to 230°C).
5. Set the desired cooking time using the **Oven Time Control** knob (up to 30 minutes). The oven will begin heating. The **Oven Power Indicator** light will illuminate.
6. When the set time expires, a bell will ring, and the oven will automatically turn off.
7. To stop cooking before the timer expires, turn the timer knob to the "OFF" position.
8. Carefully remove cooked food using oven mitts or the provided handle for the bake tray.


# Product Information



Glass Lid



Non-stick  
Frying Pan

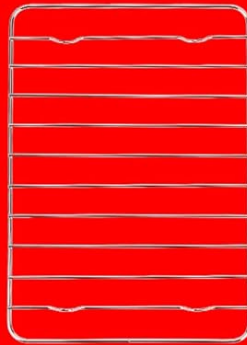

Bake Rack



Bake Tray

Figure 5: Toaster oven in operation, showing bread slices on the bake rack and a bake tray below.

## 2. Coffee Maker Operation

1. Open the coffee maker lid and fill the water reservoir with fresh, cold water. Do not exceed the maximum fill line (4 cups).
2. Place a paper filter (not included) into the filter basket.
3. Add desired amount of ground coffee into the filter.
4. Close the coffee maker lid securely.
5. Place the empty coffee pot (carafe) onto the warming plate.
6. Flip the **Coffee Machine Switch** to "ON". The coffee maker will begin brewing.
7. Once brewing is complete, the coffee maker will keep the coffee warm on the warming plate.
8. To turn off, flip the **Coffee Machine Switch** to "OFF".



Figure 6: The coffee maker component with a full carafe of brewed coffee.

### 3. Griddle Operation

1. Place the non-stick frying pan onto the designated griddle heating element on top of the appliance.
2. If desired, place the glass lid on the frying pan.
3. The griddle operates simultaneously with the toaster oven. When the toaster oven is turned on, the griddle also heats up.
4. Allow the griddle to preheat for a few minutes.
5. Add a small amount of cooking oil or butter if necessary, then place food items (e.g., eggs, bacon, sausages) onto the griddle.
6. Cook food to desired doneness.
7. When finished, turn the toaster oven timer to "OFF" to turn off both the oven and the griddle.
8. Carefully remove cooked food and allow the griddle to cool before cleaning.

# Anti-scald Handle



Figure 7: The non-stick griddle in use, cooking a steak and an egg, with the glass lid partially visible.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance. Always unplug the unit and allow it to cool completely before cleaning.

- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
- **Bake Tray, Bake Rack, Frying Pan, Coffee Pot, Frying Pan Cover:** These removable parts can be washed in warm, soapy water. Rinse thoroughly and dry completely. The non-stick coating on the frying pan should be cleaned with a soft sponge to avoid scratching.
- **Oven Interior:** Wipe the interior with a damp cloth and mild detergent. For stubborn stains, a non-abrasive cleaner designed for oven interiors can be used. Ensure all cleaning solution is wiped away before next use.
- **Coffee Maker Filter Basket:** Remove and rinse the filter basket after each use.
- **Descaling (Coffee Maker):** Periodically descale the coffee maker to remove mineral deposits. Fill the water

reservoir with a mixture of water and white vinegar (1:1 ratio). Run a brewing cycle. Repeat with clean water to rinse.

## TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Check circuit breaker.
Oven not heating.	Temperature or timer not set correctly.	Ensure both the temperature and timer knobs are set to desired settings and not "OFF".
Coffee not brewing.	Water reservoir empty; coffee switch off.	Fill water reservoir; ensure coffee machine switch is "ON".
Griddle not heating.	Toaster oven not turned on.	The griddle heats when the toaster oven is active. Ensure the oven timer is set.
Unusual odor or smoke during first use.	Manufacturing residues burning off.	This is normal for initial use. Ensure good ventilation. If it persists, contact customer support.

## SPECIFICATIONS

Feature	Detail
Brand	DECAKILA
Model Name	KUEV003R
Color	Red
Product Dimensions (D x W x H)	9.7"D x 17.8"W x 10.2"H
Item Weight	8.8 pounds
Control Type	Knob
Special Feature	Timer
Finish Type	Non-stick (griddle)
Included Components	1 pcs 3 in 1 Breakfast Station with 1pcs Bake Tray, 1pcs Bake Rack, 1pcs Frying Pan, 1pcs Coffee Pot, 1pcs Frying Pan Cover

*Note: Specifications are subject to change without notice for product improvement.*

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact DECAKILA customer service. Keep your purchase receipt as proof of purchase.

**Customer Service:** Please visit the official DECAKILA website for contact details or support resources.[DECAKILA Store on Amazon](#)



© 2023 DECAKILA. All rights reserved.