

[manuals.plus](#) /

> [ZOOAOXO](#) /

> [ZOOAOXO M600 64GB MP3 Player Instruction Manual](#)

## ZOOAOXO M600

# ZOOAOXO M600 64GB MP3 Player Instruction Manual

Model: M600 | Brand: ZOOAOXO

## 1. PRODUCT OVERVIEW

The ZOOAOXO M600 is a compact 64GB MP3 player designed for portable audio enjoyment. It features Bluetooth 5.2 connectivity, a built-in HD speaker, FM radio, voice recorder, and e-book functionality. Its metal shell and touch buttons offer a user-friendly experience.



*Image 1.1: Front and back view of the ZOOAOXO M600 MP3 Player, showcasing its sleek design and controls.*

## **2. PACKAGE CONTENTS**

Verify that all items are present in the package:

- ZOOAOXO M600 64GB MP3 Player
- Earphones
- Type C Cable
- Card Reader

## **3. SETUP GUIDE**

### **3.1 Charging the Device**

Before first use, fully charge the MP3 player. Connect the provided Type-C cable to the device's charging port and the other end to a USB power adapter (not included) or a computer's USB port.

### **3.2 Powering On/Off**

To power on, press and hold the power button located on the side of the device until the ZOOAOXO logo appears on the screen. To power off, press and hold the power button until the device shuts down.

Your browser does not support the video tag.

*Video 3.1: Demonstrates powering on the ZOOAOXO M600 MP3 Player and navigating its initial menu.*

### **3.3 Transferring Music and Files**

Connect the MP3 player to your computer using the Type-C cable. The device will appear as a removable disk. Drag and drop your music files (MP3, WAV, FLAC, APE, WMA, AAC-LC) and other supported files (JPEG, PNG for pictures, TXT for e-books) into the appropriate folders on the device or the inserted microSD card.

# MULTI-FUNCTION PLAYER

FM RADIO , VOICE , RECORDER



*Image 3.2: The ZOAOXO M600 MP3 Player highlighting its 64GB storage capacity, indicating ample space for music and files.*

## 4. OPERATING INSTRUCTIONS

### 4.1 Basic Navigation

Use the directional buttons (up, down, left, right) to navigate through menus. The center button acts as a 'Select' or 'Play/Pause' button. The 'Return' button (usually on the top right) takes you back to the previous screen.

### 4.2 Music Playback

1. From the main menu, select "Music".
2. Choose from "All songs", "Artists", "Albums", "Favorites", or "Folders" to browse your music.
3. Select a song and press the center button to play.
4. During playback, use the left/right buttons to skip tracks. Hold them to fast-forward/rewind.
5. Adjust volume using the dedicated volume buttons on the side of the device.



The latest version of Bluetooth 5.2 has more stable transmission and better compatibility.

Image 4.1: The MP3 player's screen showing the music playback interface with song title, progress bar, and control icons.

#### 4.3 Bluetooth Connectivity (Bluetooth 5.2)

The MP3 player supports Bluetooth 5.2 for connecting to Bluetooth headphones or speakers. Note: Bluetooth function only supports audio output, not file transfer.

1. From the main menu, select "Bluetooth".
2. Ensure your Bluetooth headphones/speaker are in pairing mode.
3. The MP3 player will scan for available devices. Select your device from the list to pair.

# SIMPLE RECORDING FUNCTION



Image 4.2: The ZOOAOXO M600 MP3 Player wirelessly connected to a Bluetooth speaker, demonstrating its Bluetooth 5.2 capability.

## 4.4 FM Radio

To use the FM radio, wired headphones must be connected as they act as the antenna.

1. Connect wired headphones to the 3.5mm audio jack.
2. From the main menu, select "FM Radio".
3. Use the navigation buttons to scan for stations or manually tune.

## 4.5 Voice Recorder

The built-in voice recorder allows you to capture audio. Recordings are saved to the device's storage.

1. From the main menu, select "Recorder".
2. Follow on-screen prompts to start, pause, and save recordings.

# UPGRADED VERSION WITH 64GB STORAGE



*Image 4.3: The MP3 player displaying its voice recording function, useful for interviews, learning, or conferences.*

## **4.6 E-book Reader**

The device supports reading e-books in TXT format.

1. Transfer TXT files to the "E-book" folder on the device.
2. From the main menu, select "E-book" and choose your desired file.

## **4.7 Picture Viewer**

View JPEG and PNG image files on the device's screen.

1. Transfer JPEG or PNG files to the "Picture" folder on the device.
2. From the main menu, select "Picture" and browse your images.

# BUILT-IN SPEAKER

Free your hand and relax your ears



Image 4.4: A visual representation of the ZOOAOXO M600 MP3 Player's multi-functionality, including lossless music, Bluetooth 5.2, picture viewing, recorder, e-book, A-B repeat, and FM radio.

## 5. MAINTENANCE AND CARE

- Keep the device dry. Moisture can damage electronic components.
- Avoid extreme temperatures.
- Clean the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Handle with care to prevent drops or impacts.
- Regularly back up important files to a computer.

## 6. TROUBLESHOOTING

Problem	Solution
Device does not power on.	Ensure the device is fully charged. Press and hold the power button for several seconds.
Cannot connect via Bluetooth.	Ensure Bluetooth is enabled on both devices and they are in pairing mode. Keep devices within range. Restart both devices and try again.

Problem	Solution
No sound from headphones/speaker.	Check volume levels on both the MP3 player and connected audio device. Ensure headphones are properly plugged in or Bluetooth is connected. Test with different headphones/speakers.
Files not appearing on the device.	Ensure files are in supported formats and transferred to the correct folders. Disconnect and reconnect the device to the computer.
FM Radio not working.	Ensure wired headphones are connected, as they serve as the antenna. Try rescanning for stations.

## 7. SPECIFICATIONS

- **Model:** M600
- **Storage Capacity:** 64 GB (via microSD card)
- **Connectivity:** Bluetooth 5.2, Type-C USB
- **Screen Size:** 1.8 Inches
- **Supported Audio Formats:** MP3, WAV, FLAC, APE, WMA, AAC-LC
- **Supported Image Formats:** JPEG, PNG
- **Supported E-book Format:** TXT
- **Special Features:** FM Radio, Voice Recorder, Built-in HD Speaker
- **Dimensions:** 3.54 x 1.69 x 0.35 inches
- **Item Weight:** 8.4 ounces
- **Battery:** 1 Lithium Polymer battery (included)

## 8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official ZOOAOXO website or contact their customer service directly. Keep your purchase receipt for warranty claims.

For further assistance, please visit: [ZOOAOXO Brand Store on Amazon](#)