

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Farberware](#) /

› [Farberware Countertop Microwave Oven 1.2 Cu. Ft. 1000 Watt with LED Lighting, Child Lock, Easy Clean Grey Interior, Stainless Steel 1.2 Cu. Ft. Stainless Steel Instruction Manual](#)

## Farberware Farberware

# Farberware Countertop Microwave Oven Instruction Manual

Model: Farberware | Brand: Farberware

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Farberware Countertop Microwave Oven. Please read it thoroughly before use and retain it for future reference. The Farberware Countertop Microwave Oven is designed for convenient and quick meal preparation. It features a powerful 1000 Watt output, multiple power levels, and one-touch cooking programs for popular food items. Its compact size makes it ideal for various kitchen and office spaces.



Figure 1: Front view of the Farberware Countertop Microwave Oven.

## 2. SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the door (bent), hinges and latches (broken or loosened), or door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.
- Close supervision is necessary when the appliance is used by or near children. The child safety lock feature is available for added security.

## 3. PRODUCT OVERVIEW

---

### Key Features:

- **1000 Watt Output:** For powerful and efficient cooking.
- **10 Power Levels:** Offers precise control over cooking intensity.
- **Multi-Stage Cooking:** Customize cooking sequences.
- **Six One-Touch Options:** Pre-programmed settings for popular foods like popcorn, potato, and pizza.
- **Weight/Time Defrost:** Convenient defrosting options.
- **LED Display:** Clear digital screen with clock and kitchen timer.
- **Easy-to-Clean Interior:** Grey interior for simple maintenance.
- **Child Safety Lock:** Prevents unauthorized operation.
- **Easy-Grip Handle:** For comfortable door opening.

# Simple. Powerful.



**1.2 cu.ft**



**10 power  
levels**



**1100 W**



Figure 2: Overview of key features including capacity, power levels, and wattage.

## Control Panel:

The intuitive control panel allows for easy operation of all microwave functions.



Figure 3: Detailed view of the control panel highlighting various cooking options and the child safety lock.

## 4. SETUP

### Unpacking:

- Remove all packing materials from the oven cavity and the turntable assembly.
- Check the oven for any damage, such as a misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches, or dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact qualified service personnel.

### Placement:

- Place the oven on a flat, stable surface that is strong enough to hold the oven and the food being cooked.
- Ensure adequate ventilation. Leave a minimum of 3 inches (7.5 cm) of space on the top, sides, and rear of the oven for proper airflow.
- Do not block air vents.
- Do not place the oven near heat sources or in a damp environment.

# Get the Perfect Fit.

compact size to make the most of your space



Figure 4: Product dimensions for proper placement and fit.

## Electrical Connection:

- Plug the oven into a properly installed and grounded wall outlet.
- Do not use an extension cord.

## 5. OPERATING INSTRUCTIONS

### Setting the Clock:

1. Press the "Clock/Kitchen Timer" button once.
2. Use the number pad to enter the current time (e.g., 12:30 for 12:30 PM).
3. Press the "Clock/Kitchen Timer" button again to confirm.

### Microwave Cooking:

1. Place food in a microwave-safe container on the glass turntable.
2. Close the oven door securely.
3. **Time Cook:** Press "Time Cook", then use the number pad to enter desired cooking time. Press "Start".

- Express Cook:** For quick cooking, simply press a number from 1-6 for 1 to 6 minutes of cooking time. Press "Start".
- Power Level:** To adjust power, press "Power", then use the number pad to select a power level (1-10, 10 being 100%). Press "Time Cook" and enter time, then "Start".
- One-Touch Cooking:** Select from "Popcorn", "Potato", "Pizza", "Frozen Vegetable", "Beverage", or "Meat" for pre-programmed cooking. Follow on-screen prompts if any, then press "Start".
- Weight/Time Defrost:** Press "Weight/Time Defrost", enter the weight or time, then press "Start".



Figure 5: Interior of the microwave showing the glass turntable and ample cooking space.

## 6. MAINTENANCE AND CLEANING

Regular cleaning of your microwave oven will ensure its longevity and optimal performance.

- Oven Interior:** Wipe the interior with a damp cloth after each use. For stubborn stains, use a mild detergent or microwave-safe cleaner.
- Glass Turntable:** The glass turntable can be removed and washed in warm soapy water or in a dishwasher.
- Exterior:** Clean the exterior surface with a soft, damp cloth. Avoid abrasive cleaners or scouring pads.

- **Door Seals:** Keep the door seals clean to ensure proper closure and prevent microwave energy leakage.



Figure 6: The microwave seamlessly integrates into a kitchen setting, ready for various culinary tasks.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Oven will not start.	Power cord not plugged in securely.   Fuse blown or circuit breaker tripped.   Door not closed securely.	Plug into outlet.   Replace fuse or reset circuit breaker.   Close door securely.
Oven not heating.	Incorrect cooking time set.   Power level too low.	Check cooking time and adjust.   Increase power level.
Uneven cooking.	Food not stirred or turned.   Food not placed centrally on turntable.	Stir or turn food during cooking.   Ensure food is centered on turntable.
Child lock engaged.	Child safety lock activated.	Press and hold the "STOP/CANCEL" button for 3 seconds to deactivate.

## 8. SPECIFICATIONS

Specification	Value
Brand	Farberware
Model Number	Farberware
Capacity	1.2 Cubic Feet
Wattage	1000 watts
Voltage	120 Volts
Product Dimensions (D x W x H)	17.1"D x 20.5"W x 12.8"H
Item Weight	5.5 pounds (88 Ounces)
Color	Stainless Steel
Material	Stainless Steel
Installation Type	Countertop
Included Components	Glass turntable
Manufacturer	EM LLC
Country of Origin	China

## 9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Farberware website. Do not attempt to repair the appliance yourself.

For further assistance, you may contact Farberware customer service through their official channels.