

## Zojirushi NW-JE10

# Zojirushi NW-JE10 Pressure IH Rice Cooker Instruction Manual

Model: NW-JE10

## 1. INTRODUCTION

This instruction manual provides essential information for the safe and efficient operation, maintenance, and care of your Zojirushi NW-JE10 Pressure IH Rice Cooker. Please read this manual thoroughly before using the appliance and retain it for future reference.

## 2. SAFETY PRECAUTIONS

To prevent injury or damage to the appliance, always observe the following safety precautions:

- **Voltage Compatibility:** This appliance is designed for **100V AC** power outlets only. Do not use with any other voltage.
- **Power Cord:** Do not damage, modify, or place heavy objects on the power cord. Do not pull the cord to unplug.
- **Water and Moisture:** Do not immerse the main unit in water or other liquids. Do not operate with wet hands.
- **Steam Vent:** Do not block the steam vent during operation. Keep hands and face away from the steam vent to avoid burns.
- **Children:** Keep the appliance out of reach of children. Close supervision is necessary when used near children.
- **Maintenance:** Always unplug the rice cooker before cleaning or performing any maintenance.
- **Repairs:** Do not attempt to repair or disassemble the appliance yourself. Contact qualified service personnel for repairs.

## 3. PACKAGE CONTENTS

Upon unpacking, please ensure all items are present and in good condition:

- Zojirushi NW-JE10 Pressure IH Rice Cooker (Main Unit)
- Inner Cooking Pan (Removable)
- Measuring Cup
- Rice Spatula

- Instruction Manual (This document)

## 4. PRODUCT OVERVIEW

Familiarize yourself with the components and control panel of your Zojirushi NW-JE10 Pressure IH Rice Cooker.



Figure 4.1: Zojirushi NW-JE10 Rice Cooker Main Unit

This image displays the Zojirushi NW-JE10 Pressure IH Rice Cooker. The unit is black with a sleek design. The top panel features a digital display showing '10:00' and various cooking options in Japanese. Below the display are control buttons including ' ' (Select), ' ' (Rice Type Selection), ' ' (Cancel), ' ' (Cook / Reheat), ' ' (Reservation/Timer), and ' ( )' (Cleaning - long press). The ' IH' (Pressure IH) and ' ' (Keep Warm) indicators are also visible.

### Control Panel Functions:

- **Digital Display:** Shows current time, cooking progress, selected menu, and timer settings.
- **(My Home Cooking Select):** Allows customization of rice texture and firmness.
- **(Rice Type Selection):** Used to select different types of rice (e.g., white, brown, sushi).
- **(Cancel):** Stops the current operation or cancels a selection.
- **(Cook / Reheat):** Starts the cooking cycle or reheats cooked rice.
- **(Reservation/Timer):** Sets a delayed cooking start time.
- **( ) (Cleaning - long press):** Activates the cleaning function.
- **IH (Pressure IH):** Indicates the use of Induction Heating and pressure for cooking.
- **(Keep Warm):** Maintains the rice at a warm temperature after cooking.

## 5. SETUP

1. **Unpack:** Carefully remove all packaging materials and accessories.
2. **Placement:** Place the rice cooker on a stable, flat, and heat-resistant surface, away from direct sunlight or heat sources. Ensure adequate ventilation around the unit.
3. **Initial Cleaning:** Before first use, wash the inner cooking pan, inner lid, and other removable accessories with warm soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
4. **Power Connection:** Connect the power cord to the rice cooker and then plug it into a **100V AC** electrical outlet.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Basic Rice Cooking

1. **Measure Rice:** Use the provided measuring cup to measure the desired amount of rice.
2. **Wash Rice:** Wash the rice thoroughly until the water runs clear.
3. **Add Water:** Place the washed rice into the inner cooking pan. Add water up to the corresponding water level mark inside the pan for your chosen rice type and quantity.
4. **Place Pan:** Insert the inner cooking pan into the main unit, ensuring it sits correctly. Close the outer lid securely.
5. **Select Rice Type:** Press the **(Rice Type Selection)** button to choose your rice type.
6. **Start Cooking:** Press the **(Cook / Reheat)** button to begin the cooking cycle. The display will show the remaining cooking time.
7. **Completion:** Once cooking is complete, the rice cooker will switch to the **(Keep Warm)** mode.

### 6.2 Using the Timer (Reservation) Function

1. Prepare rice and water as described in "Basic Rice Cooking" steps 1-4.
2. Press the **(Reservation/Timer)** button.
3. Use the arrow buttons (if available, implied by general rice cooker controls) to set the desired completion time.
4. Press the **(Cook / Reheat)** button to confirm the timer setting. The rice cooker will start cooking automatically at the set time.

## 7. MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and longevity of your rice cooker. Always unplug the unit before cleaning.

- **Inner Cooking Pan & Inner Lid:** Wash these removable parts with warm water and mild dish soap after each use. Rinse thoroughly and dry completely.
- **Main Unit Exterior:** Wipe with a soft, damp cloth. Do not use abrasive cleaners or immerse the main unit in water.
- **Steam Vent:** Ensure the steam vent is clear of any food debris.
- **Cleaning Function:** For internal cleaning, use the **( ) (Cleaning - long press)** function as per the detailed instructions in the full manual (if applicable).

## 8. TROUBLESHOOTING

---

If you encounter issues with your rice cooker, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Rice not cooking properly	<ul style="list-style-type: none"> <li>• Incorrect water-to-rice ratio. Adjust according to rice type.</li> <li>• Inner pan not seated correctly. Ensure it is properly placed.</li> <li>• Lid not closed securely.</li> </ul>
Unit does not power on	<ul style="list-style-type: none"> <li>• Power cord not securely plugged in.</li> <li>• Power outlet not functioning. Test with another appliance.</li> <li>• Incorrect voltage (requires 100V AC).</li> </ul>
Steam leaking from lid	<ul style="list-style-type: none"> <li>• Lid gasket or inner lid not properly installed.</li> <li>• Lid is not closed securely.</li> <li>• Gasket may be worn and require replacement.</li> </ul>

If the problem persists after attempting these solutions, please contact Zojirushi customer support.

## 9. SPECIFICATIONS

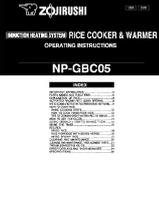
<b>Brand</b>	Zojirushi
<b>Model Name</b>	NW-JE10
<b>Capacity</b>	1 Liter
<b>Product Dimensions (D x W x H)</b>	9.65" x 10.83" x 8.46"
<b>Power Source</b>	Corded Electric
<b>Voltage</b>	100 Volts
<b>Wattage</b>	1370 watts
<b>Color</b>	Black
<b>Material</b>	Stainless Steel
<b>Special Feature</b>	Removable Bowl
<b>Item Weight</b>	15.31 pounds

## 10. WARRANTY AND SUPPORT

For warranty information, product support, or service inquiries, please refer to the official Zojirushi website or contact their customer service department. Keep your purchase receipt as proof of purchase.

**Zojirushi Official Website:** [www.zojirushi.com](http://www.zojirushi.com)

## Related Documents - NW-JE10

	<p><a href="#">Zojirushi NW-YNC10/NW-YNC18 Pressure Induction Heating Rice Cooker &amp; Warmer: Operating Instructions Manual</a></p> <p>Official operating instructions manual for the Zojirushi NW-YNC10 and NW-YNC18 Pressure Induction Heating Rice Cooker &amp; Warmer. This guide covers safety, operation, cooking modes, recipes, cleaning, and troubleshooting for optimal use.</p>
	<p><a href="#">Zojirushi Pressure Induction Heating Rice Cooker &amp; Warmer NW-JEC10 / NW-JEC18 Operating Instructions</a></p> <p>Comprehensive operating instructions for the Zojirushi Pressure Induction Heating Rice Cooker &amp; Warmer, models NW-JEC10 and NW-JEC18. Covers safety precautions, part names, cooking rice (various types, settings, timer, keep warm), recipes, cleaning, maintenance, troubleshooting, error displays, and specifications.</p>
	<p><a href="#">Zojirushi NL-GAC10/NL-GAC18 Umami Micom Rice Cooker &amp; Warmer Operating Instructions</a></p> <p>Comprehensive operating instructions for the Zojirushi NL-GAC10 and NL-GAC18 Umami Micom Rice Cooker &amp; Warmer, covering safety precautions, part identification, cooking rice, various menus, timer functions, steaming, slow cooking, recipes, cleaning, maintenance, and troubleshooting.</p>
	<p><a href="#">Zojirushi Automatic Rice Cooker/Steamer Operating Instructions</a></p> <p>This document provides comprehensive operating instructions, safety precautions, and cooking guides for Zojirushi Automatic Rice Cooker/Steamer models NHS-06, NHS-10, and NHS-18. It covers cooking white rice, brown rice, steaming food, dessert recipes, and maintenance.</p>
	<p><a href="#">Zojirushi MICOM Rice Cooker &amp; Warmer NS-WXC10/NS-WXC18 Operating Instructions</a></p> <p>Comprehensive operating instructions for the Zojirushi MICOM Rice Cooker &amp; Warmer models NS-WXC10 and NS-WXC18. Includes important safety precautions, how to cook rice using various menus, timer functions, recipes, cleaning and maintenance, troubleshooting, and specifications.</p>
	<p><a href="#">Zojirushi NP-GBC05 Rice Cooker &amp; Warmer Operating Instructions</a></p> <p>Comprehensive operating instructions for the Zojirushi NP-GBC05 Induction Heating System Rice Cooker &amp; Warmer, covering safety precautions, parts identification, cooking rice with various settings, timer functions, recipes, cleaning, maintenance, and troubleshooting.</p>