

[Manuals.plus](#) /

› [BIGASUO](#) /

› BIGASUO B-506B Remote Control User Manual

BIGASUO B-506B

BIGASUO B-506B Remote Control User Manual

Model: B-506B | Brand: BIGASUO

INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your BIGASUO B-506B Remote Control. Please read this manual thoroughly before using the device to ensure proper functionality and longevity.

The BIGASUO B-506B Remote Control is designed for use with compatible projectors, offering convenient control over various functions from a distance of up to 10 meters. It is constructed from durable ABS material.

PRODUCT OVERVIEW



Figure 1: Front view of the BIGASUO B-506B Remote Control. It is a white rectangular remote with light grey buttons. Key buttons include Power, Mute, Play/Pause, Skip, Volume Up/Down, Menu, Exit, a directional pad with an OK button, and numeric keys (0-9), GOTO, and ZOOM.

Button Functions:

- **Power Button:** Turns the connected projector on or off.

- **Mute Button:** Mutes or unmutes the audio output.
- **Previous Track / Play/Pause / Next Track Buttons:** Control media playback.
- **FLIP Button:** Likely for image rotation or mirroring.
- **VOL- / VOL+ Buttons:** Adjust volume down and up.
- **SOURCE Button:** Selects input source (e.g., HDMI, USB).
- **Directional Pad (Up, Down, Left, Right) and OK Button:** Navigates menus and confirms selections.
- **MENU Button:** Opens the main menu of the projector.
- **EXIT Button:** Exits the current menu or function.
- **Numeric Buttons (0-9):** For direct input or channel selection.
- **GOTO Button:** Likely for jumping to a specific time or chapter in media.
- **ZOOM Button:** Adjusts the display zoom level.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover.
3. Insert two AAA batteries (not included), ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery cover securely.

2. Pairing with Projector (Bluetooth)

The BIGASUO B-506B remote control uses Bluetooth connectivity. Follow these steps to pair it with your compatible projector:

1. Ensure your projector is powered on and within 10 meters of the remote control.
2. Navigate to the Bluetooth settings menu on your projector. Refer to your projector's user manual for specific instructions on accessing Bluetooth settings.
3. On the remote control, press and hold the **OK** button and the **MENU** button simultaneously for approximately 3-5 seconds until an indicator light on the remote (if present) begins to flash, indicating pairing mode.
4. On your projector, select "BIGASUO B-506B" or a similar device name from the list of available Bluetooth devices.
5. Confirm the pairing on your projector. The indicator light on the remote should stop flashing and remain solid (or turn off) once successfully paired.

Note: If pairing fails, ensure the remote is close to the projector and repeat the steps. Some projectors may require a different pairing procedure; consult your projector's manual.

OPERATING INSTRUCTIONS

Once paired, the remote control can be used to operate your projector. Point the remote control towards the projector for optimal signal transmission, although Bluetooth connectivity generally does not require direct line-of-sight.

- **Power On/Off:** Press the **Power** button.
- **Navigation:** Use the directional arrow buttons (Up, Down, Left, Right) to move through menus and options. Press **OK** to confirm a selection.
- **Volume Control:** Press **VOL+** to increase volume and **VOL-** to decrease volume. Press **Mute** to toggle mute.
- **Source Selection:** Press the **SOURCE** button to cycle through available input sources (e.g., HDMI 1, HDMI 2, USB,

AV).

- **Menu Access:** Press the **MENU** button to open the projector's main settings menu. Use the directional pad to navigate and **OK** to select.
- **Exiting Menus:** Press the **EXIT** button to close the current menu or return to the previous screen.
- **Numeric Input:** Use the numeric buttons (0-9) for direct input, such as entering passwords or selecting specific channels/options if supported by your projector.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If not used for an extended period, remove the batteries to prevent leakage.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or low batteries.	Replace batteries with new ones.
Remote not responding.	Not paired with projector.	Follow the "Pairing with Projector" steps in the Setup section.
Limited range or intermittent response.	Obstructions between remote and projector; distance too far.	Ensure no large objects block the signal. Move closer to the projector (within 10 meters).
Specific buttons not working.	Button malfunction or compatibility issue.	Check if the button is physically stuck. Ensure your projector supports the specific function of that button.

SPECIFICATIONS

- **Model:** B-506B
- **Brand:** BIGASUO
- **Connectivity Technology:** Bluetooth
- **Compatible Devices:** Projector
- **Maximum Range:** 10 Meters
- **Number of Buttons:** 25
- **Material:** ABS
- **UPC:** 756029707023
- **Manufacturer:** BIGASUO
- **Release Date on Amazon.com.be:** April 16, 2022

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your BIGASUO projector or visit the official BIGASUO website. Keep your purchase receipt for warranty claims.

For further assistance, you may contact BIGASUO customer service through their official channels.

© 2024 BIGASUO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question