

INSE S6T

INSE S6T Cordless Stick Vacuum Cleaner User Manual

Model: S6T (S6 Series) | Brand: INSE

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance and retain them for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner).
- Do not use without dust bin and/or filters in place.
- Turn off all controls before unplugging.
- Store the appliance indoors. Put away after use to prevent accidents.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

2. PRODUCT OVERVIEW

2.1 Package Contents

The INSE S6T Cordless Stick Vacuum Cleaner comes with a comprehensive set of components and accessories to ensure versatile cleaning.



Image: The INSE S6T vacuum cleaner shown with its main body, extension wand, motorized brush head, and various attachments including a flexible hose, crevice tool, and 2-in-1 brush.



Image: A numbered diagram illustrating the various components included with the INSE S6T vacuum cleaner, such as the main motor, extension tube, brush head, and different nozzles.

2.2 Key Features

- **Super Long Battery Life:** Up to 40 minutes in standard mode and 20 minutes in MAX mode with a removable battery for convenient recharging.
- **High Suction Power:** Equipped with a 250W digital motor, offering two suction levels: Standard (15000 Pa) and MAX (25000 Pa) for thorough cleaning.
- **Large Dustbin:** Features a 1.2L dustbin, reducing the frequency of emptying.
- **10-in-1 Versatility:** Includes a flexible hose, retractable metal tube, long crevice tool, 2-in-1 brush, motorized brush, and mini motorized brush, adaptable for various surfaces and cleaning tasks.
- **6-Level Fully Sealed Filtration System:** Utilizes a double cyclone and high-performance double filters to capture 99.99% of microscopic dust, preventing secondary pollution.
- **Lightweight, Quiet, and Flexible:** The main motor weighs only 1.5 kg (3.3 lb), designed for effortless single-handed cleaning. Operates at a low noise level of 65 dB, suitable for households with babies and pets.
- **LED Electric Brush:** The flexible brush head with LED lights illuminates dust under furniture and beds for improved visibility.

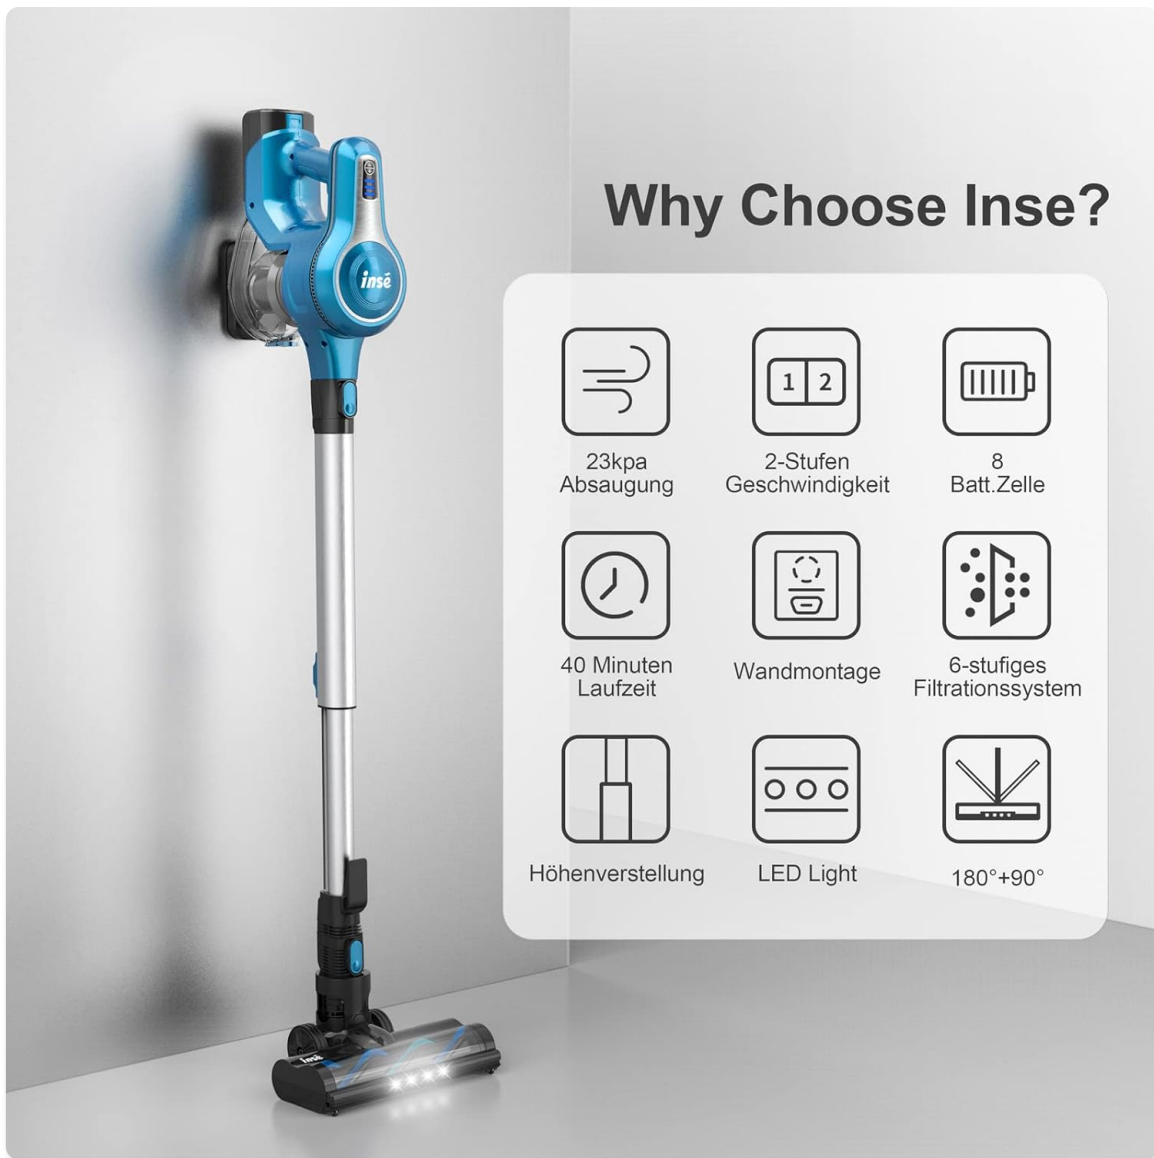


Image: A visual summary of the INSE S6T's key features, including suction power, speed settings, battery cells, runtime, wall mount, filtration system, height adjustment, LED light, and flexible joint.

3. SETUP

3.1 Assembly

Follow these steps to assemble your INSE S6T vacuum cleaner:

1. Insert the extension wand into the main motor unit until it clicks into place.
2. Attach the motorized brush head to the other end of the extension wand, ensuring it is securely fastened.
3. For handheld use, you can directly attach desired accessories (e.g., crevice tool, 2-in-1 brush, flexible hose) to the main motor unit.

10 in 1 Kabelloser Staubsauger

Lange Arbeitszeit | Gründliche Reinigung | Hohe Kapazität

25K
Pa

Große Saubleistung Digitaler Motor

250
W

2500
mAh

Hohe Kapazität

5
Hour

Schnellladung

45
Min

Standart Modus

20
Min

Maximal Modus

99.99
%

Hocheffiziente
Filtration

1.2
L

Staubbox



Image: An illustration showing various configurations of the INSE S6T vacuum cleaner, demonstrating how different attachments can be combined for specific cleaning needs, from a full stick vacuum to a compact handheld unit.

3.2 Charging the Battery

Before first use, fully charge the battery. The removable battery allows for flexible charging options.

- To charge the battery while attached to the vacuum: Plug the charger into a wall outlet and connect the charging cable to the charging port on the main motor unit.
- To charge the removable battery separately: Detach the battery from the main unit by pressing the release button. Connect the charger directly to the battery pack.
- The battery indicator lights will show the charging status. Ensure the battery is fully charged before use for optimal performance.



Image: A close-up view of the INSE S6T's main unit, highlighting the easily removable battery pack, which can be detached for convenient charging or replacement.

4. OPERATING THE VACUUM CLEANER

4.1 Power Modes

The INSE S6T offers two power modes to suit different cleaning needs:

- **Standard Mode (15000 Pa):** Ideal for everyday cleaning of dust, crumbs, and light debris on hard floors and low-pile carpets. Provides up to 40 minutes of runtime.
- **MAX Mode (25000 Pa):** Provides maximum suction power for deep cleaning, tackling stubborn dirt, pet hair, and debris embedded in carpets. Offers up to 20 minutes of runtime.

To switch between modes, press the power mode button located on the main unit.



Leistungsstarke Saugkraft auf Teppichen und Böden

Image: The INSE S6T vacuum cleaner demonstrating its strong suction power on both carpeted and hard floor surfaces, effectively picking up debris.

4.2 Using Attachments and Maneuverability

The versatile attachments allow for comprehensive cleaning throughout your home and car.

- **Motorized Brush Head:** Best for floors and carpets. The flexible joint allows for easy maneuverability around furniture and into tight spaces.
- **Long Crevice Tool:** Perfect for reaching narrow gaps, corners, and high ceilings.
- **2-in-1 Brush:** Combines a wide nozzle and a brush for cleaning upholstery, curtains, and delicate surfaces.
- **Flexible Hose:** Ideal for cleaning car interiors, tight corners, and awkward angles.

- **Mini Motorized Brush:** Designed for pet hair and deep cleaning on upholstery and stairs.



Image: A collage showing the INSE S6T vacuum cleaner being used in multiple scenarios: reaching high areas, cleaning car interiors with the flexible hose, dusting keyboards, cleaning window sills, and vacuuming beds with the mini motorized brush.



Easy to maneuver

Rotable Brush Head & Flexible Joint
Flexible, multi-angle for multi-barrier floor cleaning

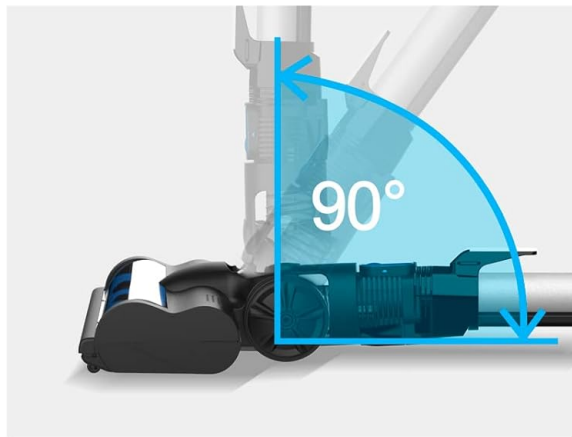


Image: A diagram illustrating the flexible movement of the INSE S6T's brush head, showing its ability to rotate 150 degrees horizontally and 90 degrees vertically for easy maneuvering under furniture and around obstacles.



Image: The LED lights on the INSE S6T's brush head illuminating dust and debris under a sofa, demonstrating its effectiveness in dark or hard-to-see areas.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

5.1 Emptying the Dustbin

Empty the 1.2L dustbin regularly, especially when the MAX line is reached, to maintain strong suction.

- Hold the main unit over a trash can.
- Press the dustbin release button to open the bottom flap and empty the contents.
- Close the flap securely until it clicks.



Image: A visual representation of the INSE S6T's 1.2L dustbin being emptied with a single button press, showing debris falling into a trash receptacle.

5.2 Cleaning Filters

The 6-level filtration system requires regular cleaning to prevent clogging and maintain air quality.

- Twist and pull to remove the inner filter from the dustbin.
- Tap the filter gently to remove loose dust. For a more thorough clean, rinse the filter under cold running water.

- Ensure the filter is completely dry before reinserting it into the dustbin. Allow at least 24 hours for air drying.

5.3 Cleaning the Brush Roll

Periodically check the brush roll for tangled hair or debris that may reduce cleaning effectiveness.

- Turn off the vacuum and detach the brush head.
- Use a coin or a flat tool to unlock the brush roll cover.
- Remove the brush roll. Use scissors or the provided cleaning tool to cut and remove any tangled hair or fibers.
- Reinsert the brush roll and secure the cover.



Image: A hand using a specialized tool to remove tangled hair and debris from the brush roll of the INSE S6T vacuum cleaner, demonstrating the ease of maintenance.

6. TROUBLESHOOTING

If you encounter any issues with your INSE S6T vacuum cleaner, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely inserted.
Low suction power.	Dustbin is full, filter is clogged, or blockage in hose/brush.	Empty dustbin, clean filters, check for and remove blockages.
Brush roll not spinning.	Hair or debris tangled in brush roll, or brush roll is jammed.	Clean brush roll, remove any obstructions.
Unusual noise during operation.	Blockage in the air path or foreign object in the brush head.	Turn off and inspect all parts for blockages or foreign objects.

Problem	Possible Cause	Solution
Battery life is shorter than expected.	Using MAX mode frequently, or battery needs replacement.	Use Standard mode for longer runtime. Consider battery replacement if performance significantly degrades over time.

7. SPECIFICATIONS

Feature	Specification
Brand	INSE
Model Number	S6T
Color	Blue
Power	250 Watts
Voltage	250 Volts
Suction Power	Standard: 15000 Pa, MAX: 25000 Pa
Dustbin Capacity	1.2 Liters
Battery Life	Up to 40 minutes (Standard Mode)
Noise Level	65 dB
Item Weight	1.5 Kilograms
Filter Type	Fabric
Special Features	Lightweight, Sealed, Bagless
Included Components	Filter, Brushes, User Manual

8. WARRANTY INFORMATION

INSE products are manufactured to the highest quality standards. For specific warranty details, including coverage period and terms, please refer to the warranty card included in your product packaging or visit the official INSE website. Please retain your proof of purchase for any warranty claims.






9. CUSTOMER SUPPORT

If you have any questions, require technical assistance, or need to order replacement parts, please contact INSE customer support. Contact information can typically be found on the product packaging, the official INSE website, or the warranty card.

For the most up-to-date support resources, please visit the INSE official website or refer to the contact details provided with your purchase.

© 2024 INSE. All rights reserved.

Related Documents - S6T

	<p>INSE S6T/S6P Pro Cordless Vacuum Cleaner Quick-start Guide</p> <p>A quick-start guide for the INSE S6T and S6P Pro cordless vacuum cleaners, covering product components, assembly, maintenance tips, and company information.</p>
	<p>INSE S9X Cordless Vacuum Cleaner User Manual</p> <p>Comprehensive user manual for the INSE S9X Cordless Vacuum Cleaner, detailing setup, operation, maintenance, and troubleshooting for optimal performance on various floor types.</p>
	<p>INSE Cordless Stick Vacuum Cleaner User Manual - S6T/S6P Pro</p> <p>User manual for the INSE Cordless Stick Vacuum Cleaner models S6T, S6P Pro, S650, S660, and S670. Includes safety instructions, assembly, operation, charging, maintenance, technical specifications, and troubleshooting.</p>
	<p>INSE S6T / S6P Pro Cordless Stick Vacuum Cleaner User Manual</p> <p>This user manual provides comprehensive instructions for operating, maintaining, and troubleshooting the INSE S6T and S6P Pro cordless stick vacuum cleaners. Learn about assembly, charging, accessories, and safety precautions for optimal performance.</p>
	<p>INSE N6 Cordless Vacuum Cleaner Quick Start Guide</p> <p>Quick start guide for the INSE N6 Cordless Vacuum Cleaner, covering assembly, charging, operation, maintenance, and troubleshooting for optimal performance.</p>



[INSE Cordless Stick Vacuum Cleaner User Manual - S6T/S6P Pro](#)

Comprehensive user manual for the INSE Cordless Stick Vacuum Cleaner, covering models S6T, S6P Pro, S650, S660, and S670. Includes detailed warranty information, safety precautions, product overview, assembly, operation, charging, battery indicators, technical specifications, and accessory usage guides.