Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Elekpia /
- > Elekpia Universal LG Smart TV Remote Control Instruction Manual

Elekpia Elekpia-Universal-LG

Elekpia Universal LG Smart TV Remote Control Instruction Manual

Model: Elekpia-Universal-LG

1. Introduction

This manual provides instructions for the Elekpia Universal Remote Control, designed for use with various LG Smart TV models, including LCD, LED, OLED, and 3D ThinQ TVs. This remote offers a direct replacement for several LG original remote models, ensuring broad compatibility and ease of use without requiring complex setup procedures.

2. PRODUCT FEATURES

- Broad Compatibility: Works with a wide range of LG Smart TV models, including AKB75095307, AKB75375604, AKB74915305, AKB75675304, AKB76040302, AKB76037601, AKB75675313, and more.
- No Programming Required: Operates immediately after battery installation.
- **Full Functionality:** Provides access to all standard TV remote functions, including volume, channel, navigation, and dedicated app buttons.
- Ergonomic Design: Constructed from high-quality ABS plastic for comfortable handling and durability.
- Quick Access Buttons: Features dedicated buttons for popular streaming applications.

3. PACKAGE CONTENTS

- 1 x Elekpia Universal LG Smart TV Remote Control
- Instruction Manual (this document)

Note: Batteries are not included and must be purchased separately.

4. BATTERY INSTALLATION

To begin using your Elekpia Universal LG Smart TV Remote Control, follow these steps to install the batteries:

- 1. Locate the battery compartment on the back of the remote control.
- 2. Press down on the latch and slide the battery cover downwards to open it.
- 3. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
- 4. Slide the battery cover back into place until it clicks securely.

Important: No programming or pairing is required. The remote is ready for use immediately after battery installation.



Image: Back view of the remote control, illustrating the battery compartment cover. The cover features a textured surface and an arrow indicating the slide direction for opening.

5. Basic Operation

The Elekpia Universal LG Smart TV Remote Control features a standard layout for intuitive operation. Below are descriptions of key buttons and their functions:





Image: Front view of the Elekpia Universal LG Smart TV Remote Control. The remote is black with clearly labeled buttons for power, numbers, volume, channel, navigation, and dedicated app access.

- Power (): Turns the TV on or off.
- Number Buttons (0-9): Directly select channels or input numerical data.
- VOL (+/-): Adjusts the volume level.
- CH (Page Up/Down): Changes TV channels sequentially.
- Navigation Pad (Up, Down, Left, Right, OK): Navigates through menus and confirms selections.
- Back (^): Returns to the previous screen or menu.
- **Home** (△): Accesses the TV's Smart Home dashboard.
- Netflix: Direct access to the Netflix application.
- Quick Access / FAV: Provides quick access to frequently used functions or favorite channels.
- Settings (*): Opens the TV's settings menu.
- Input (): Selects the input source (HDMI, AV, etc.).

6. CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these care guidelines:

- Cleaning: Wipe the remote with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- Storage: Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid Drops: Protect the remote from physical impact, as drops can damage internal components.
- Liquid Exposure: Keep the remote away from liquids to prevent damage.

7. TROUBLESHOOTING

If you encounter issues with your Elekpia Universal LG Smart TV Remote Control, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote is not working or unresponsive.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote works intermittently.	Weak batteries or obstruction between remote and TV.	Replace batteries. Ensure a clear line of sight to the TV's IR receiver.
Certain buttons do not function.	Button stuck or internal damage.	Gently press the button multiple times. If the issue persists, the remote may be damaged.
Remote does not control the TV.	Remote is not compatible with the specific TV model.	Verify your LG TV model is listed among the compatible models (e.g., AKB75095307, AKB75375604, etc.).

8. Specifications

Model Number: Elekpia-Universal-LG

• Brand: Elekpia

• Compatible Devices: LG Smart TVs (LCD, LED, OLED, 3D ThinQ)

• Power Source: 2 x AAA Batteries (not included)

• **Dimensions:** 6.65 x 1.75 x 0.75 inches (16.9 x 4.4 x 1.9 cm)

• Item Weight: 2.89 ounces (82 grams)

• Material: High-quality ABS Plastic

• Color: Black

• Special Features: Ergonomic, No Programming Required, Universal

9. WARRANTY AND SUPPORT

This Elekpia Universal LG Smart TV Remote Control is designed for reliable performance. For specific warranty details, please refer to the retailer's return policy or contact the point of purchase. General support for product functionality can often be found through the retailer or by consulting this instruction manual. For further assistance, please contact your product vendor.

© 2023 Elekpia. All rights reserved.

Related Documents - Elekpia-Universal-LG



Universal Orlando Resort Sensory Guide for Guests with Cognitive Disabilities

A planning guide for guests visiting Universal Orlando Theme Parks, offering information and tips for guests with cognitive disabilities to ensure a comfortable and safe visit.



One For All URC 6810 Universal Remote Setup Guide | Learn & Code Programming

Comprehensive setup guide for the One For All URC 6810 universal remote. Learn how to program your remote using learning or code methods, control multiple devices, and utilize advanced features.



RR1001 Hospitality Universal Remote Instruction Manual

This document provides instructions for the RR1001 Hospitality Universal Remote. It covers direct code entry, code search methods, automatic code search, brand button programming, code identification, factory reset, sleep timer functions, and key lock setup. An extensive list of TV brands and their corresponding remote codes is also included.

