

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [COSTWAY](#) /

› [COSTWAY Wooden Play Kitchen Instruction Manual, Model B09M9TT4QB](#)

COSTWAY B09M9TT4QB

COSTWAY Wooden Play Kitchen Instruction Manual

MODEL: B09M9TT4QB

Introduction

This manual provides instructions for the assembly, operation, and maintenance of your COSTWAY Wooden Play Kitchen. Please read this manual thoroughly before assembly and use to ensure safe and proper operation. Keep this manual for future reference.

Praktische Fähigkeiten Üben



Image: The COSTWAY Wooden Play Kitchen, showcasing its design and features in a play setting.

Safety Information

- Recommended Age:** This play kitchen is suitable for children aged 3 to 7 years.
- Material Safety:** Constructed from durable MDF boards with an environmentally friendly coating, ensuring 100% safety for children.
- Injury Prevention:** The design incorporates smooth, rounded edges to prevent accidental injury during play.
- Adult Supervision:** Adult supervision is recommended at all times while children are playing with this toy.
- Choking Hazard:** Small parts may be present before assembly. Keep away from young children until fully assembled.

Package Contents

Please verify that all components listed below are present and undamaged before beginning assembly.

- 1 x Play Kitchen unit
- 1 x Pot with lid

- 1 x Pan with lid
- 1 x Spoon
- 1 x Spatula
- 1 x Sieve
- 1 x Instruction Manual



Image: A visual representation of the accessories included with the play kitchen.

Assembly Instructions

The COSTWAY Wooden Play Kitchen requires assembly. A detailed, step-by-step instruction manual is included in the package. Please follow the diagrams and instructions carefully to ensure correct and secure assembly. All necessary hardware is provided.

1. Unpack all components and lay them out on a clean, flat surface.
2. Identify all parts and hardware according to the parts list in the included manual.
3. Follow the numbered steps in the manual to attach each piece.
4. Ensure all screws and fasteners are tightened securely, but do not overtighten.
5. Once assembled, check the stability of the kitchen before allowing children to play.

Operating Instructions

This play kitchen is designed to provide a realistic cooking experience, fostering imagination and creativity in children.

Stove

The stove features two burners with rotating knobs. Children can turn the knobs to simulate adjusting heat, and place the included pots and pans on the burners for pretend cooking.



Image: Detail of the stove area, showing the functional knobs and burners.

Sink

The sink area includes a faucet with rotating handles, allowing children to engage in pretend washing of dishes or play food. The sink basin is removable for easy cleaning.



Image: A child demonstrating the use of the sink and faucet.

Oven and Storage

The oven door opens to reveal internal shelving, perfect for pretend baking or storing play food and

accessories. An additional storage cabinet with two levels is also available, encouraging children to keep their play area tidy.



Image: Close-up of the oven and storage compartments, highlighting their functionality.

Realistisches Kochspielzeug für die Küche



Image: A comprehensive view of the various realistic features of the play kitchen.

Maintenance

Regular maintenance will help prolong the life of your play kitchen.

- Cleaning:** Wipe all surfaces with a soft, damp cloth. Avoid using abrasive cleaners, harsh chemicals, or excessive water, as these can damage the wood and finish.
- Drying:** Ensure the play kitchen is completely dry after cleaning to prevent moisture damage.
- Inspection:** Periodically check all screws and connections to ensure they are tight and secure. Tighten any loose fasteners immediately.
- Storage:** Store the play kitchen in a dry environment, away from direct sunlight or extreme temperatures, to prevent warping or fading.

Troubleshooting

If you encounter any issues with your play kitchen, please refer to the following common solutions:

Loose Parts

If any components become loose during play, immediately stop use and tighten all screws and connections. Regular checks can prevent this issue.

Missing or Damaged Parts

If you discover any missing or damaged parts upon unboxing or during assembly, please contact COSTWAY customer support for assistance. Do not attempt to assemble or use the product with damaged or missing parts.

Specifications

Feature	Detail
Material	MDF boards
Product Dimensions (L x W x H)	60 x 33 x 100 cm
Product Weight	8.2 kg
Recommended Age	3-7 years
Color	As shown in images

Technische Daten:

Spezifikation:

Material: MDF-Platte

Größe: 60 x 33 x 100 cm

Altersempfehlung: 3+

Artikelgewicht: 82 kg



Image: Detailed technical data and dimensions of the play kitchen.

Warranty and Support

For specific warranty information, details on returns, or to contact customer support, please refer to the documentation included with your purchase or visit the official COSTWAY website. Please have your model number (B09M9TT4QB) ready when contacting support.