

[Manuals.plus](#) /

› [Vente-unique](#) /

› Vente-unique NAZARIO Aluminum Swing Gate: Installation and User Manual

Vente-unique NAZARIO

Vente-unique NAZARIO Aluminum Swing Gate

INSTALLATION AND USER MANUAL

Introduction

This manual provides essential instructions for the assembly, operation, and maintenance of your Vente-unique NAZARIO aluminum swing gate. Designed for durability and modern aesthetics, this gate offers a secure and stylish entrance solution. Please read these instructions carefully before beginning installation or use to ensure proper function and longevity of your product.

The NAZARIO gate is constructed from aluminum, offering excellent resistance to weather and requiring minimal daily maintenance. Its design allows for opening inwards or outwards, with a maximum opening angle of 100° (or 90° if installed between two posts).

Setup and Installation

The Vente-unique NAZARIO gate is designed for self-assembly. A detailed assembly instruction manual is included with your product. Please follow these instructions precisely for correct installation.

- **Preparation:** Ensure the installation area is clear and level. Verify all components are present before starting assembly.
- **Assembly:** Refer to the provided assembly guide for step-by-step instructions on connecting the gate panels and hinges.
- **Mounting:** The gate can be mounted to existing posts or new posts. Ensure posts are securely anchored and plumb. Minimal adjustments are required for installation.
- **Opening Direction:** Determine whether the gate will open inwards or outwards based on your property layout and preferences. The maximum opening angle is 100°. If installed between two fixed posts, the maximum opening angle is 90°.

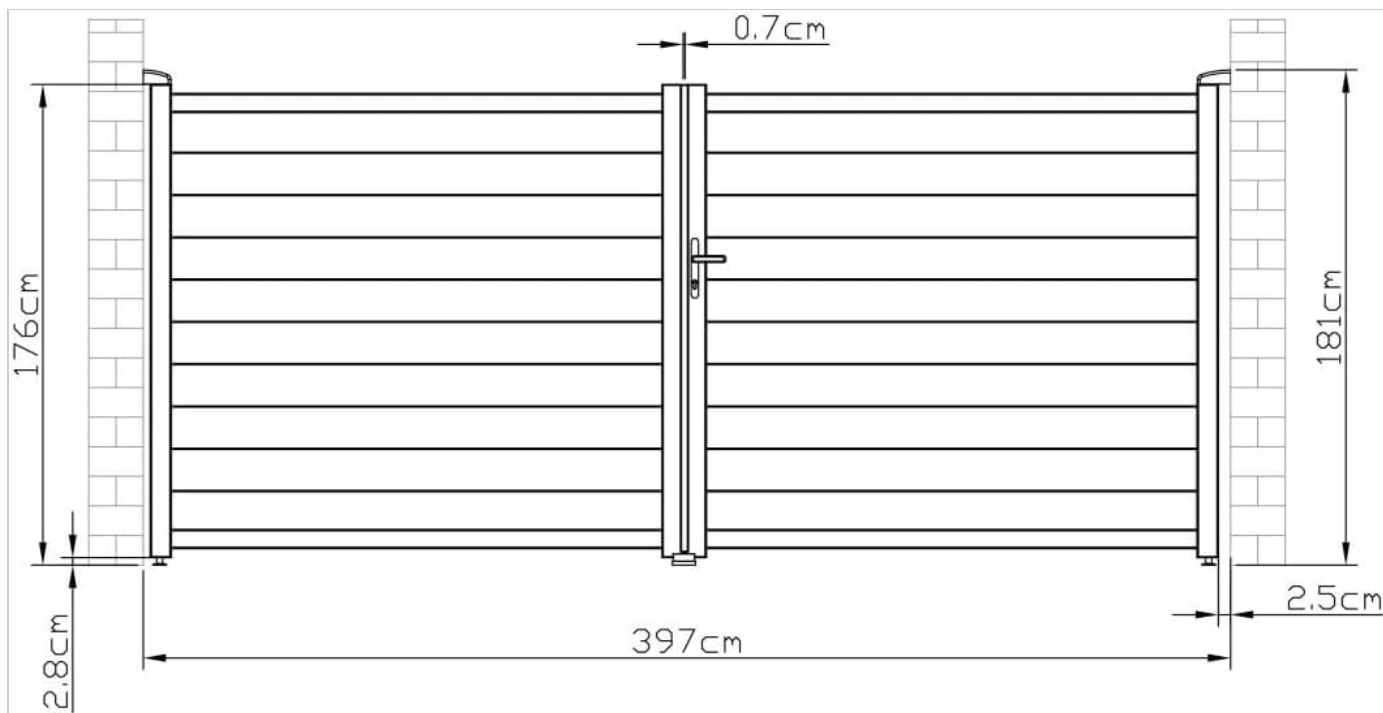


Image: Technical drawing showing the dimensions of the NAZARIO swing gate, including length (397 cm), height (181 cm), and post details. This diagram is essential for planning the installation space.



Image: The Vente-unique NAZARIO swing gate shown installed with concrete posts, illustrating a typical setup scenario. The gate panels are closed, presenting a solid barrier.

Operating Instructions

Your NAZARIO swing gate is designed for straightforward manual operation, with an option for motorization.

- **Manual Operation:** To open or close the gate, use the integrated handles. Ensure the gate moves freely without obstruction.
- **Locking Mechanism:** The gate is equipped with handles and a lock, including a key for security. Always ensure the gate is properly locked when closed to prevent unauthorized access.
- **Motorization (Optional):** The NAZARIO gate is compatible with motorization systems. If you choose to motorize your gate, it can accommodate a RIVE swing gate motor. Refer to the motor's specific instruction manual for installation and operation details.



Image: The Vente-unique NAZARIO swing gate in a partially open position, demonstrating its operational movement. The gate panels are shown swinging open, revealing a driveway.

Maintenance

The NAZARIO aluminum gate is designed for low maintenance, ensuring long-lasting performance and appearance.

- **Cleaning:** A simple damp cloth is sufficient for cleaning the gate's surface. Avoid abrasive cleaners or harsh chemicals that could damage the thermolacquered finish.
- **Inspection:** Periodically inspect hinges, locks, and any moving parts for wear or damage. Ensure all fasteners are tight.
- **Lubrication:** If the hinges or lock mechanism become stiff, apply a suitable lubricant designed for outdoor use.
- **Aluminum Benefits:** Aluminum is naturally resistant to rust and corrosion, making it highly durable and suitable for various weather conditions without extensive upkeep.

Troubleshooting

Should you encounter any issues with your NAZARIO gate, consider the following common solutions:

- **Gate not opening/closing smoothly:**
 - Check for obstructions in the gate's path.
 - Inspect hinges for dirt or damage; clean and lubricate if necessary.
 - Verify that the gate posts are still plumb and level.
- **Lock mechanism stiff or not engaging:**
 - Apply a graphite-based lubricant to the lock cylinder and latch mechanism.
 - Ensure the gate is fully closed and aligned before attempting to lock.
- **Motorized gate issues (if applicable):**
 - Refer to the specific troubleshooting section of your motor's instruction manual.
 - Check power supply and connections to the motor.

If problems persist, please contact Vente-unique customer support for assistance.

Specifications

Feature	Detail
Model	NAZARIO
Type	Swing Gate (Battant)
Material	Aluminum
Color	Anthracite (RAL 7016) / Black
Dimensions (L x W x H)	392 cm x 4.6 cm x 173 cm
Weight	75 Kilograms
Opening Angle	Max 100° (90° between posts)
Motorization Compatibility	RIVE swing gate motor
Included Hardware	Handles with lock (key included), door stop, general hardware

Warranty and Support

For information regarding warranty coverage, spare parts availability, or technical support, please refer to your purchase documentation or contact Vente-unique customer service directly. Ensure you have your product model (NAZARIO) and purchase details available when contacting support.

Vente-unique Customer Service: [Visit Vente-unique Store on Amazon](#)



