

Dilwe Dilwe3w476sk1ie861-12

Dilwe 2.4G Wireless Retro Keyboard and Mouse Combo User Manual

Model: Dilwe3w476sk1ie861-12

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Dilwe 2.4G Wireless Retro Keyboard and Mouse Combo. Please read this manual thoroughly before using the product to ensure proper functionality and longevity.

The keyboard features 104 round keys with a retro typewriter style, designed for comfortable typing. The accompanying mouse has 5 buttons for efficient navigation. Both devices connect wirelessly via a 2.4G USB receiver.

PACKAGE CONTENTS

- 1 x Wireless Keyboard
- 1 x Wireless Mouse
- 1 x USB Receiver
- 1 x User Manual



Image: The Dilwe wireless keyboard and mouse combo, along with the small USB receiver, laid out on a pink desk mat.

SPECIFICATIONS

Item Type	Keyboard Mouse Combo
Material	ABS
Keyboard Keys	104 Keys
Mouse Buttons	5 Buttons
System Requirements	Windows XP, Windows 7, Windows 8, Windows 10
Multimedia Function Key	Yes
Interface	USB (2.4G Wireless)
Keyboard Battery	1 x AA Battery (not included)
Mouse Battery	1 x AA Battery (not included)
Color	Beige (Sweet Milk Tea Color Mixed Color)

Model Number	Dilwe3w476sk1ie861-12
---------------------	-----------------------

SETUP

1. Installing Batteries

The keyboard and mouse require AA batteries (not included).

For the Mouse:

1. Open the battery compartment cover on the underside of the mouse.
2. Insert one AA battery, ensuring correct polarity (+/-).
3. Replace the cover.



Image: A close-up view of the Dilwe wireless mouse, showing its ergonomic shape and scroll wheel.

For the Keyboard:

1. Remove the battery compartment cover on the underside of the keyboard.
2. Insert one AA battery, ensuring correct polarity (+/-).
3. Replace the cover.

Your browser does not support the video tag.

Video: A demonstration of installing batteries into a similar wireless keyboard and mouse combo and connecting the USB receiver.

2. Connecting the Receiver

1. Locate the USB receiver, typically stored in the mouse's battery compartment or a dedicated slot.
2. Plug the USB receiver into an available USB port on your computer.
3. The system will automatically detect and install the necessary drivers.
4. Once installed, the keyboard and mouse are ready for use.

OPERATING INSTRUCTIONS

General Use

The keyboard and mouse are designed for plug-and-play functionality. After successful setup, they should operate immediately. No additional software or drivers are typically required for basic functions.



Image: A top-down view of the Dilwe wireless keyboard and mouse, showcasing their retro design and color scheme on a desk.

Multimedia Function Keys

The keyboard includes multimedia function keys (F1-F12) that can be accessed by pressing the **Fn** key simultaneously with the desired function key. These keys provide quick access to media controls, volume adjustments, and other common functions.



Image: A close-up of the Dilwe keyboard's round, retro-style keys, highlighting the different shades of pink and beige.

Ergonomic Design

The keyboard features an adjustable bracket at the bottom, allowing you to set a comfortable typing angle. This ergonomic design helps reduce wrist strain during extended use.



Image: A side view of the Dilwe keyboard, illustrating its adjustable feet for ergonomic positioning, alongside the matching mouse.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the keyboard and mouse. For stubborn dirt, a slightly damp cloth with mild soap can be used, ensuring no liquid enters the devices.
- **Battery Replacement:** Replace batteries when performance degrades (e.g., delayed response, intermittent connection). Always use new AA batteries and dispose of old batteries responsibly.
- **Storage:** When not in use for extended periods, remove batteries to prevent leakage. Store in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Solution
---------	----------

Keyboard/Mouse not responding	◦ Ensure batteries are correctly installed and not depleted. Replace if necessary. ◦ Verify the USB receiver is securely plugged into a working USB port. ◦ Try plugging the USB receiver into a different USB port. ◦ Restart your computer.
Intermittent connection	◦ Move the keyboard/mouse closer to the USB receiver. ◦ Ensure there are no large metal objects or other wireless devices interfering with the signal. ◦ Replace batteries.
Keys not typing correctly	◦ Check if the correct language layout is selected in your operating system settings. ◦ Clean under the keycaps if debris is suspected.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Dilwe website. Keep your purchase receipt as proof of purchase for warranty claims.