

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [vidaXL](#) /

› [vidaXL Washing Machine Cabinet White - Instruction Manual Model 3082008](#)

vidaXL 3082008

vidaXL Washing Machine Cabinet White - Instruction Manual

PRODUCT OVERVIEW

This manual provides instructions for the assembly, use, and maintenance of your new vidaXL Washing Machine Cabinet, Model 3082008. This cabinet is designed to provide optimal additional storage space in your bathroom or laundry room, featuring a clean and minimalist design that integrates seamlessly into various decor styles. Constructed from durable engineered wood, it offers a practical solution for organizing laundry essentials, cleaning products, and toiletries.



Figure 1: Fully assembled vidaXL Washing Machine Cabinet in a white bathroom setting, showcasing its design and storage capabilities.

SAFETY INFORMATION

General Safety Warnings

- Read all instructions carefully before assembly and use.
- Keep children and pets away from the assembly area. Small parts can be a choking hazard.
- Use appropriate tools as specified in the assembly section.
- Do not overload the cabinet shelves. Distribute weight evenly to prevent tipping.
- Ensure the cabinet is placed on a stable, level surface.
- For added stability and safety, especially in households with children, it is recommended to secure the cabinet to a wall using appropriate hardware (not always included).

PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning assembly. If any parts are

missing or damaged, contact vidaXL customer support for assistance.

Typical Components Include:

- Various engineered wood panels (sides, top, bottom, shelves, doors)
- Assembly hardware (screws, dowels, cam locks, hinges, handles)
- Back panel
- Instruction manual (this document)

ASSEMBLY INSTRUCTIONS

Tools Required

- Phillips head screwdriver
- Hammer (for dowels)
- Measuring tape (optional, for placement)

Step-by-Step Assembly

1. **Unpack and Identify Parts:** Lay out all panels and hardware on a clean, soft surface to prevent scratches. Refer to the included parts list to identify each component.
2. **Assemble the Lower Cabinet Base:** Connect the side panels to the bottom panel and the central support using the provided hardware (dowels, screws, cam locks). Ensure all connections are secure.
3. **Install Lower Cabinet Doors:** Attach hinges to the lower cabinet doors and then to the cabinet frame. Adjust hinges as needed for proper door alignment.
4. **Assemble the Upper Cabinet Unit:** Construct the upper cabinet frame, including the side panels, top, and internal shelves. Secure all connections.
5. **Install Upper Cabinet Doors:** Attach hinges to the upper cabinet doors and then to the upper cabinet frame. Adjust hinges for proper door alignment.
6. **Attach Upper Unit to Lower Cabinet:** Carefully lift the assembled upper unit and place it onto the lower cabinet. Secure it using the designated connectors or screws to ensure stability.
7. **Install Back Panels:** Secure the back panels to both the upper and lower cabinet sections using small nails or screws.
8. **Attach Handles:** Install the handles onto all cabinet doors.
9. **Wall Mounting (Optional but Recommended):** For enhanced stability, especially in areas with heavy traffic or uneven floors, secure the cabinet to a wall using anti-tip hardware (not always included).



Figure 2: Interior view of the lower cabinet section, illustrating the designated space for a washing machine.



Figure 3: Interior view of the upper cabinet section, demonstrating the various shelves and compartments for storage.



Figure 4: Detailed dimensions of the upper cabinet section, useful for planning placement and understanding internal space.

USAGE INSTRUCTIONS

Placing Your Washing Machine

The lower section of this cabinet is specifically designed to house a standard washing machine. Before placing your machine, ensure its dimensions (width, depth, and height) fit within the internal space of the lower cabinet. Carefully slide the washing machine into the designated compartment. Ensure there is adequate clearance for hoses and power cords at the back.



Figure 5: The cabinet with a washing machine placed inside the lower compartment, demonstrating its intended use.

Storage Optimization

Utilize the various shelves and compartments in the upper section to organize your laundry detergents, fabric softeners, cleaning supplies, toiletries, towels, and other bathroom or laundry room essentials. The design allows for efficient categorization and easy access to frequently used items.

CARE AND MAINTENANCE

Cleaning

To clean the cabinet, wipe surfaces with a soft, damp cloth. Avoid using abrasive cleaners, harsh chemicals, or solvents, as these can damage the engineered wood finish. Dry immediately with a clean cloth to prevent moisture damage.

General Care

- Periodically check all screws, bolts, and fittings to ensure they remain tight. Retighten if necessary.
- Avoid exposing the cabinet to excessive moisture or direct sunlight for prolonged periods to prevent warping or discoloration.

- Do not place hot items directly on the surface without protection.

TROUBLESHOOTING

Common Issues and Solutions

Problem	Possible Cause	Solution
Cabinet feels unstable or wobbly.	Loose connections; uneven floor; not wall-mounted.	Ensure all screws and fittings are tightened. Place the cabinet on a level surface. Consider securing the cabinet to a wall using anti-tip hardware.
Doors do not close properly or are misaligned.	Hinges are not adjusted correctly; obstruction.	Adjust the hinges using a screwdriver until the doors are aligned and close smoothly. Check for any items obstructing the door's path.
Missing parts during assembly.	Packaging error.	Carefully check all packaging materials. If parts are genuinely missing, contact vidaXL customer support with your product model and purchase details.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	vidaXL
Model Number	3082008
Color	White
Material	Engineered wood
Overall Dimensions (L x W x H)	71.5 cm x 71 cm x 181.5 cm
Item Weight	53.5 Kilograms
Special Feature	Highly resistant
Recommended Use	Laundry utensils, storage
Room Type	Bathroom, Laundry Room

WARRANTY AND SUPPORT

For specific warranty information regarding your vidaXL Washing Machine Cabinet, please refer to the documentation provided at the time of purchase or visit the official vidaXL website. For any product support, missing parts, or technical assistance, please contact vidaXL customer service directly. Contact details can typically be found on the manufacturer's website or your purchase invoice.

You can visit the vidaXL brand store for more information:[vidaXL Store](#)

