

Tibuta E100

Tibuta 10-inch Android 13 Tablet User Manual

MODEL: E100

1. Introduction

This manual provides essential information for the proper setup, operation, and maintenance of your Tibuta 10-inch Android 13 Tablet. Designed for versatility, this tablet features a 10.1-inch IPS display, a Quad-core processor, 4GB RAM, 32GB internal storage (expandable), and dual cameras, making it suitable for various daily activities from entertainment to productivity.



Image: The Tibuta 10-inch Android 13 Tablet, showcasing its sleek design and the included protective case.

2. Setup

2.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that the tablet and its protective case are present and undamaged. The package typically includes the tablet, a protective case, and a charging cable.

Large Capacity Battery



8 hours



9 hours



10 hours

Image: The Tibuta tablet with its protective case, ready for use.

2.2 Charging the Tablet

Before first use, fully charge the tablet. Connect the provided USB-C charging cable to the tablet's USB-C port and the other end to a compatible power adapter (not always included) or a computer's USB port. The battery indicator on the screen will show charging status. A full charge typically takes several hours.

2.3 Powering On/Off

- **To Power On:** Press and hold the Power button (located on the side) until the Tibuta logo appears on the screen.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select 'Power off' and confirm.
- **To Restart:** From the power options menu, select 'Restart'.

2.4 Initial Configuration

Upon first power-on, the tablet will guide you through the initial setup process. This includes selecting your language,

connecting to a Wi-Fi network, setting up your Google account, and configuring basic security settings. Follow the on-screen prompts.

2.5 Connecting to Wi-Fi

1. Go to 'Settings' > 'Network & internet' > 'Wi-Fi'.
2. Toggle Wi-Fi 'On'.
3. Select your desired Wi-Fi network from the list.
4. Enter the network password if prompted, then tap 'Connect'.

3. Operating Instructions

3.1 Basic Navigation

The Tibuta tablet utilizes a responsive touchscreen for navigation. Common gestures include:

- **Tap:** To select an item or open an app.
- **Swipe:** To scroll through pages or lists.
- **Pinch-to-Zoom:** To zoom in or out on images or web pages.
- **Long Press:** To access contextual menus or move app icons.

3.2 Camera Usage

Your tablet is equipped with a 5.0MP front camera and an 8.0MP rear camera for photos and video calls.

1. Open the 'Camera' app.
2. Tap the camera switch icon to alternate between front and rear cameras.
3. Tap the shutter button to take a photo or start/stop video recording.

10.1 inch

High IPS screen provides high-quality images with rich colors
Make you have the immersive visual enjoyment.



1280 IPS Full HD Display

Image: The tablet highlighting its dual camera capabilities for capturing moments.

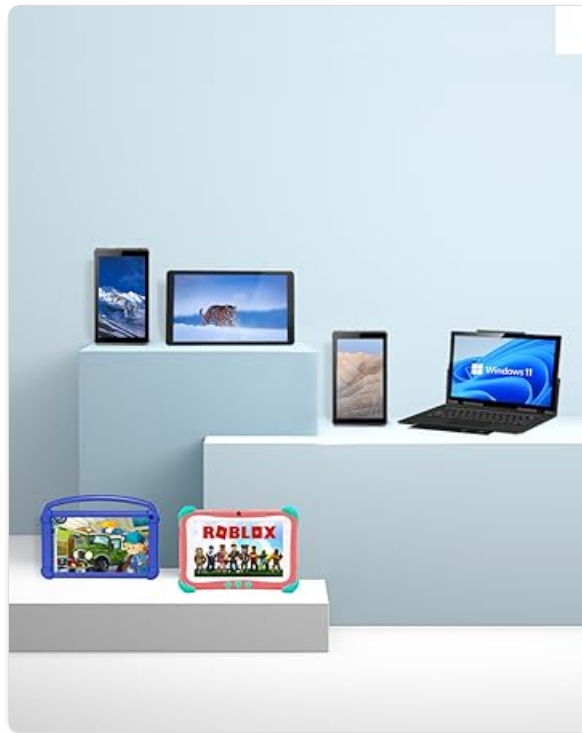


Image: The tablet being used for a video call, showcasing its front camera functionality.

3.3 Audio Features

The tablet includes built-in speakers for audio playback and a 3.5mm stereo headphone jack for private listening. Volume can be adjusted using the physical volume buttons on the side of the tablet.


3.4 Storage Management

The tablet comes with 32GB of internal storage. You can expand this storage up to 128GB using a microSD card (not included). To insert a microSD card, locate the card slot on the side of the tablet and gently push the card in until it clicks into place.

Excellent Performance



Android 11.0

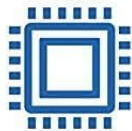

Quad-Core



6000mAh



1280*800IPS



2+32 GB



128GB Expand



2.4G WIFI



5MP+8MP

Image: Illustration of the tablet's 32GB internal storage and expandability up to 128GB, ideal for saving photos and files.

3.5 Applications and Google Mobile Services (GMS)

The tablet runs on Android 13 and is GMS certified, providing full access to the Google Play Store. You can download and install a wide range of applications, including popular social media apps like Facebook, Twitter, YouTube, and TikTok.



Image: The tablet displaying various GMS-certified applications, indicating broad app compatibility.



Image: The tablet in use for diverse activities such as studying, shopping, video calls, reading, and watching movies.

3.6 Battery Life

The 6000mAh battery provides approximately 8 hours for video playback, 9 hours for daily use, and 10 hours for music playback. Actual battery life may vary based on usage patterns and settings.

Save All Your Precious Memories

2GB RAM+**32GB** ROM (expandable up to **128GB**)



Image: Visual representation of the tablet's large battery capacity and estimated usage times for various activities.

4. Maintenance

4.1 Cleaning the Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid using harsh chemicals or abrasive materials.

4.2 Software Updates

Regularly check for and install system updates to ensure optimal performance, security, and access to new features. Go to 'Settings' > 'System' > 'System update' to check for available updates.

4.3 Battery Care

To prolong battery lifespan:

- Avoid exposing the tablet to extreme temperatures (hot or cold).
- Do not let the battery completely drain frequently.
- Use the original charging cable or a certified equivalent.

4.4 Storage Management

To maintain smooth performance, periodically manage your tablet's storage:

- Uninstall unused applications.
- Clear cache data for apps in 'Settings' > 'Apps' > [App Name] > 'Storage & cache'.
- Transfer large files (photos, videos) to external storage or cloud services.

5. Troubleshooting

This section addresses common issues you might encounter with your tablet.

5.1 Device Not Turning On

- Ensure the tablet is sufficiently charged. Connect it to a power source for at least 30 minutes.
- Try a forced restart by holding the Power button for 10-15 seconds.

5.2 Slow Performance

- Close unused background applications.
- Clear app cache and temporary files.
- Ensure sufficient free storage space.
- Restart the tablet periodically.

5.3 Wi-Fi Connectivity Issues

- Toggle Wi-Fi off and on in settings.
- Restart your Wi-Fi router.
- Forget the network and reconnect.

5.4 Charging Problems

- Check if the charging cable and adapter are securely connected.
- Try a different charging cable or power adapter.
- Inspect the charging port for any debris.

5.5 Factory Reset

If issues persist, a factory reset can resolve many software-related problems. **Warning: This will erase all data on your tablet. Back up important data before proceeding.**

1. Go to 'Settings' > 'System' > 'Reset options'.
2. Select 'Erase all data (factory reset)'.
3. Confirm your decision and follow the on-screen instructions.

6. Specifications

Key technical specifications for the Tibuta E100 Tablet:

Feature	Specification
Model Name	E100
Operating System	Android 13
Screen Size	10.1 inches
Screen Resolution	1280 x 800 pixels (IPS)

Processor	1.6 GHz Quad-core
RAM	4 GB
Internal Storage	32 GB
Expandable Storage	Up to 128 GB (microSD)
Rear Camera	8 MP
Front Camera	5 MP
Battery Capacity	6000mAh Lithium Ion
Wireless Connectivity	2.4G WiFi (802.11n), Bluetooth 4.2
Product Dimensions (LxWxH)	8.86 x 11.02 x 2.01 inches



Image: A summary of the tablet's key performance specifications and features.






Image: The tablet's 10.1-inch IPS display, highlighting its high-quality visual output.

7. Warranty and Support

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Tibuta website. You may also contact customer service through the platform where you purchased the product.

© 2024 Tibuta. All rights reserved.

<p>90*135mm 风琴折</p>	<p>Tibuta MasterPad E100 Tablet User Manual and Warranty Information</p> <p>This document provides important safety instructions, legal notices, FCC compliance information, package contents, device presentation, and warranty details for the Tibuta MasterPad E100 tablet.</p>
<p>90*135mm 风琴折</p>	<p>Tibuta MasterPad T100 User Manual and Warranty Information</p> <p>Comprehensive user manual and warranty card for the Tibuta MasterPad T100 tablet, including important safety instructions, getting started guide, and product specifications.</p>
	<p>TIBUTA MasterPad W200 Tablet User Manual and Safety Guide</p> <p>Official user manual and safety guide for the TIBUTA MasterPad W200 tablet, covering package contents, getting started, safety instructions, legal notices, and FCC compliance. Includes detailed information on battery safety, general usage precautions, and regulatory compliance.</p>
	<p>Tibuta W120 Quick Start Guide - Setup and Features</p> <p>Get started with your Tibuta W120 tablet PC. This guide provides essential information on setup, device features, ports, safety guidelines, and keyboard usage.</p>
	<p>Navitech Tibuta MasterPad E100 Tablet Case - Safety and Usage Guidelines</p> <p>Comprehensive safety and usage guidelines for the Navitech Tibuta MasterPad E100 tablet case, covering temperature limits, public use, cleaning, and personal safety precautions in multiple languages.</p>