



[Manuals.plus](#) /

› [Escape](#) /

› [Escape Wireless Stereo Headphones BT945 User Manual](#)

Escape BT945

Escape Wireless Stereo Headphones BT945 User Manual

INTRODUCTION

Thank you for choosing the Escape Wireless Stereo Headphones, model BT945. These headphones are designed to provide a versatile audio experience with multiple listening options, including wireless Bluetooth connectivity, FM radio, 3.5mm auxiliary cable input, and Micro SD card playback. They also feature an integrated microphone for hands-free calling and a foldable design for easy portability. Please read this manual carefully to ensure proper use and maintenance of your headphones.



Image: Escape Wireless Stereo Headphones in red, highlighting key features like wireless connectivity, FM radio, auxiliary input, Micro SD card slot, and foldable design.

PACKAGE CONTENTS

- Escape Wireless Stereo Headphones (BT945)
- USB Charging Cable
- 3.5mm Auxiliary Audio Cable
- User Manual

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Escape headphones.



WIRELESS
SANS FIL

WITH
AVEC FM RADIO



3 OPTIONS
TO PLAY MUSIC | POUR JOUER DE MUSIQUE



WIRELESSLY | SANS FIL



3.5mm AUX CABLE | CÂBLE



MICRO SD CARD | CARTE

Foldable
Pliable



Image: Front view of the Escape Wireless Stereo Headphones, illustrating the overall design and earcups. Control buttons and ports are typically located on the earcups.

Controls and Ports (Typical Locations)

- **Power Button:** Used to turn the headphones on/off and for pairing.
- **Volume Up/Next Track Button:** Increases volume with a short press, skips to next track with a long press.
- **Volume Down/Previous Track Button:** Decreases volume with a short press, goes to previous track with a long press.
- **Multi-function Button (MFB):** Play/Pause, Answer/End Call, Mode Switch.
- **Microphone:** Integrated for hands-free calls.
- **3.5mm Audio Jack:** For wired connection.
- **Micro USB Charging Port:** For charging the internal battery.
- **Micro SD Card Slot:** For playing music directly from a memory card.
- **LED Indicator Light:** Shows power, charging, and pairing status.

SETUP

Charging the Headphones

1. Connect the small end of the USB charging cable to the Micro USB charging port on the headphones.
2. Connect the larger end of the USB charging cable to a USB power source (e.g., computer USB port, wall adapter).
3. The LED indicator light will typically glow red during charging and turn off or change color (e.g., blue) when fully charged.
4. A full charge usually takes approximately 2-3 hours.

Wireless Pairing (Bluetooth)

1. Ensure the headphones are fully charged.
2. Press and hold the Power button for a few seconds until the LED indicator light flashes red and blue alternately, indicating pairing mode.
3. On your Bluetooth-enabled device (smartphone, tablet, computer), go to the Bluetooth settings and turn Bluetooth on.
4. Search for available devices. You should see "Escape" or "BT945" in the list.
5. Select "Escape" or "BT945" to connect. Once connected, the LED indicator light will usually flash blue slowly or turn solid blue.
6. If prompted for a password, enter "0000".

OPERATING INSTRUCTIONS

Power On/Off

- **To Power On:** Press and hold the Power button until the LED indicator light turns on.
- **To Power Off:** Press and hold the Power button until the LED indicator light turns off.

Wireless (Bluetooth) Mode

- After successful pairing, the headphones will automatically connect to the last paired device when powered on (if the device's Bluetooth is active and within range).
- Use your connected device to play music.
- Press the MFB once to Play/Pause music.
- Long press the Volume Up button for the next track.
- Long press the Volume Down button for the previous track.

FM Radio Mode

- With the headphones powered on, press the MFB (Multi-function Button) repeatedly to cycle through modes until you hear the FM radio.
- In FM mode, short press the MFB to automatically scan and save available FM stations.
- Short press the Volume Up/Down buttons to switch between saved stations.

3.5mm Auxiliary Cable Mode

- Insert one end of the 3.5mm auxiliary audio cable into the headphone's audio jack.
- Insert the other end into the audio output jack of your device (e.g., smartphone, MP3 player).
- The headphones will automatically switch to auxiliary mode. Note that some controls on the headphones

may not function in this mode; control playback from your connected device.

Micro SD Card Playback

- Insert a Micro SD card (with music files) into the Micro SD card slot on the headphones.
- The headphones will automatically switch to Micro SD card mode and begin playing music.
- Press the MFB once to Play/Pause music.
- Long press the Volume Up button for the next track.
- Long press the Volume Down button for the previous track.

Call Function

- When connected via Bluetooth to a smartphone, incoming calls will be routed to the headphones.
- **Answer Call:** Short press the MFB.
- **End Call:** Short press the MFB during a call.
- **Reject Call:** Long press the MFB when an incoming call rings.
- **Redial Last Number:** Double-press the MFB in standby mode.

Volume Control

- Short press the Volume Up button to increase volume.
- Short press the Volume Down button to decrease volume.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures. The foldable design allows for compact storage.
- **Battery Care:** To prolong battery life, charge the headphones regularly, even if not used frequently. Avoid fully discharging the battery for extended periods.
- **Water Resistance:** These headphones are **NOT water resistant**. Avoid exposure to water, rain, or excessive moisture to prevent damage.
- **Avoid Impact:** Do not drop or subject the headphones to strong impacts.

TROUBLESHOOTING

Problem	Possible Solution
Headphones do not power on.	Ensure the headphones are fully charged. Connect to a power source and check the charging indicator.
Cannot pair with Bluetooth device.	Ensure headphones are in pairing mode (LED flashing red/blue). Turn off and on your device's Bluetooth. Move headphones closer to the device. Forget previous pairings on your device and try again.

Problem	Possible Solution
No sound in Bluetooth mode.	Check volume levels on both headphones and connected device. Ensure headphones are properly paired and connected. Try playing different audio.
FM radio static or poor reception.	Move to an open area away from interference. Re-scan for stations. The headphone cable can sometimes act as an antenna, try connecting the aux cable even if not using it for audio.
Micro SD card not playing.	Ensure the Micro SD card is inserted correctly. Check that the music files are in a compatible format (e.g., MP3). Try a different Micro SD card.
Microphone not working during calls.	Ensure headphones are properly connected via Bluetooth. Check your phone's audio output settings to ensure the call audio is routed to the headphones.

SPECIFICATIONS

Feature	Detail
Brand	Escape
Model Name	BT945
Connectivity Technology	Wireless (Bluetooth), Wired (3.5mm Aux)
Wireless Technology	Bluetooth
Bluetooth Version	1.6
Ear Placement	Over Ear
Form Factor	Over Ear
Headphones Jack	3.5 mm Jack
Microphone	Integrated
Additional Features	Foldable, FM Radio, Micro SD Card Playback, Call Function
Control Type	Call Control
Control Method	Remote
Material	Plastic
Water Resistance Level	Not Water Resistant
UPC	619793522578
GTIN	619793522578

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.