

[manuals.plus](#) /› [Samsung](#) /› [Samsung HW-A58C 5.1ch Soundbar Instruction Manual](#)

Samsung HW-A58C

Samsung HW-A58C 5.1ch Soundbar Instruction Manual

Model: HW-A58C



1. INTRODUCTION

This instruction manual provides essential information for the safe and efficient use of your Samsung HW-A58C 5.1ch Soundbar system. This system is designed to enhance your home audio experience with optimized sound for various content, clear dialogue, and dynamic surround sound. Please read this manual thoroughly before operating the product and retain it for future reference.

- **Optimized Sound:** Enjoy sound tailored for sports, games, movies, and more.
- **Clear Dialogue:** A dedicated center channel speaker ensures voices are projected clearly.
- **Wireless Surround Sound:** Wireless rear speakers provide an immersive audio experience.
- **Bass Boost:** Instantly enhance bass with a dedicated button.

2. SAFETY INFORMATION

Please observe the following safety precautions to prevent electric shock, fire, or damage to the product.

- **Electric Shock Risk:** Do not remove the cover or back of the product. There are no user-serviceable parts inside. Refer all servicing to qualified service personnel.
- **FCC Compliance (U.S.A.):** This device complies with Part 15 of the FCC Rules. Operation is subject to two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received.
- **FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.
- **Shielded Cables:** Use only shielded cables and connectors to connect the unit to other equipment to ensure compliance with FCC requirements.
- **Radiation Exposure:** This product complies with FCC radiation exposure limits. It should be installed and operated with a minimum distance of 20cm between the radiator and your body.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Samsung Soundbar (HW-A58C)
- Wireless Subwoofer

- Wireless Rear Speakers (2 units)
- Wireless Receiver for Rear Speakers
- Remote Control with 2 AA Batteries
- Power Cables (3 for Soundbar, Subwoofer, and Wireless Receiver)
- HDMI Cable
- Wall Mount Kit (Brackets)
- Quick Setup Guide

Your browser does not support the video tag.

Video: Unboxing the Samsung HW-A58C 5.1ch Soundbar system, showing all included components and their initial appearance.



Image: Front view of the Samsung HW-A58C Soundbar, showcasing its sleek design.



Image: Front view of the wireless subwoofer, designed to provide deep bass.



Image: The two wireless rear speakers and their receiver unit, which connect wirelessly to the soundbar.

4. SETUP

4.1. Placement

- **Soundbar:** Place the soundbar centrally below your TV. Ensure it is on a stable surface or securely wall-mounted using the provided kit.
- **Subwoofer:** Position the wireless subwoofer in a corner of the room or near the soundbar for optimal bass distribution.
- **Rear Speakers:** Place the wireless rear speakers behind your listening position, ideally equidistant from the center. Connect them to the wireless receiver.

4.2. Connections

Connect the soundbar to your TV using one of the following methods:

1. HDMI ARC (Recommended):

- Connect one end of the HDMI cable to the **HDMI TO TV (ARC)** port on the soundbar.
- Connect the other end to the **HDMI ARC** port on your TV.
- Ensure your TV's Anynet+ (HDMI-CEC) function is enabled.

2. Optical Cable:

- Connect an optical cable (not included) from the soundbar's **DIGITAL AUDIO IN (OPTICAL)** port to your TV's optical output port.

3. Bluetooth:

- Refer to the "Operating" section for detailed Bluetooth pairing instructions.

Connect the power cables to the soundbar, subwoofer, and wireless receiver, then plug them into power outlets.



Image: Rear view of the soundbar, showing the HDMI ARC, HDMI IN, USB, and power ports.

4.3. Wireless Speaker Pairing

The subwoofer and wireless rear speakers should automatically connect to the soundbar when powered on. If they do not connect, follow these steps:

1. Ensure the soundbar and wireless receiver are powered on.
2. On the back of the wireless receiver, press and hold the **ID SET** button for at least 5 seconds. The **LINK** LED indicator will blink blue.
3. With the soundbar powered off, press and hold the **Up** button on the soundbar's remote control for 5 seconds.
4. The soundbar display will show "ID SET" and then "LINK" when connected. The **LINK** LED on the wireless receiver will turn solid blue.

5. OPERATING INSTRUCTIONS

5.1. Basic Controls (Using Remote Control)

- **Power:** Press the **Power** button to turn the soundbar On/Off.
- **Volume:** Use the **Volume Up/Down** buttons to adjust the master volume.
- **Source:** Press the **Source** button to cycle through input modes (HDMI, D.IN, BT, USB).
- **Mute:** Press the **Mute** button to temporarily silence the audio.

5.2. Sound Modes and Effects

- **Adaptive Sound Lite:** Automatically optimizes sound based on content (movies, sports, news).
- **Bass Boost:** Press the **Bass Boost** button on the remote for enhanced low-frequency sound.
- **Game Mode:** Provides perfectly synced directional audio and crosstalk cancellation for gaming.
- **Surround Sound Expansion:** Expands the soundstage for a more immersive experience.
- **Standard:** Delivers original sound without additional effects.

5.3. Bluetooth Connectivity

To connect a Bluetooth device:

1. Press the **Source** button on the remote until "BT" appears on the soundbar display.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "[AV] Samsung Soundbar A-Series" from the list.
4. Once connected, "BT PAIRING" will appear on the soundbar display.

The soundbar supports Bluetooth multi-connection, allowing two devices to be connected simultaneously.

6. MAINTENANCE

To ensure the longevity and optimal performance of your soundbar system:

- **Cleaning:** Wipe the surfaces with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Ventilation:** Ensure proper ventilation around all units to prevent overheating. Do not block any ventilation openings.
- **Power Cord:** Regularly check the power cords for any damage. If damaged, discontinue use and contact service personnel.
- **Storage:** If storing the unit for an extended period, disconnect it from the power supply and store it in a cool, dry place.

7. TROUBLESHOOTING

Problem	Solution
No power.	Ensure all power cords are securely connected to the units and a working power outlet.

Problem	Solution
No sound.	<ul style="list-style-type: none"> Check the volume level on both the soundbar and your TV. Verify the correct input source is selected on the soundbar. Ensure cables (HDMI, Optical) are securely connected. If using Bluetooth, ensure the device is paired and playing audio.
Subwoofer or rear speakers not connecting/no sound.	<ul style="list-style-type: none"> Ensure the subwoofer and wireless receiver are powered on. Perform manual pairing as described in Section 4.3. Check the speaker wires connecting the rear speakers to the wireless receiver.
Remote control not working.	<ul style="list-style-type: none"> Replace the batteries (2 AA). Ensure there are no obstructions between the remote and the soundbar.
Sound is distorted or unclear.	<ul style="list-style-type: none"> Adjust the sound modes or equalizer settings. Check for interference from other wireless devices. Ensure the soundbar is not placed too close to walls or other objects that might obstruct sound.

8. SPECIFICATIONS

Feature	Detail
Model Name	HW A58C
Speaker Type	Soundbar
Special Features	Bass Boost, Stereo Pairing
Recommended Uses	For Surround Sound Systems
Compatible Devices	Smartphone, Tablet, Laptop, Television, Projector
Surround Sound Channel Configuration	5.1
Color	Black
Included Components	Soundbar, Wireless Rear Speakers
Item Weight	12.45 Kilograms (27.4 pounds)
Waterproof	FALSE (Not Water Resistant)
Number of Items	1
Control Method	Touch

Feature	Detail
Wireless Communication Technology	Bluetooth
Power Source	AC
Audio Driver Type	Dynamic Driver
Bluetooth Range	10 Meters
Subwoofer Connectivity Technology	Wireless
Specific Uses	Home Entertainment Systems
Style	Sleek, Modern, Home Theater, Cinematic
Indoor/Outdoor Usage	Indoor
Manufacturer	Samsung
Soundbar Dimensions (W x H x D)	38.6" x 2.3" x 4.1"
Subwoofer Dimensions (W x H x D)	7.1" x 13.5" x 10.7"
Rear Speaker Dimensions (W x H x D)	3" x 5" x 3"
Speaker Maximum Output Power	380 Watts
Connectivity Technology	Bluetooth
Audio Output Mode	Surround
Mounting Type	Wall Mount

9. WARRANTY AND SUPPORT

This product is offered as an Amazon Renewed item. Amazon Renewed products are professionally inspected and tested to work and look like new. If you are not satisfied with your purchase, renewed products are eligible for replacement or refund under the [Amazon Renewed Guarantee](#).

For technical support or further assistance, please contact Samsung Customer Service or refer to the official Samsung support website.

- **Samsung Support Phone:** 1-800-SAMSUNG (1-800-726-7864)
- **Amazon Renewed Guarantee:** [Learn More](#)