



[Manuals.plus](#) /

› [9MMML](#) /

› 9MMML 35.4" Black Wood and Metal 4-Light Kitchen Island Lighting Fixture Instruction Manual

9MMML 780317835419

9MMML 35.4" Black Wood and Metal 4-Light Kitchen Island Lighting Fixture Instruction Manual

Model: 780317835419 | Brand: 9MMML

INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your 9MMML 35.4" Black Wood and Metal 4-Light Kitchen Island Lighting Fixture. Please read all instructions carefully before beginning installation and retain this manual for future reference.

SAFETY INFORMATION

- Always turn off the power at the main circuit breaker before installation or maintenance.
- Consult a qualified electrician if you are unsure about the installation process.
- Ensure all electrical connections are made in accordance with local codes and ordinances.
- Do not exceed the maximum wattage specified for the bulbs (Max 60W per E26 bulb).
- This fixture is designed for indoor use only.
- Handle glass components with care to prevent breakage.

PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- Lighting Fixture Body (Black Wood and Metal Frame)
- Canopy/Mounting Plate
- Adjustable Rods (8 pieces: 2x 6-inch, 6x 12-inch)
- Mounting Hardware (screws, washers, wire nuts)
- Instruction Manual
- Bulbs are NOT included (Requires 4 x E26 bulbs, Max 60W each)



Figure 1: Exploded view of the lighting fixture components and dimensions.

SPECIFICATIONS

Brand	9MMML
Model Number	780317835419
Dimensions	35.5"L x 9.5"W x 53"H (Max adjustable height)
Material	Metal, Wood
Color	Black
Number of Lights	4
Bulb Base	E26 Medium

Max Wattage per Bulb	60 Watts
Voltage	110 Volts (AC)
Special Features	Dimmable, Adjustable Height
Installation Type	Suspended (Monopoint with Canopy)
Indoor/Outdoor Usage	Indoor

SETUP AND INSTALLATION

Follow these steps for proper installation. It is recommended to have two people for installation.

Step 1: Prepare for Installation

- Turn off power at the circuit breaker.
- Unpack all components and lay them out on a clean, flat surface.
- Review the parts list to ensure all items are present.

Your browser does not support the video tag. This video demonstrates the assembly process of the 9MMML Wood Island

Light fixture.

Video 1: Assembly overview of the 9MMML Wood Island Light.

Step 2: Assemble the Fixture Frame

1. Attach the wooden frame pieces to the metal base using the provided screws and washers. Ensure the rubber washers are placed between the metal and wood to minimize rubbing and secure the connection.
2. Tighten all screws securely, but do not overtighten.



E26 Bulb Base



Natural Wood Frame



Solid Metal Chassis

Figure 2: Detailed view of fixture components: E26 bulb base, natural wood frame, and solid metal chassis.

Step 3: Determine and Assemble Down Rod Length

1. Select the appropriate number of 6-inch and 12-inch rods to achieve your desired hanging height (adjustable from 17.7" to 55.1").
2. Thread the electrical wires through the selected rods.
3. Connect the rods together by screwing them into each other.



Figure 3: Examples of adjustable heights for the fixture.

Step 4: Mount the Canopy to the Ceiling

1. Secure the mounting plate to your ceiling junction box using the provided hardware.
2. Connect the fixture's ground wire to the house ground wire (usually bare copper or green).
3. Connect the fixture's neutral wire (usually white) to the house neutral wire.
4. Connect the fixture's hot wire (usually black) to the house hot wire.
5. Carefully tuck all wires into the junction box.
6. Attach the canopy to the mounting plate, securing it with the decorative nuts.

Step 5: Install Light Bulbs

- Screw four E26 base bulbs (Max 60W each, not included) into the sockets.
- Ensure bulbs are fully seated but not overtightened.



Figure 4: Light fixture with bulbs on and off.

OPERATING INSTRUCTIONS

- Once installation is complete and power is restored, operate the light fixture using your wall switch.
- This fixture is dimmable. If you wish to use the dimming feature, ensure you use dimmable E26 bulbs and a compatible dimmer switch (both sold separately).

MAINTENANCE

- **Cleaning:** To clean the fixture, turn off the power and wipe with a soft, dry cloth. Do not use abrasive cleaners or solvents as they may damage the finish.
- **Bulb Replacement:** Ensure power is off before replacing bulbs. Allow bulbs to cool completely before handling. Replace with E26 base bulbs, not exceeding 60W.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	Power is off at the breaker. Loose wire connections. Faulty bulb.	Check circuit breaker and wall switch. Verify all wire connections are secure (ensure power is off first). Replace bulb with a new one.
Flickering lights.	Loose bulb. Incompatible dimmer switch/bulbs.	Tighten bulbs. Ensure dimmable bulbs are used with a compatible dimmer switch.
Fixture is unstable.	Mounting hardware not secure. Rods not fully tightened.	Re-check all mounting screws and connections to the ceiling. Ensure all adjustable rods are securely screwed together.

WARRANTY AND SUPPORT

The 9MMML 35.4" Black Wood and Metal 4-Light Kitchen Island Lighting Fixture comes with a **2-year worry-free warranty**. If you encounter any issues with your product, please contact 9MMML customer support for assistance.

For customer support, please email: 1220770414@qq.com

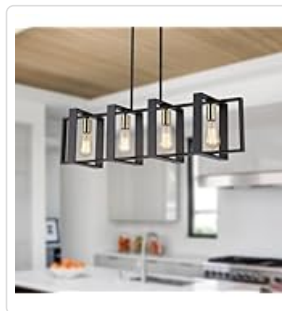


Figure 5: 9MMML Customer Support Information.