

[Manuals.plus](#) /

> [FWFX](#) /

> FWFX Electronic Dance Mats User Manual

FWFX A870II

FWFX Electronic Dance Mats User Manual

Model: A870II

INTRODUCTION

This user manual provides comprehensive instructions for setting up, operating, and maintaining your FWFX Electronic Dance Mat. Designed for interactive fun and fitness, this mat offers a variety of games and exercise modes for all ages. Please read this manual thoroughly before use to ensure proper function and safety.

WHAT'S INCLUDED

- 1 x Dancing Mat
- 2 x Game Handles
- 1 x HDMI Cable
- 1 x USB Cable + Power USB Adapter
- 1 x AR Game Center Host + Disco Ball

SETUP GUIDE

1. Powering the Device

The FWFX Electronic Dance Mat requires 6 x 1.5V AAA batteries (not included) for the game handles. Ensure batteries are inserted with correct polarity.

2. Connecting to Display

Connect the AR Game Center Host to your TV, PC, or projector using the provided HDMI cable. Plug the USB cable into the power USB adapter and connect it to a power outlet. The system is plug-and-play; no internet or Wi-Fi is required.



Image: The FWFX Electronic Dance Mat set up with a family playing, showing the mat, controllers, and the main unit connected to a television screen.

SIZE: 65.4 in x 36.6 in x 11 mm



Image: A diagram illustrating the connection points on the AR Game Center Host, including HDMI Port, SD Card slot, HDMI Cable, USB Port/Power Port, and ON/OFF switch. It also shows compatibility with TVs, Gaming Monitors, and Projectors.

OPERATING INSTRUCTIONS

1. Game Center Navigation

Upon powering on, the main Game Center menu will appear. Use the game handles to navigate through the various game modes and selections.

Your browser does not support the video tag.

Video: A demonstration of navigating the main menu of the FWFX Electronic Dance Mat, showing options like Dancing Challenge, Yoga, Camera Games, Running, and Classic Games.

2. Dancing Challenge

Select "Dancing Challenge" to access various dance modes. Choose between MTV Mode (featuring popular music videos) or Cartoon Mode (with animated characters). Options include single or double-player modes, and 4-key or 6-key

controls. The mat also supports hands & feet modes for a full-body workout.



Image: A screen capture from the dance mat game, displaying options for "Hot and Classic MV Dancing Songs" with MTV Mode and Cartoon Mode, along with choices for 4-Key, 6-Key, Solo, Double, and Multiplayer.

3. AR Camera Games

Engage in interactive AR (Augmented Reality) camera games where your movements are captured and rendered on screen. This mode offers an immersive experience with games like Super Fruit, Undersea Adventure, and Happy Click.

PROFESSIONAL YOGA INSTRUCTION

Yoga/Aerobics/Muscle Exercises



Image: A family playing an HD Camera Game, where their movements are tracked by the camera and integrated into the game on screen, showing a fruit-slicing game.

4. Running Challenges

Participate in running challenges to stay active. The mat tracks your steps and progress in various virtual running scenarios.

Wireless Control Handle Games

exercise with your family



Image: Two individuals engaging in a "Fun Running Game" on the dance mat, with their avatars displayed on the television screen in a virtual race.

5. Yoga and Fitness Videos

Access a library of yoga and fitness videos to guide your workouts. These instructional videos help improve flexibility, strength, and overall well-being.

FUN RUNNING GAMES

Sticking to it every day, keeping in shape



Image: A woman performing a yoga pose on the dance mat, with a "Professional Yoga Instruction" video displayed on the television screen, showing various yoga, aerobics, and muscle exercise options.

6. Wireless Handle Games

The included wireless game handles allow you to play a variety of classic arcade and interactive games, such as Super Mario, Tetris, and Tennis Star. These games support both solo and multiplayer modes.



Plug & play offline. No internet or Wi-Fi required



Works with Standard Type-A HDMI devices (Wide 14mm × Thick 4.5mm)



TVs



Gaming Monitors



Projectors

Image: Two individuals playing a tennis game using the wireless control handles, with the game displayed on the television screen.

MAINTENANCE

1. Cleaning

The dance mat features a waterproof PEVA surface. To clean, simply wipe the surface with a damp cloth. Do not submerge the mat or the main unit in water.

2. Storage

The dance mat is designed to be foldable for easy storage. Ensure the mat is clean and dry before folding. Store in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

| Problem | Solution |
|---------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No power/Device not turning on | Ensure the USB power adapter is securely plugged into a working outlet and the main unit. Check that the ON/OFF switch on the main unit is in the "ON" position. Verify that the game handles have fresh AAA batteries inserted correctly. |
| No display on TV/monitor | Confirm the HDMI cable is securely connected to both the AR Game Center Host and your display device. Ensure your TV/monitor input source is set to the correct HDMI port. Try a different HDMI port or cable if available. |
| Game handles not responding | Check the batteries in the game handles and replace them if necessary. Ensure the handles are within range of the main unit and there are no obstructions. Re-pair the handles with the main unit if applicable (refer to on-screen instructions for pairing). |
| Mat not detecting foot pressure | Ensure you are stepping firmly and directly on the designated areas of the dance mat. Check for any debris or foreign objects on the mat surface that might interfere with sensor detection. |

SPECIFICATIONS

| Feature | Detail |
|------------------------------|--------------------------------|
| Product Dimensions | 65.4 x 36.6 x 0.43 inches |
| Item Weight | 3.8 pounds |
| Item Model Number | A870II |
| Manufacturer Recommended Age | 6 years and up |
| Batteries Required | 6 AAA batteries (not included) |
| Manufacturer | FWFX |

SAFETY INFORMATION

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years. Always supervise young children during use. Ensure the mat is placed on a flat, stable surface to prevent slipping. Avoid placing heavy objects on the mat or exposing it to extreme temperatures.

WARRANTY AND SUPPORT

This product includes a 30-day return policy and a 1-year warranty. For any questions, technical support, or warranty claims, please contact FWFX customer service through the retailer's platform where the product was purchased. Please have your purchase details and model number (A870II) ready for faster assistance.

