

Eywamage MA013

Eywamage Short White Flameless Taper Candles with Remote (Model MA013)

Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Eywamage Short White Flameless Taper Candles with Remote. Please read this manual thoroughly before use to ensure proper function and longevity of your product.

The set includes six flameless taper candles and one remote control. These LED candles are designed to provide ambient lighting without the hazards of real flames, featuring a realistic wax coating and flickering effect.

PACKAGE CONTENTS

- 6 x Eywamage Short White Flameless Taper Candles
- 1 x Remote Control (with 1 CR2025 coin cell battery included)

SETUP

1. Battery Installation for Candles

1. Gently twist the bottom cap of each taper candle counter-clockwise to remove it.
2. Insert **two (2) AAA batteries** (not included) into each candle, ensuring correct polarity (+/-).
3. Replace the bottom cap by twisting it clockwise until secure.



Figure 1: Battery installation for the taper candles. Each candle requires two AAA batteries.

2. Remote Control Preparation

- The remote control comes with one CR2025 coin cell battery pre-installed.
- Before first use, locate the clear plastic insulating sheet protruding from the battery compartment on the side of the remote. Pull this sheet out completely to activate the battery.

7"

0.94"

0.83"

10 Key Remote Controller

ON/OFF

2/4/6/8 Hours Timer

Flickering/Static Flame

Adjust Brightness

please pull out the insulating sheet before use

Coated with real wax

2 AAA battery powered (not included)

Push-button switch

Figure 2: Remote control diagram highlighting the insulating sheet removal.

OPERATING INSTRUCTIONS

The included 10-key remote control allows for convenient operation of your flameless taper candles within a 20-foot range. Point the remote directly at the candles for optimal response.



Figure 3: Remote control functions overview.

Remote Control Functions:

- **ON/OFF:** Press the **ON** button to turn all paired candles on. Press the **OFF** button to turn all paired candles off.
- **Timer (2H/4H/6H/8H):** Select a desired timer duration. The candles will remain on for the selected hours and then automatically turn off. They will turn on again at the same time the next day for the set duration. To cancel the timer, press the **OFF** button.
- **Mode (Candle/Light):**
 - **Candle:** Activates a realistic flickering flame effect.
 - **Light:** Provides a steady, non-flickering light.
- **Brightness Adjustment (DIM +/-):** Use the **+** button to increase brightness and the **-** button to decrease brightness.



Figure 4: Brightness adjustment mode in action.

MAINTENANCE

1. Battery Replacement

- **Candles:** When the light dims significantly or the candles stop responding, replace the two AAA batteries in each candle following the installation steps in the Setup section.
- **Remote Control:** If the remote control's range decreases or it stops functioning, replace the CR2025 coin cell battery. Open the battery compartment, remove the old battery, and insert a new one with the positive (+) side facing up.

2. Cleaning

- Wipe the candles with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid exposing the candles to excessive moisture or water, as they are not waterproof.

3. Storage

- Store the candles in a cool, dry place away from direct sunlight or high temperatures to prevent the wax from melting or deforming.
- Remove batteries from both candles and remote if storing for extended periods to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Candles do not turn on.	Batteries are dead or incorrectly inserted. Remote insulating sheet not removed.	Check and replace AAA batteries in candles. Ensure correct polarity. Remove the plastic insulating sheet from the remote control.
Remote control is unresponsive.	Remote battery is dead. Remote is out of range. Obstruction between remote and candles.	Replace the CR2025 coin cell battery in the remote. Ensure you are within 20 feet of the candles and there are no major obstructions.
Timer function is inconsistent.	Low candle batteries. Minor synchronization issue.	Replace candle batteries. Turn candles off and then on again to reset the timer. Ensure all candles are within remote range when setting the timer.
Candle wax appears melted or deformed.	Exposure to high temperatures or direct sunlight.	Avoid placing candles in direct sunlight, near heat sources, or in environments exceeding typical room temperature.

SPECIFICATIONS

- **Model Name:** MA013-Short-S6-White
- **Brand:** Eywamage
- **Product Dimensions:** 0.86"D x 0.86"W x 7"H (each candle)

- **Material:** Paraffin Wax + ABS
- **Shade Color:** White
- **Light Source Type:** LED
- **Power Source:** Battery Powered
- **Candle Batteries:** 2 x AAA per candle (not included)
- **Remote Battery:** 1 x CR2025 coin cell (included)
- **Voltage:** 3 Volts
- **Color Temperature:** 2100 Kelvin
- **Control Method:** Remote
- **Indoor/Outdoor Usage:** Indoor only
- **Water Resistance Level:** Not Water Resistant
- **Number of Pieces:** 6

WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your Eywamage Flameless Taper Candles, please contact Eywamage customer service. Refer to your purchase documentation for specific warranty details, if applicable.

Manufacturer: Eywamage