

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Walker Edison](#) /
- › [Walker Edison Harper Modern 4 Door Herringbone TV Stand \(70 Inch, Birch\) Instruction Manual](#)

### Walker Edison W70HER4DBH

## Walker Edison Harper Modern 4 Door Herringbone TV Stand (70 Inch, Birch) Instruction Manual

### PRODUCT OVERVIEW

The Walker Edison Harper Modern 4 Door Herringbone TV Stand is designed to accommodate televisions up to 80 inches. This 70-inch birch stand features two wood doors with a distinctive herringbone pattern and two tempered safety glass doors, providing both concealed and display storage options. It includes four adjustable shelves for customizable organization and integrated cord management ports to maintain a tidy appearance for electronic cables. Constructed from warp-resistant MDF wood, durable laminate, and powder-coated steel, this entertainment stand is built for lasting use.



Image: Front view of the Walker Edison Harper Modern 4 Door Herringbone TV Stand in Birch.

### SAFETY INFORMATION

- **Weight Capacity:** Ensure the TV stand is not overloaded. The maximum weight capacity for the top surface is 280 pounds. Adjustable shelves have a weight capacity of 50 pounds each.
- **Assembly:** Follow all assembly instructions carefully to ensure proper and secure setup. Incorrect assembly can lead to instability and potential injury.
- **Placement:** Place the TV stand on a level, stable surface. Avoid placing it in high-traffic areas where it could be easily bumped or tipped.

- **Children and Pets:** Keep small parts and hardware away from children and pets during assembly. Do not allow children to climb on or play with the assembled unit.
- **Anti-Tip Kit:** If an anti-tip kit is included, it is highly recommended to install it to prevent accidental tipping, especially in households with children.

## COMPONENTS LIST

---

Before beginning assembly, verify that all components and hardware are present. Refer to the included assembly instructions for a detailed list and identification of each part. Typically, the package includes:

- Top Panel
- Bottom Panel
- Side Panels
- Back Panels
- Adjustable Shelves (4)
- Wood Doors (2)
- Tempered Safety Glass Doors (2)
- Legs
- Hardware Pack (screws, dowels, cam locks, hinges, handles, shelf pins, anti-tip kit)
- Assembly Instructions

## SETUP AND ASSEMBLY

---

Assembly of this TV stand is required. It is recommended to have two people for assembly. Ensure you have a clear, spacious area to work in and the necessary tools (e.g., Phillips head screwdriver, hammer).

1. **Unpack and Inspect:** Carefully unpack all components and lay them out on a soft, clean surface to prevent scratches. Compare all parts against the components list in your instruction manual.
2. **Identify Hardware:** Separate and identify all hardware pieces.
3. **Follow Step-by-Step Instructions:** Refer to the detailed graphical and textual instructions provided in your assembly manual. Each step will guide you through attaching panels, installing shelves, and securing doors.
4. **Secure Connections:** Ensure all screws, cam locks, and other fasteners are tightened securely, but do not overtighten to avoid damaging the material.
5. **Install Doors:** Attach the hinges to the doors and then to the cabinet frame. Adjust the hinges as needed to ensure doors close properly and are aligned evenly.
6. **Attach Legs:** Securely attach the legs to the bottom of the stand.
7. **Install Anti-Tip Kit:** If provided, install the anti-tip hardware to secure the stand to a wall, following the specific instructions for your wall type.

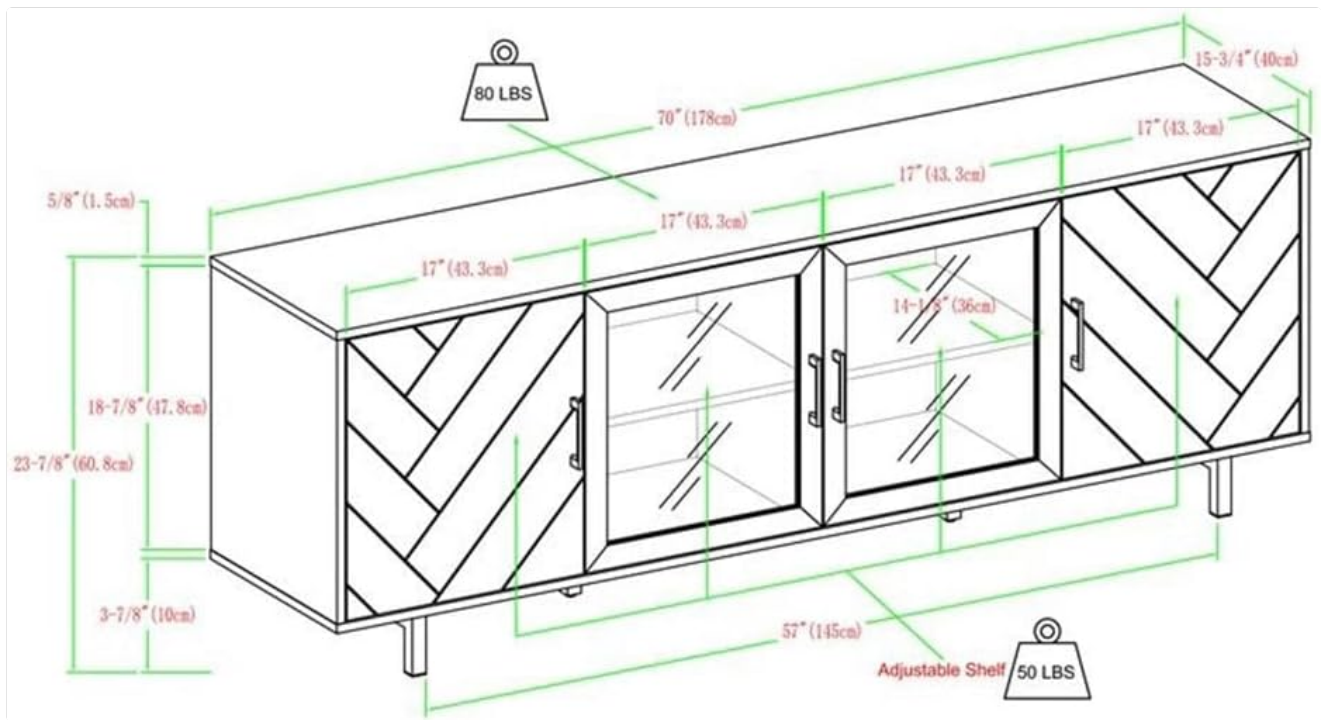 


Image: Technical diagram illustrating the dimensions and weight capacities of the TV stand.

## OPERATING INSTRUCTIONS

Once assembled, the TV stand is ready for use. Consider the following for optimal operation:

- **TV Placement:** Place your television centrally on the top surface, ensuring its base is fully supported and does not overhang. Adhere to the maximum weight limit of 280 pounds for the top surface.
- **Storage:** Utilize the four adjustable shelves to organize media devices, books, or decorative items. Adjust shelf height by repositioning the shelf pins in the pre-drilled holes. Each shelf supports up to 50 pounds.
- **Cable Management:** Route power cords and signal cables through the designated cord management ports located on the back panel to keep them organized and out of sight.
- **Door Functionality:** The two wood doors provide discreet storage, while the two tempered safety glass doors allow for display of items while protecting them from dust. Ensure doors open and close smoothly.



Image: The TV stand positioned in a living room, showcasing its storage and display capabilities with a television and various items.

## MAINTENANCE AND CARE

To ensure the longevity and appearance of your TV stand, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, dry cloth. For tougher spots, use a slightly damp cloth with mild soap, then dry immediately. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Moisture Protection:** Protect the stand from excessive moisture. Wipe up spills immediately. Avoid placing hot or wet items directly on the surface without protective coasters.
- **Sunlight Exposure:** Prolonged exposure to direct sunlight can cause fading or discoloration.
- **Regular Checks:** Periodically check all fasteners and connections to ensure they remain tight. Retighten if necessary.
- **Door Adjustment:** If doors become misaligned over time, adjust the hinges as per the assembly instructions to restore proper alignment and closing.

## TROUBLESHOOTING

- **Wobbly Stand:** Ensure the stand is on a level surface. Check that all cam locks and screws are fully tightened. If the issue persists, disassemble and reassemble carefully, ensuring all parts are correctly aligned.
- **Doors Not Closing/Aligning Properly:** This is often due to hinge adjustment. Refer to the assembly instructions for detailed steps on how to adjust the hinges. Most hinges allow for vertical, horizontal, and depth adjustments. Small adjustments can significantly improve door alignment.
- **Missing Parts:** If any parts are missing upon unpacking, do not proceed with assembly. Contact Walker Edison customer support with your product model number and the specific part numbers needed.
- **Damaged Parts:** If any components are damaged, do not attempt to assemble the unit. Contact customer support for replacement parts.

## PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Walker Edison
Model Name	Harper
Model Number	W70HER4DBH
Color	Birch
Product Dimensions	15.75"D x 70"W x 24"H (40cm D x 178cm W x 61cm H)
Item Weight	100 Pounds (45.36 kg)
Top Material Type	Wood
Frame Material	Engineered Wood
Finish Type	Powder Coated (on steel components)
Mounting Type	Freestanding
Number of Doors	4 (2 wood, 2 tempered glass)
Number of Shelves	4 (adjustable)
Weight Limit (Top)	280 Pounds (127 kg)
Weight Limit (Shelves)	50 Pounds (22.68 kg) per shelf
Special Feature	Space Saving, Cord Management
Assembly Required	Yes
UPC	840145754907

## WARRANTY AND SUPPORT

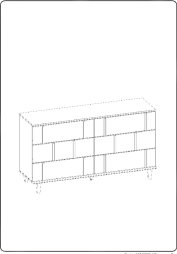 

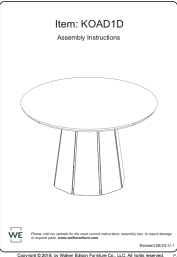 

Walker Edison products are designed for durability and customer satisfaction. For specific warranty details, please refer to the documentation included with your product or visit the official Walker Edison website. The EU Spare Part Availability Duration is 5 years.

If you encounter any issues during assembly or use, or if you require replacement parts, please contact Walker Edison customer support. Have your model number (W70HER4DBH) and purchase information ready to assist the

support team.

**Contact Information:** Please refer to the contact details provided in your product packaging or on the official Walker Edison website for the most current support options.

Related Documents - W70HER4DBH

	<p><a href="#">Walker Edison Bronx 6-Drawer Dresser Assembly Guide</a></p> <p>Comprehensive assembly guide for the Walker Edison Bronx 6-Drawer Dresser, featuring estimated assembly time, required tools, safety warnings, detailed step-by-step instructions, and parts lists for a successful setup.</p>
	<p><a href="#">Walker Edison W60FPXDHB Assembly Instructions</a></p> <p>Comprehensive assembly guide for the Walker Edison W60FPXDHB TV stand with fireplace. Includes parts list, hardware, and step-by-step instructions in multiple languages.</p>
	<p><a href="#">Walker Edison KOAD1D Round Dining Table Assembly Instructions</a></p> <p>Step-by-step assembly instructions for the Walker Edison KOAD1D round dining table. Includes parts list, hardware list, and assembly guidelines.</p>
	<p><a href="#">Walker Edison W70CSGD TV Stand Assembly Instructions</a></p> <p>Detailed assembly instructions for the Walker Edison W70CSGD TV Stand, including parts list, hardware list, and step-by-step guidance for building your furniture.</p>



[Walker Edison Adair 70" Sloane Adair Solid Wood TV Stand Assembly Instructions](#)

Detailed assembly instructions for the Walker Edison Adair 70" Sloane Adair Solid Wood TV Stand (SKU: W70ADR2D). Includes parts list, hardware list, and step-by-step guidance for easy setup.



[Walker Edison W584DHDHB Assembly Instructions | Furniture Setup Guide](#)

Detailed assembly instructions for the Walker Edison W584DHDHB furniture item. Learn how to assemble your new cabinet with clear steps, parts list, and hardware guide. Includes general assembly tips for this Dark Walnut Classic Glass Door Universal TV Stand.