

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Walker Edison](#) /
- › [Walker Edison Mara Classic Detailed Door TV Stand \(Model W70BLA2DGW\) Instruction Manual](#)

Walker Edison W70BLA2DGW

Walker Edison Mara Classic Detailed Door TV Stand Instruction Manual

Model: W70BLA2DGW

1. INTRODUCTION

This manual provides detailed instructions for the assembly, setup, and maintenance of your Walker Edison Mara Classic Detailed Door TV Stand. Designed to accommodate televisions up to 80 inches, this 70-inch TV stand offers both functional storage and a classic aesthetic. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image 1.1: Front view of the assembled Walker Edison Mara Classic Detailed Door TV Stand.

2. SAFETY INFORMATION

WARNING: This product can expose you to chemicals including wood dust, which is known to the State of California to cause cancer. For more information go to www.P65Warnings.ca.gov.

- Always assemble the unit on a soft, clean surface to prevent scratches.
- Ensure all hardware is securely tightened before use. Periodically check and re-tighten as necessary.
- Do not overload shelves. Refer to the specifications section for weight capacities.
- Keep small parts and packaging materials away from children and pets.
- It is recommended that two adults assemble this furniture.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts and hardware are present and undamaged. If any parts are missing or damaged, please contact Walker Edison customer support.

- Wood panels (top, bottom, sides, shelves, doors)
- Hardware kit (screws, dowels, hinges, handles, shelf pins)
- Assembly instructions leaflet

4. ASSEMBLY INSTRUCTIONS

Follow the step-by-step instructions provided in the included assembly leaflet. Below are general tips and important considerations:

1. **Preparation:** Clear a spacious area and lay out all components. Have a Phillips head screwdriver and a hammer ready.
2. **Dowel Installation:** When inserting the small wood dowel pieces, it is advisable to apply wood glue to ensure a more secure and stable connection. Allow adequate drying time.
3. **Frame Assembly:** Connect the side panels to the base and top panel using the provided hardware. Ensure all connections are snug.
4. **Shelf Installation:** The unit features three adjustable shelves. Insert the shelf pins into the desired holes on the side panels, then place the shelves securely on top.
5. **Door Attachment:** Attach the soft-close door hinges to the doors and the main unit. For easier alignment and installation of the doors, consider using the product's packaging box to prop up the doors to the correct height while screwing them into place. This can help achieve a level and even fit.
6. **Hardware:** Install the antique black metal handles on the doors.

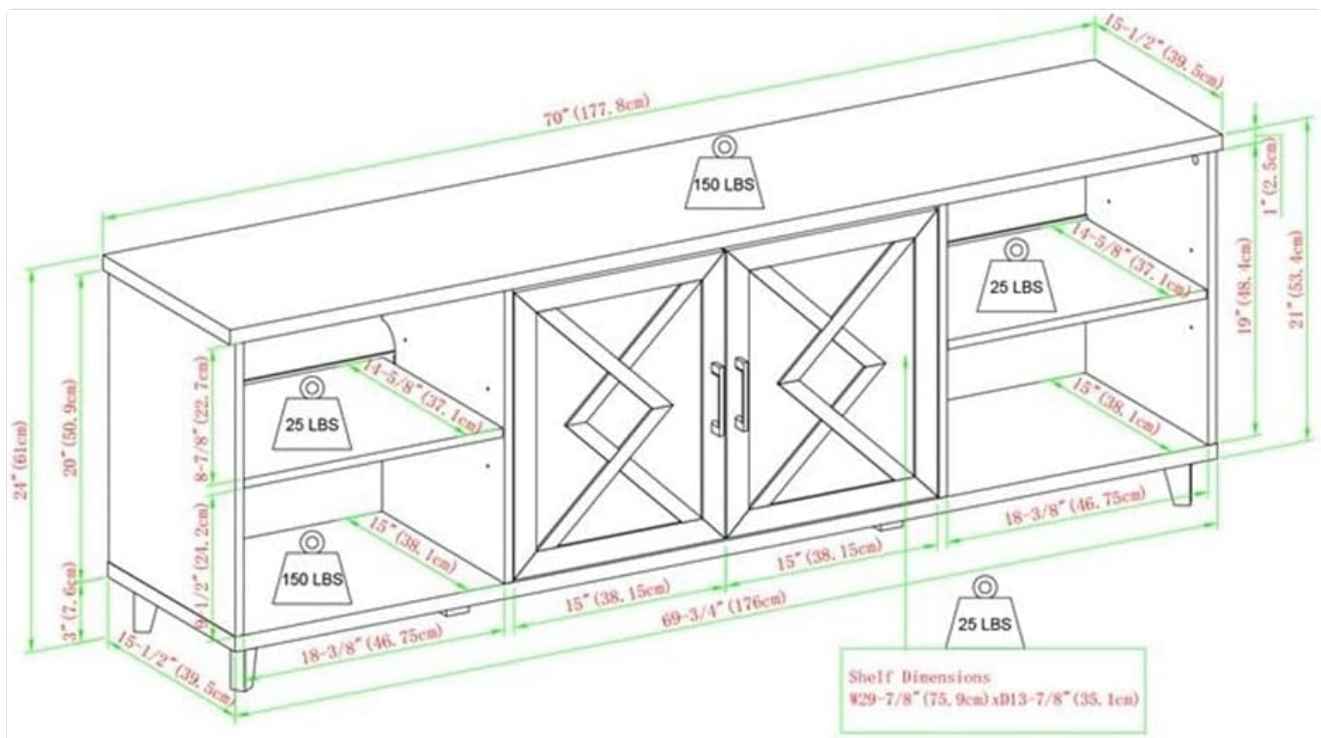 


Image 4.1: Dimensional diagram of the TV stand, illustrating overall size and individual shelf capacities.

5. FEATURES AND SETUP

The Walker Edison Mara TV Stand is designed for both functionality and style, offering a versatile solution for your

entertainment and storage needs.

- **TV Compatibility:** This stand is suitable for televisions up to 80 inches in size.
- **Storage:** Features two side compartments with adjustable shelves and a central cabinet with two helix-patterned, soft-close doors.
- **Cord Management:** Equipped with two cord management ports located at the back of the central cabinet, allowing for organized routing of cables and wires for electronic devices.
- **Design:** The grey wash finish and detailed helix-patterned doors with antique black metal hardware provide a classic and adaptable aesthetic.
- **Mounting Type:** Designed for floor mounting.



Image 5.1: TV stand with doors open, showcasing internal storage.



Image 5.2: Detail of the central cabinet's interior and cord management.

Official Product Video

Video 5.3: An official product video from Walker Edison showcasing the Mara Classic Detailed Door TV Stand, highlighting its features and design.

6. OPERATING THE TV STAND

While a TV stand does not have complex operational procedures, understanding its features will enhance your experience:

- **Adjustable Shelves:** Customize the height of the three interior shelves to accommodate various media devices, books, or decorative items. Simply remove the shelf pins, reposition them to the desired height, and reinsert the shelf.
- **Soft-Close Doors:** The central cabinet doors are equipped with soft-close hinges, ensuring quiet and gentle closing to prevent slamming.
- **Cable Management:** Utilize the cord management ports to route power cords and signal cables, keeping them tidy and out of sight.

7. MAINTENANCE

To maintain the appearance and longevity of your TV stand, follow these simple care instructions:

- **Cleaning:** Wipe the surfaces with a dry, soft cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the finish.
- **Spills:** Immediately blot any spills with a clean, dry cloth.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration of the wood finish.
- **Heat:** Do not place hot items directly on the surface. Use coasters or protective pads.

8. TROUBLESHOOTING

If you encounter any issues with your TV stand, consider the following common solutions:

- **Wobbly Unit:** Ensure all screws and fasteners are securely tightened. Check that the unit is placed on a level surface. Adjust any leveling feet if present.
- **Doors Not Closing Properly:** Check the hinge alignment. Minor adjustments to the hinge screws can often correct door alignment issues. Refer to the hinge manufacturer's instructions if available.
- **Scratches/Minor Damage:** For minor scratches, a wood repair marker or furniture polish matching the grey wash color may be used.

For more complex issues or if troubleshooting steps do not resolve the problem, please contact Walker Edison customer support.

9. SPECIFICATIONS

Feature	Detail
Brand	Walker Edison
Model Number	W70BLA2DGW
Material	Wood
Color	Grey Wash
Product Dimensions (L x W x H)	70 x 15.5 x 24 inches (177.8 x 39.4 x 61 cm)
Item Weight	82 pounds (37.2 kg)

Feature	Detail
Number of Shelves	3 (adjustable)
TV Size Compatibility	Up to 80 inches
Special Features	Storage, Cord Management, Soft-Close Doors
UPC	840228407171




10. WARRANTY AND SUPPORT


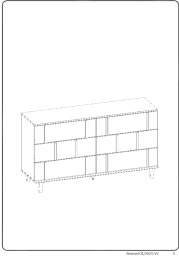 
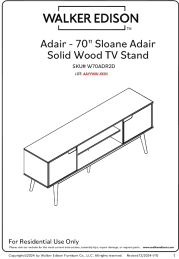 
For specific warranty information regarding your Walker Edison Mara Classic Detailed Door TV Stand, please refer to the documentation included with your purchase or visit the official Walker Edison website. For customer support, assembly assistance, or to report missing/damaged parts, please contact Walker Edison directly.

You can find more information about Walker Edison products and support at their official store [Walker Edison Store on Amazon](#).

© 2023 Walker Edison. All rights reserved.

Related Documents - W70BLA2DGW

	<p>Walker Edison W70CSGD TV Stand Assembly Instructions</p> <p>Detailed assembly instructions for the Walker Edison W70CSGD TV Stand, including parts list, hardware list, and step-by-step guidance for building your furniture.</p>
	<p>Walker Edison W584DHDHB Assembly Instructions Furniture Setup Guide</p> <p>Detailed assembly instructions for the Walker Edison W584DHDHB furniture item. Learn how to assemble your new cabinet with clear steps, parts list, and hardware guide. Includes general assembly tips for this Dark Walnut Classic Glass Door Universal TV Stand.</p>
	<p>Walker Edison W60FPXDHB Assembly Instructions</p> <p>Comprehensive assembly guide for the Walker Edison W60FPXDHB TV stand with fireplace. Includes parts list, hardware, and step-by-step instructions in multiple languages.</p>

 <p>Item: KOAD1D Assembly Instructions</p> <p>WE</p> <p>Copyright © 2019, by Walker Edison Furniture Co., LLC. All rights reserved.</p>	<p>Walker Edison KOAD1D Round Dining Table Assembly Instructions</p> <p>Step-by-step assembly instructions for the Walker Edison KOAD1D round dining table. Includes parts list, hardware list, and assembly guidelines.</p>
 <p>WE</p>	<p>Walker Edison Bronx 6-Drawer Dresser Assembly Guide</p> <p>Comprehensive assembly guide for the Walker Edison Bronx 6-Drawer Dresser, featuring estimated assembly time, required tools, safety warnings, detailed step-by-step instructions, and parts lists for a successful setup.</p>
 <p>WALKER EDISON</p> <p>Adair - 70" Sloane Adair Solid Wood TV Stand SKU: W70ADR2D LIFE: 10/15/19-10/15/20</p> <p>For Residential Use Only</p> <p>Copyright © 2019, by Walker Edison Furniture Co., LLC. All rights reserved.</p>	<p>Walker Edison Adair 70" Sloane Adair Solid Wood TV Stand Assembly Instructions</p> <p>Detailed assembly instructions for the Walker Edison Adair 70" Sloane Adair Solid Wood TV Stand (SKU: W70ADR2D). Includes parts list, hardware list, and step-by-step guidance for easy setup.</p>