

[Manuals.plus](#) /

› [Amesias](#) /

› W11393685 Washer Gearcase Instruction Manual

Amesias W11393685

W11393685 for Whirlpool Washer Gearcase W11455453, W10811956, W11134159, W10447976, W10868473

Brand: Amesias | **Model:** W11393685

INTRODUCTION

This instruction manual provides essential information regarding the W11393685 Washer Gearcase. This component is a critical part of your washing machine, responsible for converting motor rotation into the necessary agitation and spin actions. This manual is intended to assist in understanding the product, its compatibility, and general guidelines for its handling and maintenance. It is designed as a replacement part for specific Whirlpool washer models.

PRODUCT OVERVIEW

The W11393685 Gearcase is a robust mechanical assembly designed for durability and precise operation within your washing machine. It features a sturdy cast iron construction and is engineered to meet the specifications of compatible models.



This image displays the W11393685 washer gearcase from an angled perspective, highlighting its central shaft and the multi-holed mounting plate. This component is crucial for the washer's agitation and spin cycles.

Detailed Views





A side profile of the W11393685 washer gearcase, illustrating its robust square base and the vertical shaft. This view helps in understanding the component's structural design and how it integrates into the washing machine.



This image provides a direct top-down view of the W11393685 washer gearcase. It clearly shows the splined shaft and the flat, perforated mounting surface, essential for its secure installation within the washing machine.



A detailed close-up of the splined shaft of the W11393685 washer gearcase. The splines are critical for transmitting power from the motor to the agitator or wash plate, enabling the washing action.



The underside view of the W11393685 washer gearcase, revealing the structural reinforcement and attachment points on the bottom of the mounting plate. This perspective is useful for understanding how the gearcase is secured within the appliance.

COMPATIBILITY

Does your part fit?



Many replacement parts
look the same
but won't fit your model.

Don't be fooled!

Check your
model number
before you buy.

An important informational graphic advising users to verify their appliance's model number before purchasing replacement parts. It emphasizes that visual similarity does not guarantee compatibility and urges careful checking to ensure the correct fit.

The W11393685 Washer Gearcase is designed to be compatible with a specific range of Whirlpool washer models. It is crucial to verify your appliance's model number against the list below to ensure proper fit and function. This part is **NOT UNIVERSAL**.

Compatible Models:

- 7MMVWB835EW0-MAC, 7MMVWB855EC0-MAC, 7MMVWB855EC1-MAC, 7MMVWB855EC2-MAC, 7MMVWB855EC3-MAC
- MVWB755DW0-MAC, MVWB755DW1-MAC, MVWB757JW0-MAC, MVWB765FC1-MAC, MVWB765FC2-MAC
- MVWB765FC3-MAC, MVWB765FC4-MAC, MVWB765FW0-MAC, MVWB765FW1-MAC, MVWB765FW2-MAC
- MVWB765FW3-MAC, MVWB765FW4-MAC, MVWB766FW0-MAC, MVWB766FW1-MAC, MVWB766FW2-MAC
- MVWB835DC0-MAC, MVWB835DC2-MAC, MVWB835DC3-MAC, MVWB835DC4-MAC, MVWB835DC5-MAC
- MVWB835DW0-MAC, MVWB835DW1-MAC, MVWB835DW2-MAC, MVWB835DW3-MAC, MVWB835DW4-MAC
- MVWB835DW5-MAC, MVWB855DC0-MAC, MVWB855DC1-MAC, MVWB855DC2-MAC, MVWB855DC3-MAC
- MVWB855DC4-MAC, MVWB855DW0-MAC, MVWB855DW1-MAC, MVWB855DW2-MAC, MVWB855DW3-MAC

- MVWB865GC0-MAC, MVWB865GC1-MAC, MVWB865GW0-MAC, MVWB865GW1-MAC, 7MWTW7000EW0-WPL
- 7MWTW7300EW0-WPL, 7MWTW7300EW1-WPL, 7MWTW8500EC0-WPL, 7MWTW8500EC2-WPL, MVWB835DW4-WPL
- WTW7000DW0-WPL, WTW7000DW1-WPL, WTW7000DW3-WPL, WTW7000DW4-WPL, WTW7040DW0-WPL
- WTW7040DW1-WPL, WTW7040DW2-WPL, WTW7300DC0-WPL, WTW7300DW0-WPL, WTW7300DW1-WPL
- WTW7500GC0-WPL, WTW7500GC2-WPL, WTW7500GC3-WPL, WTW7500GW0-WPL, WTW7500GW2-WPL
- WTW7500GW3-WPL, WTW8000DW0-WPL, WTW8000DW1-WPL, WTW8000DW2-WPL, WTW8000DW4-WPL
- WTW8000DW5-WPL, WTW8040DW0-WPL, WTW8040DW1-WPL, WTW8040DW2-WPL, WTW8040DW3-WPL
- WTW8040DW4-WPL, WTW8500DC0-WPL, WTW8500DC1-WPL, WTW8500DC2-WPL, WTW8500DC3-WPL
- WTW8500DC4-WPL, WTW8500DC5-WPL, WTW8500DC6-WPL, WTW8500DR0-WPL, WTW8500DR1-WPL
- WTW8500DR2-WPL, WTW8500DR3-WPL, WTW8500DR4-WPL, WTW8500DR5-WPL, WTW8500DW0-WPL
- WTW8500DW1-WPL, WTW8500DW2-WPL, WTW8500DW3-WPL, WTW8500DW4-WPL, WTW8500DW5-WPL
- WTW8500DW6-WPL, WTW8700EC0-WPL, WTW8700EC1-WPL, ZAW47115GW0-WPL

SPECIFICATIONS

Feature	Detail
Brand	Amesias
Color	Black
Material	Cast Iron
Style	Above Ground
Product Dimensions	14"L x 14"W x 14"H
Power Source	Electrical
Manufacturer	Amesias
Part Number	W11393685
Item Weight	14.27 pounds
Item model number	W11393685
Warranty Description	6 Months

SETUP AND INSTALLATION

Replacing a washer gearcase requires technical knowledge and specific tools. For safety and proper function, it is highly recommended that installation be performed by a qualified appliance technician. Improper installation can lead to further damage to the appliance or personal injury.

General Installation Considerations:

1. **Safety First:** Always disconnect power to the washing machine before beginning any repair or installation work. Turn off the circuit breaker for the laundry area.
2. **Drain Water:** Ensure the washer tub is completely drained of water.
3. **Access the Gearcase:** This typically involves disassembling parts of the washer cabinet and lifting the tub assembly. Refer to your specific washer model's service manual for detailed disassembly instructions.

4. **Remove Old Gearcase:** Carefully detach the old gearcase, noting the position of all connections and mounting hardware.
5. **Install New Gearcase:** Mount the new W11393685 gearcase, ensuring all bolts are securely fastened and connections are correctly re-established.
6. **Reassembly and Testing:** Reassemble the washer components. Before full operation, perform a test cycle to check for proper function, leaks, and unusual noises.

OPERATING PRINCIPLE

The gearcase is the mechanical heart of your washing machine's wash and spin cycles. It translates the continuous rotational motion of the drive motor into the oscillating motion required for agitation during the wash cycle and the high-speed rotation for water extraction during the spin cycle. A properly functioning gearcase ensures efficient and effective cleaning and drying of your laundry.

MAINTENANCE

As an internal mechanical component, the gearcase itself requires minimal direct user maintenance. However, general appliance care can contribute to its longevity:

- **Avoid Overloading:** Consistently overloading your washing machine puts excessive strain on the gearcase and other drive components, potentially leading to premature wear.
- **Balance Loads:** Unevenly distributed loads can cause the washer to vibrate excessively, which can stress the gearcase and its mounting.
- **Regular Inspections:** If you or a technician are performing other maintenance on your washer, a visual inspection of the gearcase area for any signs of leaks or unusual wear can be beneficial.

TROUBLESHOOTING

A failing gearcase can manifest in several ways. If you experience any of the following symptoms, it may indicate an issue with the gearcase or related drive components. Due to the complexity of this repair, professional diagnosis and service are strongly recommended.

Common Symptoms of a Faulty Gearcase:

- **Loud Noises:** Grinding, whining, or clunking noises during agitation or spin cycles.
- **No Agitation:** The agitator or wash plate does not move or moves weakly during the wash cycle.
- **No Spin:** The washer fills and drains but does not spin, or spins very slowly.
- **Oil Leaks:** Visible oil or grease leaks from the bottom of the washing machine.

If you observe these issues, contact a certified appliance repair technician for proper diagnosis and repair.

WARRANTY INFORMATION

This W11393685 Washer Gearcase comes with a manufacturer's warranty of **6 Months**. Please retain your proof of purchase for any warranty claims. For specific terms and conditions, refer to the warranty documentation provided with your purchase or contact the seller directly.

CUSTOMER SUPPORT

For further assistance, technical inquiries, or to report issues with your W11393685 Washer Gearcase, please contact the seller or manufacturer directly. When contacting support, please have your product model number (W11393685) and details of your washing machine model readily available.

You may also refer to the original service manual for your specific Whirlpool washing machine model for detailed diagrams and repair procedures.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question