Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Donner /
- Donner SE-1 88 Key Digital Piano User Manual

Donner SE-1

Donner SE-1 88 Key Digital Piano User Manual

Model: SE-1

1. Introduction

Thank you for choosing the Donner SE-1 88 Key Digital Piano. This manual provides essential information for setting up, operating, and maintaining your instrument. The SE-1 is designed to offer a realistic piano playing experience with its graded hammer action keys and rich sound capabilities, suitable for both practice and performance.

2. IMPORTANT SAFETY INFORMATION

- Do not expose the instrument to extreme temperatures, humidity, or direct sunlight.
- Avoid placing the instrument near heat sources such as radiators or amplifiers.
- Do not place objects containing liquids on the instrument.
- · Use only the specified power adapter.
- · Keep out of reach of small children to prevent accidental injury or damage.
- Disconnect the power cord during lightning storms or when unused for long periods.
- · Do not attempt to disassemble or modify the instrument. Refer all servicing to qualified personnel.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Donner SE-1 88 Key Digital Piano
- Music Rest
- Sustain Pedal (single)
- Triple Pedals (for use with stand)
- Headphones
- Power Adapter
- User Manual (this document)
- Optional: Piano Stand (if purchased as part of a bundle)



Figure 3.1: Donner SE-1 Digital Piano with included single sustain pedal and headphones.

4. SETUP

4.1 Assembling the Piano and Stand (Optional)

If your package includes a piano stand, follow the instructions provided with the stand for assembly. The SE-1 digital piano is designed to be lightweight and can be easily placed on a compatible X-stand or a dedicated piano stand. Ensure the piano is stable and level before use.

Figure 4.1: The Donner SE-1 Digital Piano can be placed on an X-stand for stable playing.

4.2 Connecting Peripherals

Locate the various ports on the rear panel of the SE-1 digital piano:

- Power Interface (DC 12V): Connect the included power adapter here.
- Sustain Pedal Socket (PEDAL): Connect the sustain pedal(s) here.
- Audio Interface (AUDIO IN/OUT): For connecting external audio devices or outputting audio to an amplifier/mixer.
- MIDI Interface (MIDI IN/OUT): For connecting to other MIDI devices.
- USB Transmission Interface (USB): For connecting to a computer or smart device for MIDI data transfer.
- Headphones Jack (3.5mm): Connect the included headphones for private practice.

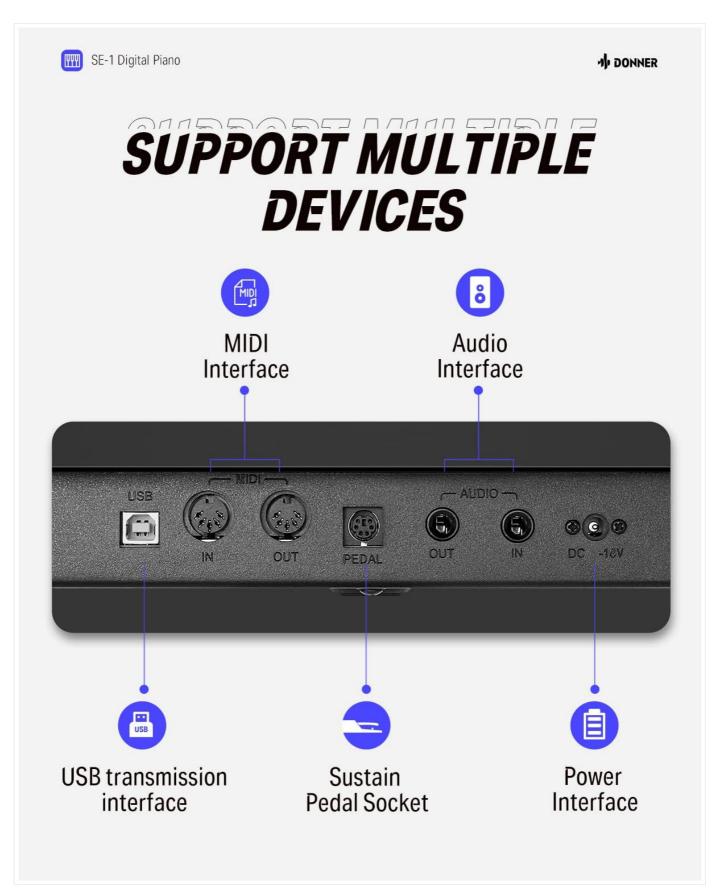


Figure 4.2: Rear panel connections of the Donner SE-1 Digital Piano.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the **POWER** button located on the control panel to turn the digital piano on or off.

5.2 Basic Playback and Controls

The SE-1 features 88 full-size graded hammer action keys, providing a realistic piano feel. The control panel includes an LCD screen for easy navigation and selection of various functions.

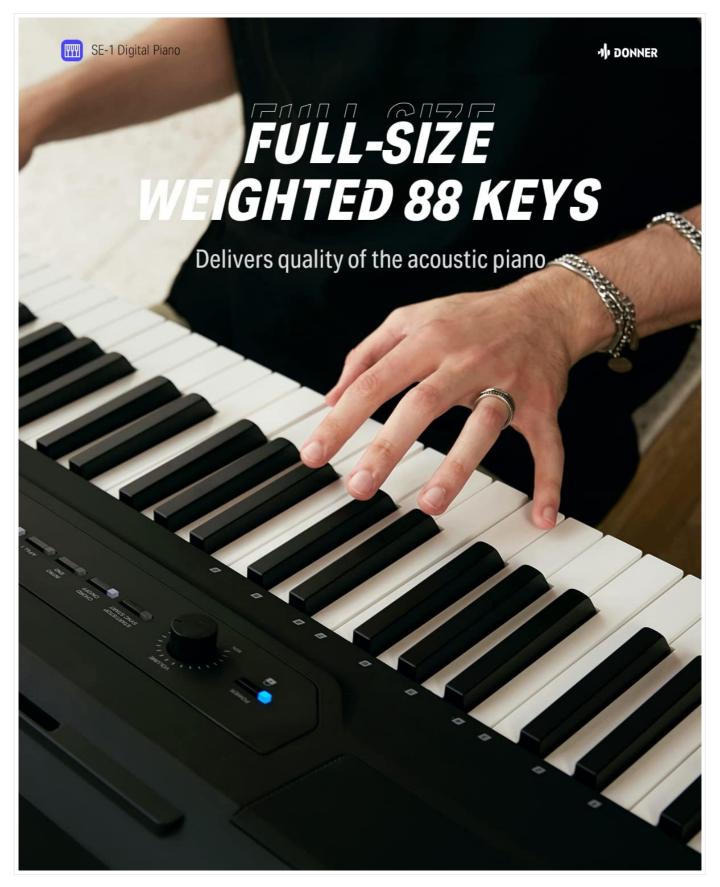


Figure 5.1: Graded hammer action keys provide a realistic playing experience.



Figure 5.2: The 1.3-inch LCD display and panel buttons for intuitive control.

5.3 Sound Features

- Tones: The piano includes 200 different tones. Use the TONE button and navigation controls to select your desired instrument sound.
- Rhythms: Access 100 built-in rhythms using the RHYTHM button.
- Demo Songs: Explore 60 pre-loaded demo songs.
- Polyphony: The SE-1 supports 128-note polyphony, allowing for complex musical passages without notes cutting

off.

- **Dual-Tone Mode:** Combine two voices simultaneously (e.g., piano and strings) for richer sounds. Refer to the detailed manual section for activation.
- Reverb: The instrument features 4 reverb types to add depth to your sound.
- Metronome: Use the metronome function for timing practice.

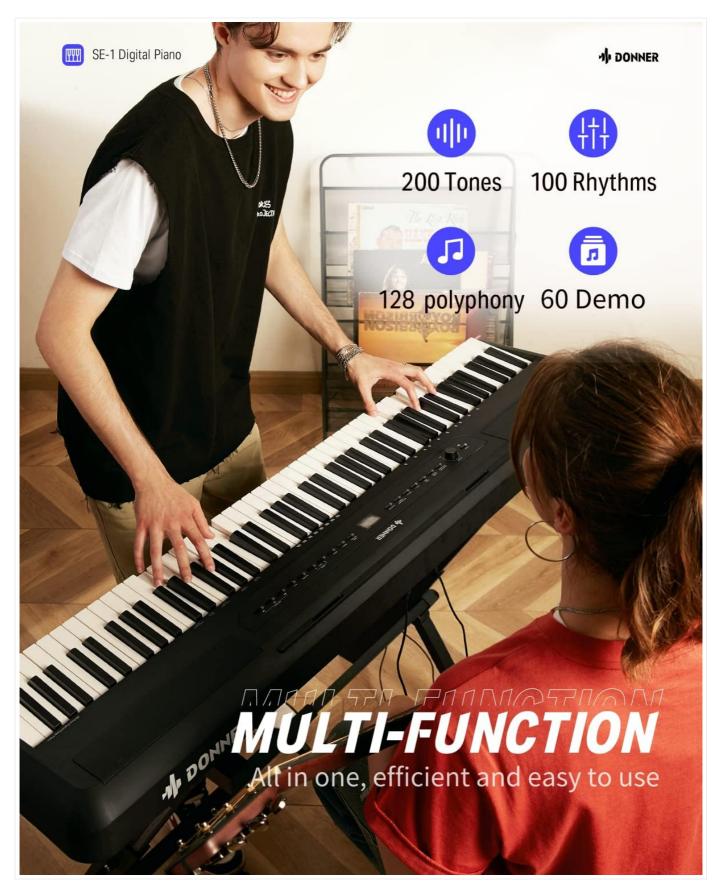


Figure 5.3: The SE-1 offers a wide range of tones, rhythms, and demo songs.

5.4 Speaker System and Headphones

The SE-1 is equipped with dual 15W stereo speakers for clear and immersive sound. For private practice, connect the included headphones to the 3.5mm headphone jack. This will mute the internal speakers.



Figure 5.4: Built-in dual 15W stereo speakers provide excellent sound quality.

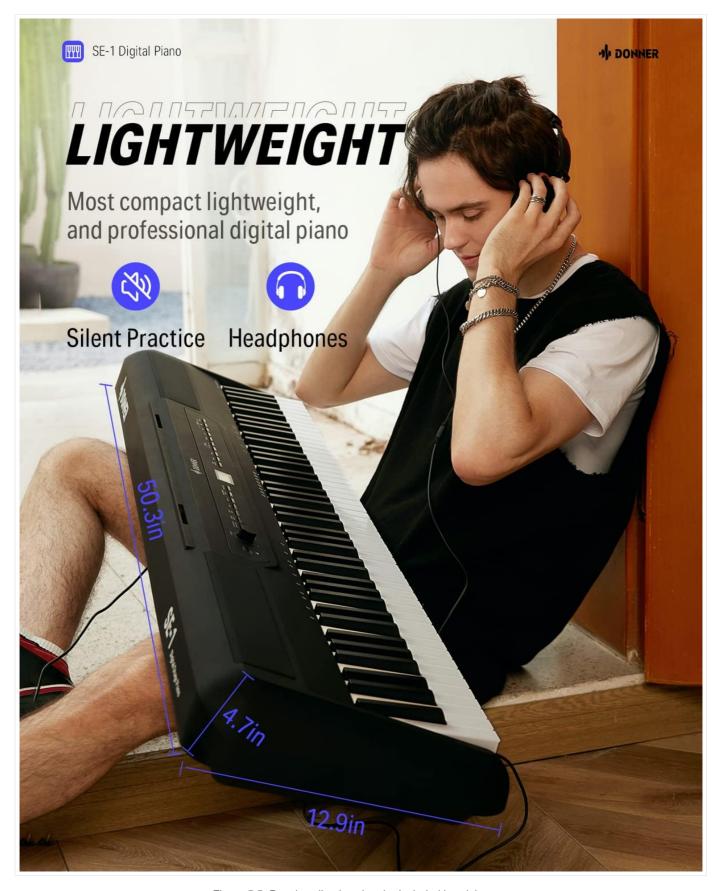


Figure 5.5: Practice silently using the included headphones.

5.5 Connectivity (Bluetooth, MIDI, USB)

- **Bluetooth:** The SE-1 supports wireless Bluetooth connectivity for audio streaming or MIDI over Bluetooth. Refer to the detailed manual for pairing instructions.
- MIDI IN/OUT: Connect to external MIDI devices suchs as sound modules, sequencers, or other keyboards.
- **USB:** Connect the piano to a computer (Windows/macOS) or mobile device (iOS/Android) via USB for MIDI data transfer, enabling use with music software for recording, arranging, or learning applications.

Your browser does not support the video tag.

Video 5.1: Official product video demonstrating the Donner SE-1 88 Key Full-Size Digital Piano's features and portability.

6. MAINTENANCE

- Cleaning: Use a soft, dry cloth to wipe the surface of the instrument. For stubborn dirt, dampen the cloth slightly with water and a mild detergent, then wipe dry immediately. Avoid abrasive cleaners or solvents.
- Key Care: Keep the keys clean. If they become dirty, wipe them gently with a soft, slightly damp cloth.
- **Storage:** When not in use, store the piano in a clean, dry environment away from direct sunlight and extreme temperatures.
- **Transportation:** The SE-1 is designed to be portable. When transporting, ensure it is securely packed to prevent damage.

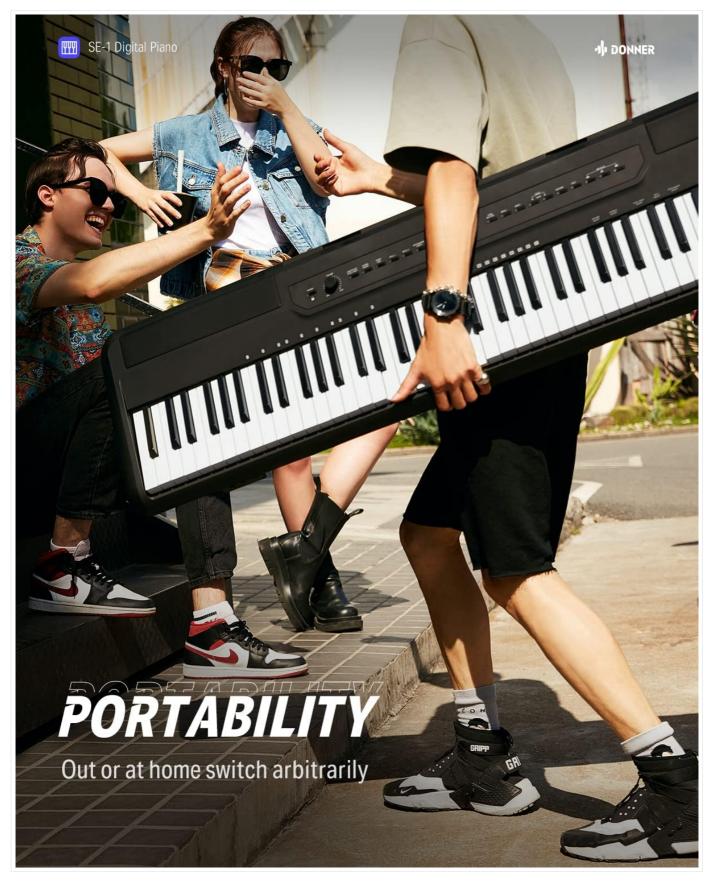


Figure 6.1: The lightweight design of the SE-1 makes it highly portable.

7. TROUBLESHOOTING

Problem Possible Cause	Solution
------------------------	----------

Problem	Possible Cause	Solution
No sound from speakers.	Volume is too low. Headphones are connected. Power adapter not properly connected.	Increase the volume using the volume knob. Disconnect headphones. Ensure power adapter is securely plugged into the piano and wall outlet.
Some keys do not produce sound.	Dust or debris under the key. Internal issue.	Gently clean around the affected key. If problem persists, contact customer support.
Power cord feels loose or disconnects easily.	Faulty power adapter or port.	Ensure the adapter is fully inserted. If the issue persists, contact customer support for a replacement adapter or service.
Bluetooth connection issues.	Device not in pairing mode. Interference.	Ensure both devices are in pairing mode. Move closer to the piano and away from other wireless devices.

8. SPECIFICATIONS

Feature	Detail
Model Name	SE-1
Number of Keys	88
Key Action	Graded Hammer Action Weighted Keys
Polyphony	128-note
Tones	200
Rhythms	100
Demo Songs	60
Reverb Types	4
Display	1.3 inches LCD Screen
Speakers	Dual 15W Stereo Speakers
Connectivity	Bluetooth, MIDI IN/OUT, USB, 3.5mm Audio IN/OUT, 3.5mm Headphone Jack
Power Source	Corded Electric (DC 12V)
Item Weight	30 pounds (approx. 13.6 kg)
Product Dimensions	55.91 x 15.35 x 7.48 inches (approx. 142 x 39 x 19 cm)

9. WARRANTY AND SUPPORT

Donner provides a standard warranty for its products. For detailed warranty information, product registration, or technical support, please visit the official Donner website or contact their customer service directly. Keep your purchase receipt as

© 2024 Donner. All rights reserved.

Related Documents - SE-1

DONNER OURA PIANO SEES DONNER OURA PIANO SEESS DONNE PIANO S	Donner OURA Piano S300 User Manual: Setup, Operation, and Maintenance Explore the Donner OURA Piano S300 digital piano with this comprehensive user manual. Learn about its 88-key graded hammer keyboard, Bluetooth/MIDI features, setup, safe operation, and maintenance. Ideal for musicians seeking detailed guidance on their Donner digital piano.
DONNER DONNER DONNER DONNER MANUAL DONNER HISTORICA PINO	Donner DDP-200 88 Keys Digital Piano User Manual Comprehensive user manual for the Donner DDP-200 88 Keys Digital Piano, covering assembly, panel instructions, connections, functions, maintenance, security, and troubleshooting.
DONNER DONNER USER MANUAL	Donner DDP-100S Digital Piano User Manual Comprehensive user manual for the Donner DDP-100S Digital Piano, detailing setup, product parameters, features, assembly, voice and rhythm lists, demo songs, and important safety information.
	Donner OURA Piano S100 User Manual Comprehensive user manual for the Donner OURA Piano S100 digital piano, detailing safety precautions, setup instructions, technical specifications, connection guides, operational features, maintenance advice, and warranty information.
JONNER® USER MANUAL LOCATION OF THE	Donner DDP-400 Digital Piano User Manual This user manual provides comprehensive instructions for the Donner DDP-400 Digital Piano. It covers setup, assembly, features, operation, troubleshooting, and technical specifications for this 88-key weighted keyboard instrument.

1 DONNER



OURA PIANO

Der Messel | Maruel d'reinselons | Enderungsanleitung | Manuel d'U Manuel de Lituario | 1484 (fin 128 | 1830(108 | 1870)(101

Donner OURA PIANO R300 User Manual

Comprehensive user manual for the Donner OURA PIANO R300 digital piano, covering safety instructions, product details, assembly, ports, functions, and specifications.