

COSTWAY B09MH927F1

COSTWAY Kids Play Kitchen Instruction Manual

MODEL: B09MH927F1

1. INTRODUCTION

Thank you for choosing the COSTWAY Kids Play Kitchen. This realistic toy kitchen is designed to provide hours of imaginative play for children aged 3-7 years, fostering independence, communication, creativity, hand-eye coordination, and logical thinking. It features realistic sounds and lights, a rotating faucet, and ample storage space.

Please read this manual carefully before assembly and use to ensure safe and proper operation. Keep this manual for future reference.



Image 1.1: Front view of the COSTWAY Kids Play Kitchen, showcasing its realistic design with a refrigerator, stove, sink, and microwave.

2. PACKAGE CONTENTS

Before beginning assembly, please verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- 1 x Toy Kitchen Unit
- 1 x Pan with Lid
- 1 x Pot with Lid
- 3 x Spatulas (various types)
- 1 x Instruction Manual

Utensili da cucina completi

Soddisfa le molteplici esigenze culinarie del tuo bambino

3 x utensili da cucina



1 x padella con coperchio

1 x pentola con coperchio

Image 2.1: The complete set of kitchen utensils included with the play kitchen, featuring three spatulas, one pan with a lid, and one pot with a lid.

3. SETUP AND ASSEMBLY

The COSTWAY Kids Play Kitchen requires assembly. Detailed instructions and all necessary accessories are included in the package. Parental assistance is recommended for assembly.

3.1 Assembly Steps

1. Unpack all components and lay them out on a clean, flat surface.
2. Identify each part using the provided diagram in the separate assembly instructions.
3. Follow the step-by-step instructions carefully, ensuring all screws and fasteners are securely tightened. Avoid over-tightening to prevent stripping.
4. Ensure all movable parts, such as doors and the faucet, operate smoothly after assembly.



Set da cucina per bambini premium



Struttura
robusta



Materiale di
alta qualità



Facile
montaggio

Image 3.1: Detailed assembly diagram showing the various components and overall dimensions of the play kitchen, including individual accessory measurements.

4. OPERATING INSTRUCTIONS

The COSTWAY Kids Play Kitchen offers various interactive features for an immersive play experience.

4.1 Realistic Stove

The stove features realistic lights and sounds to enhance the cooking experience. Turn the knobs to activate the sounds and lights, simulating a real cooking environment.

SIMULATO STUFA



Ruota la manopola
con il suono di un clic

La fiamma viva offre una
migliore esperienza di cottura

Image 4.1: A close-up view of the simulated stove, highlighting the functional knobs that produce clicking sounds and the realistic flame effect for an enhanced cooking experience.

4.2 Rotating Faucet and Sink

The faucet can be rotated 180 degrees and is easy to turn on and off, allowing children to simulate washing dishes or preparing food.

RUBINETTO E LAVELLO REALISTICI

Perfetto per lavare frutta e verdura prima della cottura



Image 4.2: A detailed view of the realistic faucet and sink area, demonstrating the 180-degree rotatable faucet and its easy-to-operate design, perfect for pretend washing.

4.3 Storage Areas

The play kitchen includes various storage areas such as an oven, microwave, and open shelves. These spaces encourage children to practice organizing and classifying their play items.



Image 4.3: A child engaging with the COSTWAY Kids Play Kitchen, demonstrating the interactive features and the ample storage options available for play food and accessories.

5. MAINTENANCE

Proper maintenance will extend the life of your COSTWAY Kids Play Kitchen.

5.1 Cleaning

- Wipe surfaces with a soft, damp cloth.
- Avoid using abrasive cleaners or harsh chemicals, as they may damage the finish.
- Do not immerse any part of the kitchen in water.

5.2 Storage

Store the play kitchen in a dry environment, away from direct sunlight and extreme temperatures, to prevent warping or damage to the MDF material.

6. TROUBLESHOOTING

If you encounter any issues with your play kitchen, please refer to the following common troubleshooting tips:

- **Lights/Sounds Not Working:** Check if batteries are required for the stove or other electronic components (if applicable) and ensure they are correctly installed and not depleted.
- **Loose Parts:** Periodically check all screws and fasteners to ensure they are tight. Re-tighten any loose connections, being careful not to overtighten.
- **Doors/Drawers Sticking:** Ensure no foreign objects are obstructing the movement. Check for proper alignment during assembly.

If the problem persists after attempting these solutions, please contact COSTWAY customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	81 x 29 x 88.5 cm
Net Weight	14.5 kg
Material	Engineered Wood (MDF)
Color	White and Natural Wood
Recommended Age	3-7 Years
ASIN	B09MH927F1

8. WARRANTY AND SUPPORT

COSTWAY is committed to providing high-quality products and dedicated customer service. For any questions, concerns, or assistance regarding your Kids Play Kitchen, please contact COSTWAY customer support through the retailer's platform or the official COSTWAY website.

Please retain your proof of purchase for any warranty claims or support inquiries.

