

Manuals.plus /

- › Gaiatop /
- › Gaiatop Mini Portable Fan User Manual

Gaiatop BP26

Gaiatop Mini Portable Fan User Manual

Model: BP26 | Brand: Gaiatop

PRODUCT OVERVIEW

The Gaiatop Mini Portable Fan (Model BP26) is a compact, powerful, and stylish personal fan designed for versatile use. Its lightweight and rechargeable design makes it ideal for both handheld and desktop cooling, perfect for travel, outdoor activities, or everyday use. Featuring three adjustable speeds and a robust brushless motor, it provides efficient airflow to keep you cool and comfortable.



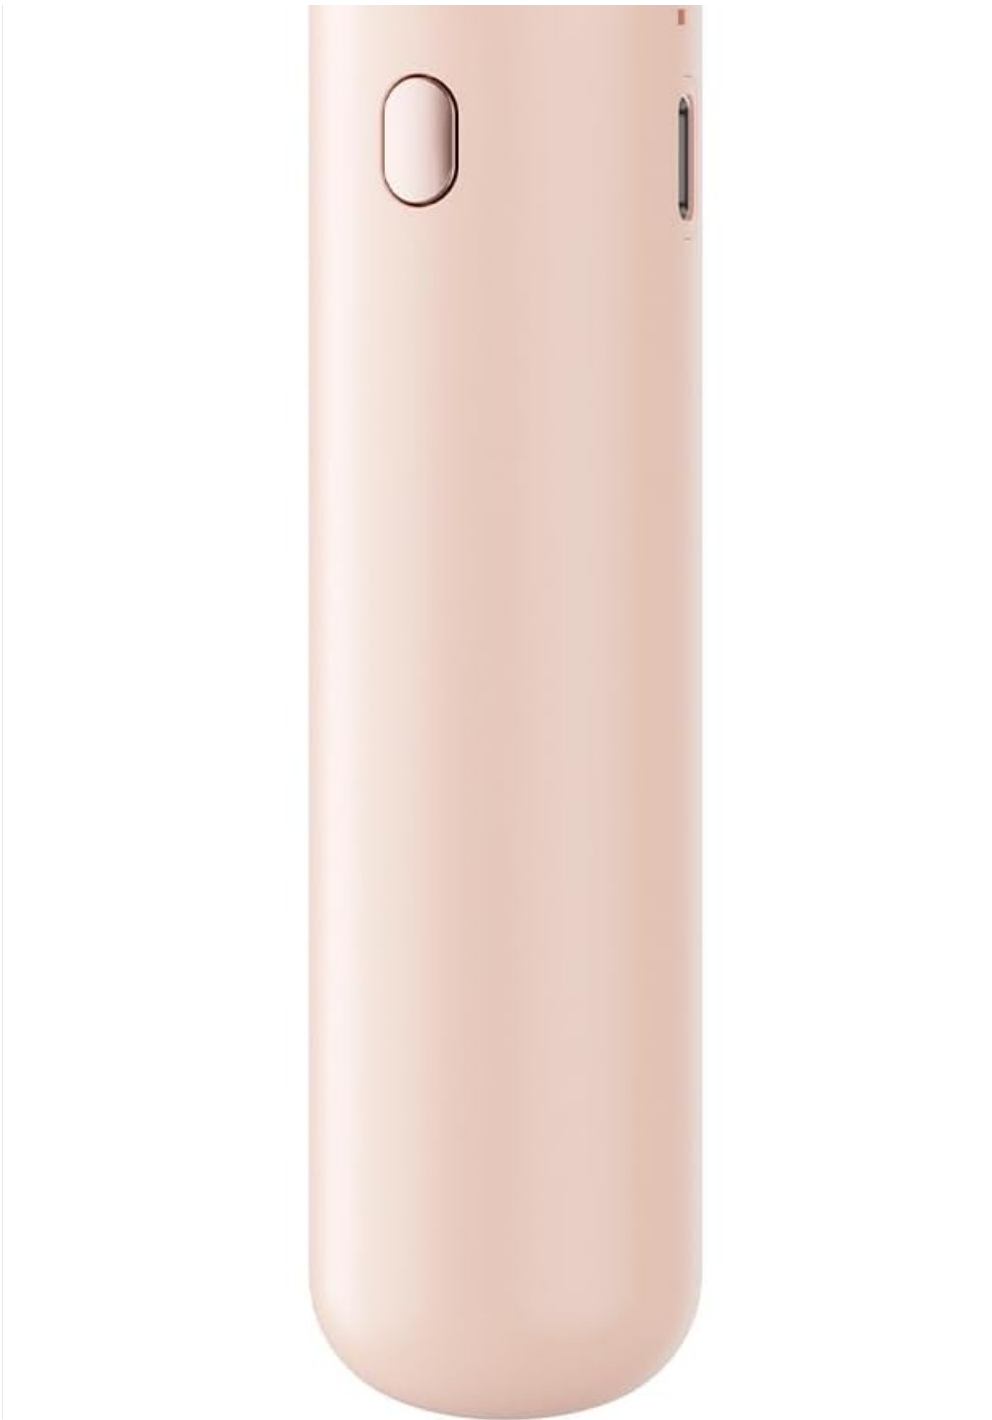


Figure 1: Gaiatop Mini Portable Fan (Pink)

Key Features

- **Powerful Airflow:** Equipped with a built-in brushless motor, delivering strong wind with 3 adjustable speeds (low-speed 3500r/m, medium speed 4500r/m, high-speed 7500r/m).
- **Rechargeable Battery:** Features a long-lasting rechargeable battery, fully charging in approximately 2.5 hours via USB.
- **Dual Functionality:** Can be used as a handheld fan or converted into a stable desktop fan with the included base.
- **Compact & Portable:** Small size (6.1*5.2*15 cm / 2.4*2*5.9 inch) and lightweight (118 g / 0.26 lb) for easy carrying in pockets, bags, or attached to backpacks with the included lanyard.
- **Durable Design:** Safeguarded by a US Design Patent (Patent Number US D964,544 S).

PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Handheld Portable Fan (Gaiatop BP26)
- 1 x Base and Lanyard
- 1 x USB Charging Cable
- 1 x User Manual



Figure 2: Package Contents

SETUP GUIDE

Charging the Fan

Before first use, fully charge the fan. A full charge typically takes 2.5 hours. The fan can operate stably while charging.

1. Locate the USB charging port on the side of the fan handle.
2. Connect the provided USB charging cable to the fan's charging port.
3. Connect the other end of the USB cable to a compatible power source, such as a USB adapter, computer USB port, or power bank.
4. The charging indicator light will illuminate during charging and turn off when fully charged.

Support Multiple Charging Methods

Full charged in 2-3 hours

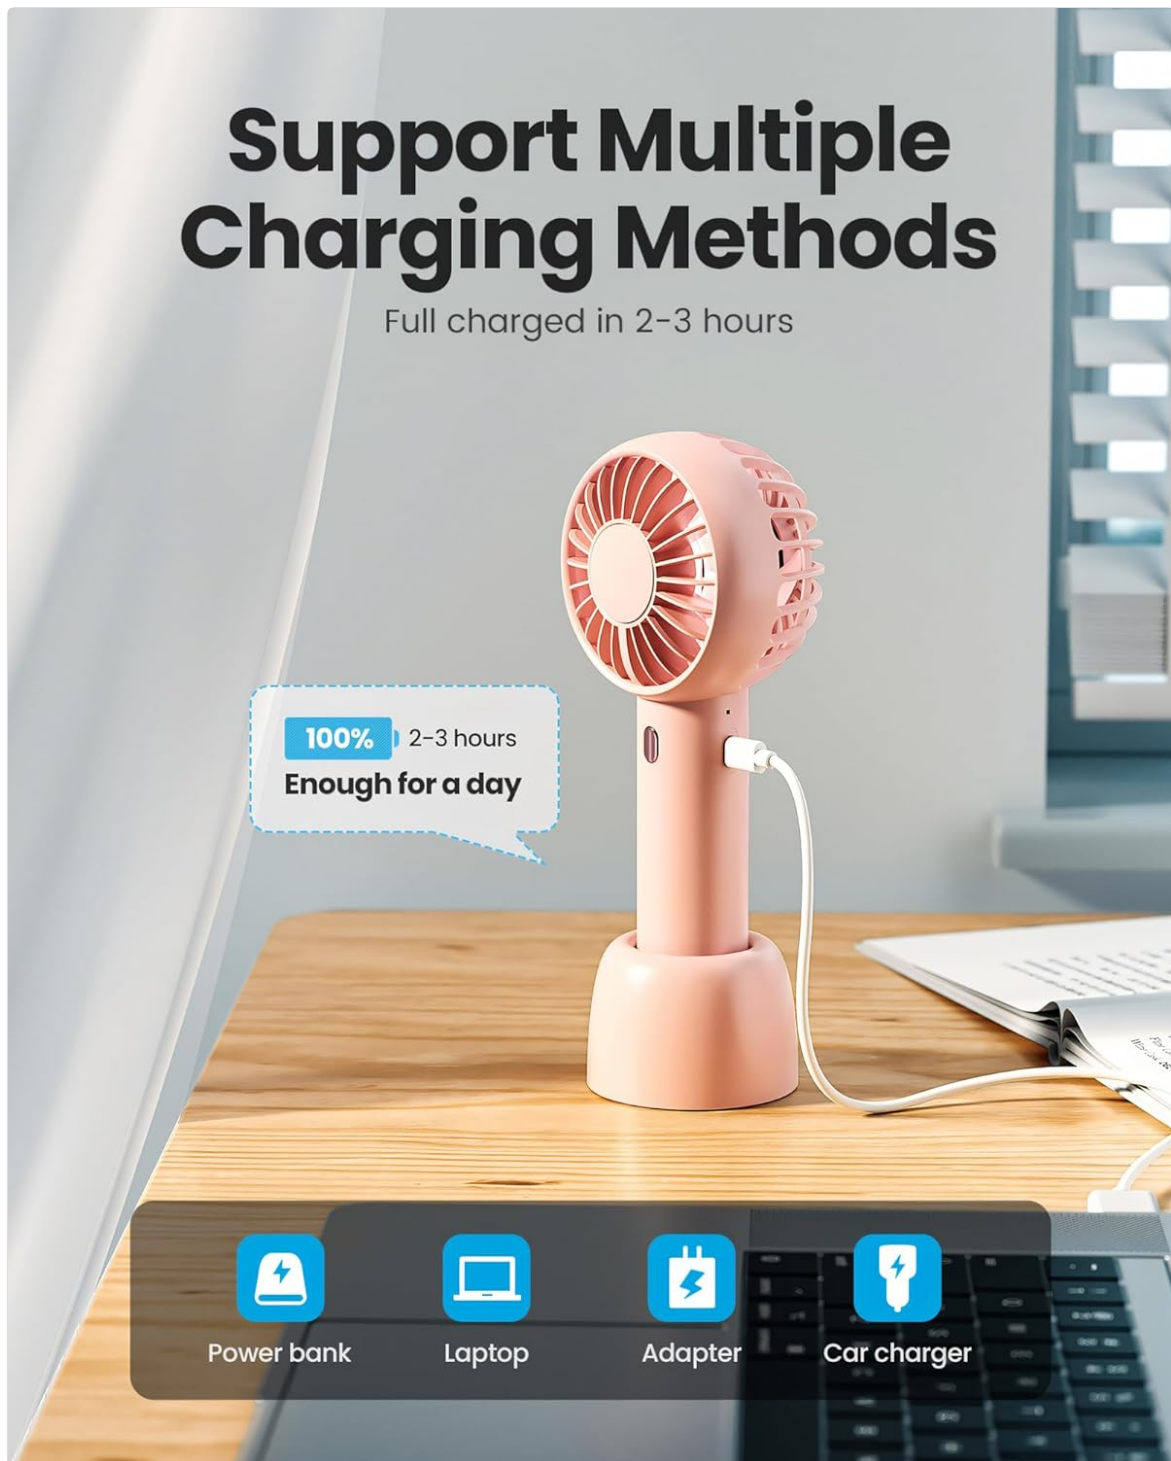


Figure 3: Charging the Fan via USB

OPERATING YOUR FAN

Power On/Off and Speed Control

The fan features a simple one-touch button for power and speed adjustment.

1. **To Power On (Speed 1):** Press the power button once. The fan will start at low speed (3500r/m).
2. **To Adjust Speed (Speed 2):** Press the power button a second time for medium speed (4500r/m).
3. **To Adjust Speed (Speed 3):** Press the power button a third time for high speed (7500r/m).

4. **To Power Off:** Press the power button a fourth time to turn the fan off.



Figure 4: One-Touch Operation

Handheld and Desktop Use

The Gaiatop Mini Portable Fan offers flexible usage options.

- **Handheld Use:** Hold the fan by its ergonomic handle. For added security, attach the included lanyard to the designated loop on the handle to prevent accidental drops.
- **Desktop Use:** Insert the fan's handle into the provided base. The base ensures stability, transforming your portable fan into a convenient desk fan for hands-free cooling.

Enjoy Your Cool Summer

✓ Design Patent Protected

Patent Number: US D964,544 S



Figure 5: Handheld and Desktop Configurations

CARE AND MAINTENANCE

Cleaning

To ensure optimal performance and longevity of your fan, regular cleaning is recommended.

- Always power off the fan before cleaning.
- Use a soft, dry cloth to wipe the exterior of the fan.
- For dust accumulation on the fan blades, use a soft brush or compressed air. Do not use water or any liquid cleaners directly on the fan.

Storage

When not in use for extended periods, store the fan properly.

- Ensure the fan is fully charged before storing to maintain battery health.
- Store the fan in a cool, dry place, away from direct sunlight and extreme temperatures.
- Keep the fan and its accessories in their original packaging or a protective case to prevent damage.

TROUBLESHOOTING

If you encounter any issues with your Gaiatop Mini Portable Fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan not turning on.	Low battery or no charge.	Charge the fan using the provided USB cable.
Weak airflow.	Fan is on low speed setting or obstructed.	Press the power button to increase speed. Ensure no obstructions are blocking the fan blades.
Battery not charging.	Faulty cable or power source.	Try a different USB port or charging adapter. Ensure the cable is securely connected.
Unusual noise during operation.	Dust or foreign object in fan blades.	Power off the fan and carefully inspect for any obstructions. Clean the blades if necessary.

TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Gaiatop
Model Name	BP26
Color	Pink
Power Source	Battery Powered (Rechargeable Lithium Ion)
Number of Speed Levels	3
Low Speed RPM	3500 r/m
Medium Speed RPM	4500 r/m
High Speed RPM	7500 r/m
Product Dimensions (L x W x H)	15 x 5.2 x 6.1 cm (5.9 x 2 x 2.4 inches)
Item Weight	118 g (0.26 lb / 4.16 ounces)
Charging Time	Approx. 2.5 hours
Connector Type	USB
Blade Material	Plastic
Country of Origin	China

WARRANTY AND SUPPORT

Specific warranty details for the Gaiatop Mini Portable Fan (Model BP26) are not provided in this manual. For warranty information, technical support, or any product-related inquiries, please contact Gaiatop customer service directly through their official website or the retailer from whom the product was purchased. Please retain your proof of purchase for any warranty claims.