

[Manuals.plus](#) /

› [Owigift](#) /

› Owigift Refrigerator Door Handle Replacement Manual for GE Models

Owigift GTH18GBDGRWW

Owigift Refrigerator Door Handle Replacement Manual

For GE Refrigerator Models

1. INTRODUCTION

This manual provides instructions for the installation and maintenance of your Owigift Refrigerator Door Handle replacement set. These handles are designed to replace original handles on compatible GE refrigerator models, restoring functionality and appearance to your appliance. Please read all instructions carefully before proceeding with installation.

2. SAFETY INFORMATION

Always prioritize safety when performing appliance repairs. Disconnect power to the refrigerator before beginning any work. Wear appropriate personal protective equipment, such as gloves, if necessary. If you are unsure about any step, consult a qualified technician.

3. PACKAGE CONTENTS

Your package should contain the following items:

- 2 x Refrigerator Door Handles (1 for freezer door, 1 for fridge door)

Note: Mounting screws are not included. You will need to reuse the existing screws from your old refrigerator handles.



Image: Two white plastic refrigerator door handles, one for the freezer and one for the fridge, shown from a side perspective.

4. COMPATIBILITY

These replacement handles are compatible with various GE refrigerator models. Please verify your model number against the list below. You can typically find your model number inside the refrigerator compartment or on the back of the appliance.

Compatible Models:

- GTH17GBEDRWW, GTH17GBEFRWW
- GTH18GBD4RBB, GTH18GBD4RCC, GTH18GBD4RWW
- GTH18GBDCRBB, GTH18GBDCRCC, GTH18GBDCRWW
- GTH18GBDDRWW, GTH18GBDERWW, GTH18GBDHRWW
- GTH18GCDCRBB, GTH18GCDCRCC, GTH18GCDCRWW
- GTH18GCDDRWW, GTH18GCDERWW
- GTH18LBD4RBB, GTH18LBD4RWW, GTH18LBDCRBB
- GTH18LBDCRWW, GTH18LBDERWW
- GTH18LCD4RBB, GTH18LCD4RWW, GTH18LCDCRBB
- GTH18LCDCRWW, GTH18LCDERWW
- GTH18GBDGRWW, GTH18GBDR4WW, GTH18GCDGRWW
- GTS18GBEMRWW, GTS18GBEJRWW
- GTT18GBD4RCC, GTT18GBD4RWW, GTT18GBDCRCC

- GTT18GBDCRWW, GTT18GBDDRWW, GTT18GBDERWW

If your model number is not listed or you are unsure about compatibility, please contact our customer support team for assistance.

5. INSTALLATION INSTRUCTIONS

Follow these general steps to replace your refrigerator door handles. Specific steps may vary slightly depending on your refrigerator model.

1. **Prepare for Installation:** Ensure the refrigerator is unplugged from the power outlet to prevent accidental operation.
2. **Remove Old Handles:** Locate the screws securing the old handles. These are typically found on the inside edge of the door or under a cap on the handle itself. Carefully unscrew and remove the old handles. Keep the screws as they will be reused.
3. **Inspect Mounting Points:** Clean any debris or residue from the handle mounting points on the refrigerator door.
4. **Attach New Handles:** Align the new handles with the screw holes on the refrigerator door. Use the screws saved from the old handles to secure the new handles in place. Ensure they are tightened firmly but do not overtighten to avoid stripping the screws or damaging the plastic.
5. **Test Handles:** Gently pull on the newly installed handles to ensure they are securely attached.
6. **Restore Power:** Once both handles are securely installed, plug the refrigerator back into the power outlet.



Image: A closer view of the two white refrigerator door handles, highlighting the mounting ends where they attach to the appliance. This view helps in identifying the screw hole configuration.

Installation Video Resources

The following videos provide visual guidance for refrigerator handle installation. While they may feature similar products from other brands, the general installation principles apply.

Video: This video offers a brief demonstration of refrigerator door handles, including close-ups of mounting points and discussion of features. It can assist in understanding the physical aspects of installation.

Video: A visual guide showcasing a similar set of white refrigerator door handles. This can be helpful for visualizing the installation process, though minor product variations may exist.

6. OPERATING INSTRUCTIONS

These handles are replacement parts and do not alter the operational functions of your refrigerator. Use them as you would your original handles to open and close the refrigerator and freezer doors.

7. MAINTENANCE

To maintain the appearance and longevity of your new refrigerator door handles, clean them regularly with a soft cloth and mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive pads, which can damage the plastic finish.

8. TROUBLESHOOTING

If you encounter any issues with the fit or function of your new handles:

- Double-check that you have the correct model number for your refrigerator.
 - Ensure all screws are properly aligned and tightened.
 - If problems persist, please contact our customer support team for further assistance.
-

9. SPECIFICATIONS

- **Material:** Plastic
 - **Color:** White
 - **Number of Items:** 2 (one for freezer, one for fridge)
 - **Attachment Mechanism:** Screw Attachment
 - **Special Feature:** Easy to Install
-

10. WARRANTY AND SUPPORT

Owgift is committed to customer satisfaction. We offer a 365-day return and exchange policy. If you have any questions about product replacement or encounter any issues, please contact us via Amazon email or question. Our service team will respond to your inquiry within 24 hours to resolve your problem.
