

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [respekta](#) /

› [Respekta GSP60V Fully Integrated Dishwasher User Manual](#)

respekta 0820GSP60V

# Respekta GSP60V Fully Integrated Dishwasher User Manual

Model: 0820GSP60V

## INTRODUCTION

This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your Respekta GSP60V fully integrated dishwasher. Please read this manual thoroughly before using the appliance and keep it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not operate the dishwasher if it is damaged.
- Keep children away from the dishwasher, especially when the door is open.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Do not touch the heating element during or immediately after use.
- Always disconnect the appliance from the power supply before cleaning or performing maintenance.

## SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your dishwasher. It is recommended that installation be performed by a qualified technician.

### Unpacking and Placement

Carefully remove all packaging materials. Inspect the dishwasher for any shipping damage. Place the dishwasher in the desired location, ensuring sufficient space for ventilation and door opening.



Figure 1: Front view of the Respekta GSP60V fully integrated dishwasher. This image shows the appliance ready for installation into a kitchen cabinet.



Figure 2: Side view of the Respekta GSP60V dishwasher, illustrating its compact design for integration.



Figure 3: Rear view of the Respekta GSP60V dishwasher, showing connection points for water and power.

### **Adjustable Feet**

The dishwasher features 5 cm height-adjustable feet, allowing for easy adjustment to your kitchen's working height and ensuring a perfect fit within any kitchen cabinetry.



Figure 4: Dimensions of the Respekta GSP60V dishwasher, indicating its height, width, and depth for installation planning.

## Water and Electrical Connections

Connect the inlet hose to a cold water supply and the drain hose to a suitable drain. Ensure all connections are secure to prevent leaks. Connect the appliance to a grounded electrical outlet with the correct voltage (230 Volts) and frequency (50 Hz).

*Included components: User Manual, Inlet Hose, Drain Hose, dishwasher, Cutlery Basket, Instruction manual.*

## OPERATING INSTRUCTIONS

This section details how to load your dishwasher and select the appropriate wash program.

### Loading the Dishwasher

The dishwasher is designed with two wash levels and includes a flexible cutlery basket, a folding plate holder, and two cup holders for efficient loading. Ensure dishes are loaded in a way that does not obstruct the spray arms.



Figure 5: Interior view of the Respekta GSP60V dishwasher, showing the upper and lower racks, and the flexible cutlery basket.



Figure 6: The dishwasher interior loaded with various dishes, demonstrating optimal loading for effective cleaning.



Figure 7: Close-up of the lower rack, showing how cups can be placed for washing.

## Control Panel and Programs

The dishwasher features a push-button control panel with an LED display for program selection and status indication.



Figure 8: Close-up of the control panel, displaying program indicators and function buttons.



Figure 9: Detailed view of the control panel buttons, including power, program selection, and delay start options.

The dishwasher offers 6 wash programs:

- **Intensive:** For heavily soiled dishes and pots.
- **Universal:** Standard program for normally soiled dishes.
- **Eco:** Energy-efficient program for daily use.
- **Glass:** Gentle program for delicate glassware.
- **90 min. programs:** For moderately soiled dishes requiring a quicker wash.
- **Short program:** A rapid wash cycle for lightly soiled dishes.

## Special Functions

- **Half Machine (Half Load):** Allows for washing a smaller load with reduced water and energy consumption.
- **Start Time Setting:** Delay the start of a wash cycle (e.g., 3h, 6h, 9h options).
- **Fabric Softener and Regeneration Salt Indicator:** LED indicators alert you when to refill rinse aid and dishwasher salt.
- **Overflow Protection:** A safety feature to prevent water overflow.

## MAINTENANCE AND CLEANING

---

Regular maintenance ensures optimal performance and extends the lifespan of your dishwasher.

### Cleaning the Filters

The filter system prevents larger food particles from entering the pump. Clean the filters regularly to ensure efficient washing. Refer to the full instruction manual for detailed steps on removing and cleaning the filter assembly.

### Adding Salt and Rinse Aid

The dishwasher is equipped with indicators for regeneration salt and rinse aid. Refill these compartments when the respective indicators illuminate on the control panel. Use only dishwasher-specific salt and rinse aid.

### Exterior and Interior Cleaning

Wipe the exterior of the dishwasher with a damp cloth. For the interior, periodically run a dishwasher cleaner or a hot cycle

with vinegar to remove grease and limescale buildup.

## TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their potential solutions.

Problem	Possible Cause	Solution
Dishwasher does not start	Power cord not plugged in; Door not closed properly; Fuse blown.	Check power connection; Ensure door latches securely; Check household fuse/circuit breaker.
Dishes are not clean	Improper loading; Clogged spray arms; Insufficient detergent; Clogged filters.	Reload dishes correctly; Clean spray arm nozzles; Use correct amount of detergent; Clean filters.
Water not draining	Drain hose kinked or blocked; Clogged drain pump filter.	Check and clear drain hose; Clean drain pump filter.
Excessive noise	Dishes rattling; Foreign object in pump; Improper installation.	Rearrange dishes; Check for foreign objects; Ensure dishwasher is level.

For more complex issues, please consult a qualified service technician.

## TECHNICAL SPECIFICATIONS

Feature	Specification
Model	0820GSP60V
Dimensions (H x W x D)	81.5 x 59.8 x 55 cm
Item Weight	33 Kilograms
Capacity	12 Place Settings
Energy Efficiency Class	E
Annual Energy Consumption	92 kWh per 100 cycles (Eco-programme)
Water Consumption	9 Gallons per Hour (approx. 34 liters/hour)
Noise Level	49 dB
Voltage	230 Volts
Wattage	2100 watts
Material	Stainless Steel (Inner Material)
Number of Programs	6
Controls Type	Push Button
Display Type	LED
Installation Type	Built-In

## WARRANTY AND SUPPORT

---

Specific warranty terms and conditions for the Respekta GSP60V dishwasher are typically provided with the purchase documentation or can be found on the manufacturer's official website. Please retain your proof of purchase for warranty claims.

For technical support, spare parts, or service inquiries, please contact Respekta customer service. Contact details are usually available on the manufacturer's website or in the original packaging.

© 2024 Respekta. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.