

[Manuals.plus](#) /

> [SAMSUNG](#) /

> Samsung The Premiere 4K Smart Laser Short-Throw Projector User Manual

SAMSUNG The Premiere

Samsung The Premiere 4K Smart Laser Short-Throw Projector User Manual

Model: SP-LSP9T

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Samsung The Premiere 4K Smart Laser Short-Throw Projector. Please read this manual carefully before using the product to ensure safe and optimal performance.

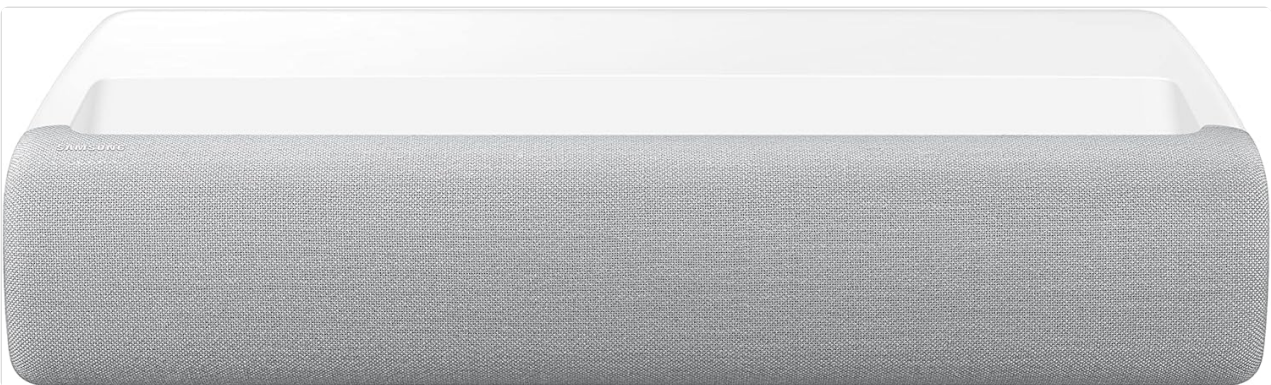 


Image: Front view of the Samsung The Premiere 4K Smart Laser Short-Throw Projector, showcasing its compact and elegant design.

WHAT'S IN THE BOX

Verify that all the following items are included in your product packaging:

- Power Cable
- User Manual

- E-Manual
- Remote Control

SETUP

Placement

The Premiere is a short-throw projector designed to be placed very close to the projection surface. For optimal viewing, place the projector on a flat, stable surface directly in front of the wall or screen. Ensure there are no obstructions between the projector and the projection surface. The ideal distance will vary based on the desired screen size, up to 130 inches.

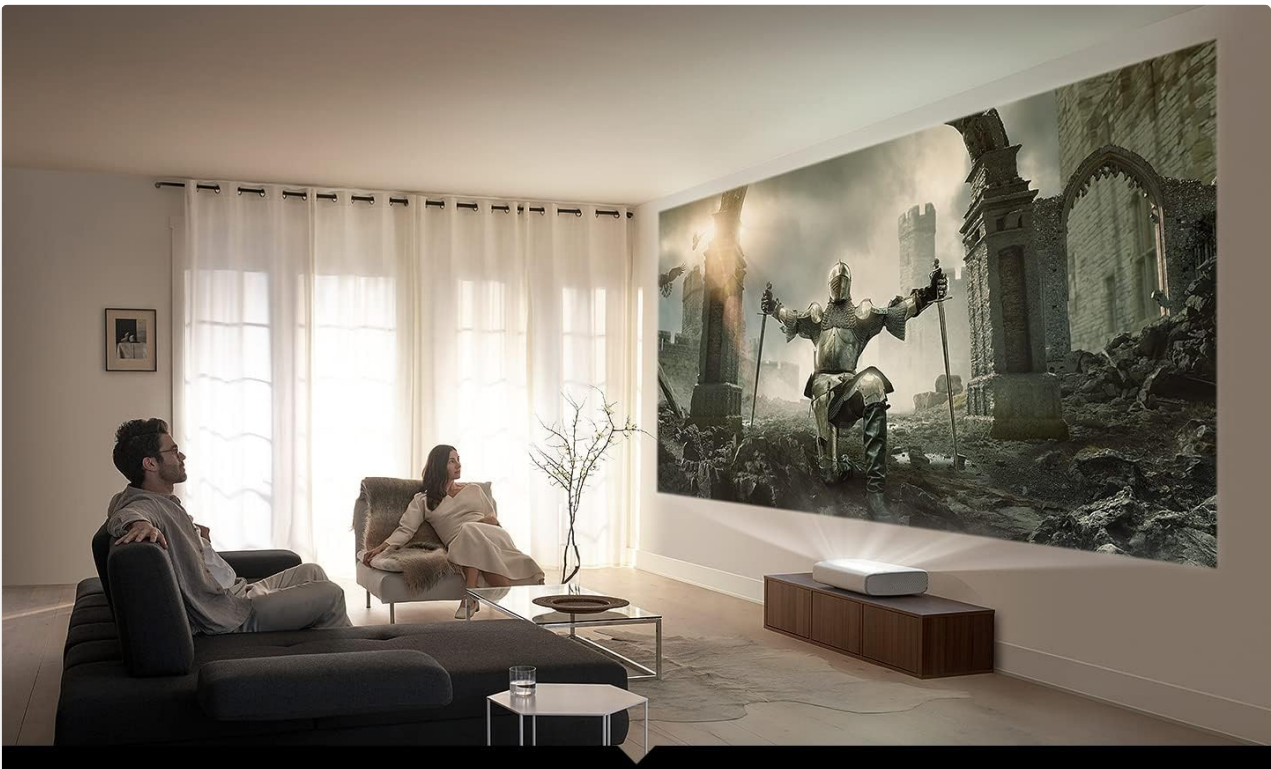 


Image: The Samsung The Premiere projector positioned in a living room, projecting a large image onto a wall, demonstrating typical setup.

Connecting Power

Connect the supplied power cable to the projector's power input port and then plug the other end into a wall outlet. Ensure the power outlet is easily accessible.

Connecting Devices

The projector offers multiple connectivity options:

- **HDMI:** Connect external devices such as Blu-ray players, gaming consoles, or set-top boxes to the HDMI ports.
- **USB:** Use the USB port to connect external storage devices for media playback.
- **Ethernet (LAN):** For a stable wired internet connection.
- **Bluetooth:** Pair with compatible audio devices like soundbars or headphones.
- **Digital Audio Out (Optical):** For connecting to external audio systems.

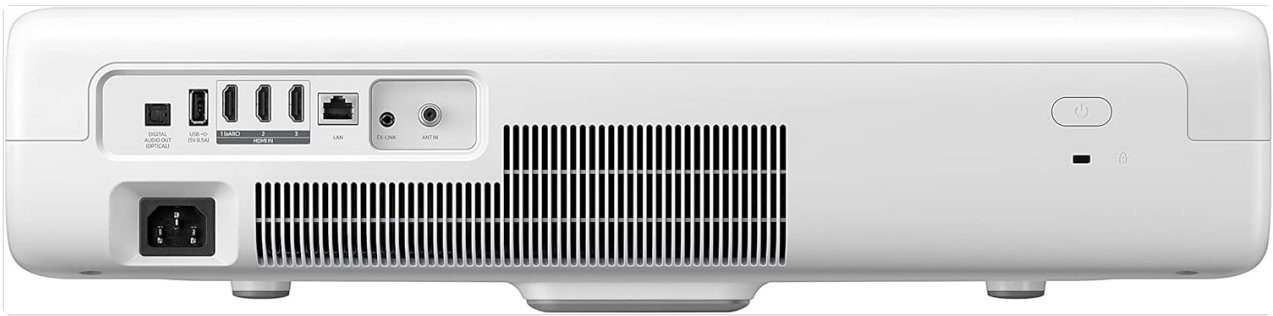 


Image: Rear view of the Samsung The Premiere projector, highlighting the various input and output ports for connectivity.

OPERATING INSTRUCTIONS

Initial Setup and Smart Features

Upon first power-on, the projector will guide you through an initial setup process, including network connection and basic settings. The Premiere is powered by Samsung's TIZEN Smart TV platform, offering access to various streaming apps, multiple voice assistants, and mobile mirroring capabilities (Mobile to TV- Mirroring, DLNA, Apple Airplay 2).

Adjusting Settings

Use the remote control to navigate the on-screen menu and adjust settings such as:

- **Picture Settings:** Adjust brightness, contrast, sharpness, color, and select picture modes (e.g., Film Mode). The projector supports 4K UHD resolution and HDR for enhanced visual quality.
- **Sound Settings:** Control volume, select sound modes, and configure the powerful 4.2 Channel System with Woofer and Dolby support.
- **Network Settings:** Manage Wi-Fi and Ethernet connections.
- **System Settings:** Access general settings, software updates, and device information.

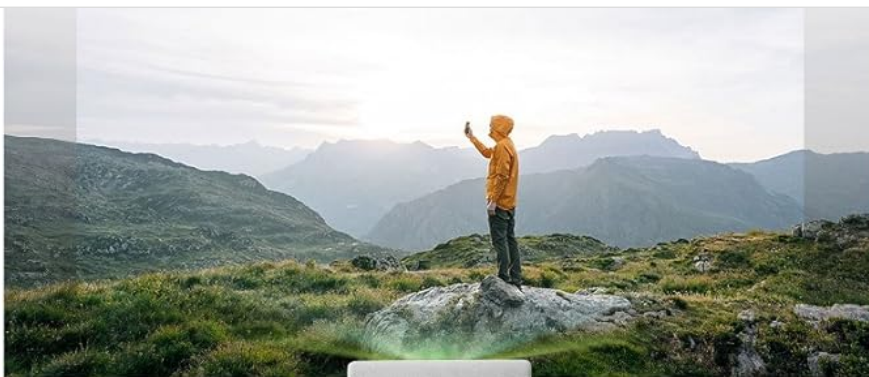 


Image: A visual comparison demonstrating the superior detail and clarity of 4K (3840 x 2160) resolution compared to Full HD (1920 x 1080) when projected.



Image: A diagram illustrating the wide sound dispersion from the projector, indicating its immersive audio capabilities.

MAINTENANCE

Proper maintenance ensures the longevity and performance of your projector:

- **Cleaning the Lens:** Gently wipe the projector lens with a soft, lint-free cloth specifically designed for optical surfaces. Do not use abrasive cleaners or excessive force.
- **Cleaning Vents:** Regularly clean the air vents to prevent dust buildup, which can impede airflow and cause overheating. Use a soft brush or compressed air.
- **Storage:** When not in use for extended periods, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your projector, refer to the table below for common problems and their solutions:

Problem	Possible Cause	Solution
No Power	Power cable not connected securely; Power outlet issue.	Ensure power cable is firmly connected. Try a different power outlet.
No Image	Input source not selected; Device not connected properly; Projector in standby mode.	Select the correct input source. Check HDMI/USB connections. Press the power button to wake from standby.
Poor Image Quality	Lens dirty; Focus not adjusted; Picture settings incorrect; Ambient light too high.	Clean the lens. Adjust focus. Reset picture settings. Reduce ambient light in the room.
No Sound	Volume too low; Mute activated; External audio device not connected or selected.	Increase volume. Deactivate mute. Check audio cable connections or Bluetooth pairing. Select correct audio output.

SPECIFICATIONS

Feature	Description
Brand	SAMSUNG
Model Number	The Premiere
Display Resolution	3840 x 2160 (4K UHD)
Visible Screen Diagonal	130 inches / 331 cm
Connectivity Technology	Bluetooth, Ethernet, HDMI, USB
Special Features	HDR, UHD Processor, Film Mode, 4K UHD Ultra Bright Laser, Dolby, Woofer, Multiroom Link, Powerful Audio 4.2 Channel System, Digital Clean View, Auto Game Mode, Mobile to TV- Mirroring, DLNA, SmartThings App Support, Multiple Voice Assistants, Smart TV Powered by TIZEN, Apple TV App, Apple Airplay 2
Color	White
Item Weight	11.5 pounds
Product Dimensions	14.4 x 21.7 x 5.6 inches
Recommended Uses	Entertainment

WARRANTY AND SUPPORT

This product is listed as USED and may not include manufacturer coverage. Please refer to your purchase agreement for any applicable seller-provided warranties or return policies.

For technical support or further assistance, please visit the official Samsung support website or contact their customer service. Keep your product's model number and serial number handy when seeking support.

Samsung Support Website: <https://www.samsung.com/us/support/>