

[Manuals.plus](#) /

> [Nileole](#) /

> Nileole 6-Deck Automatic Card Shuffler Instruction Manual

Nileole B09MJWCWD3

Nileole 6-Deck Automatic Card Shuffler Instruction Manual

INTRODUCTION

Thank you for choosing the Nileole 6-Deck Automatic Card Shuffler. This device is designed to efficiently shuffle up to six decks of standard-sized playing cards, making your card games smoother and more enjoyable. This manual provides essential information for the proper setup, operation, and maintenance of your card shuffler.

WHAT'S IN THE BOX

- Card Shuffler

SPECIFICATIONS

Feature	Detail
Product Dimensions	8 x 8 x 4.5 inches
Item Weight	1.08 pounds
Power Source	4 x 1.5V C batteries (not included)
Capacity	Up to 6 decks of standard cards or bridges

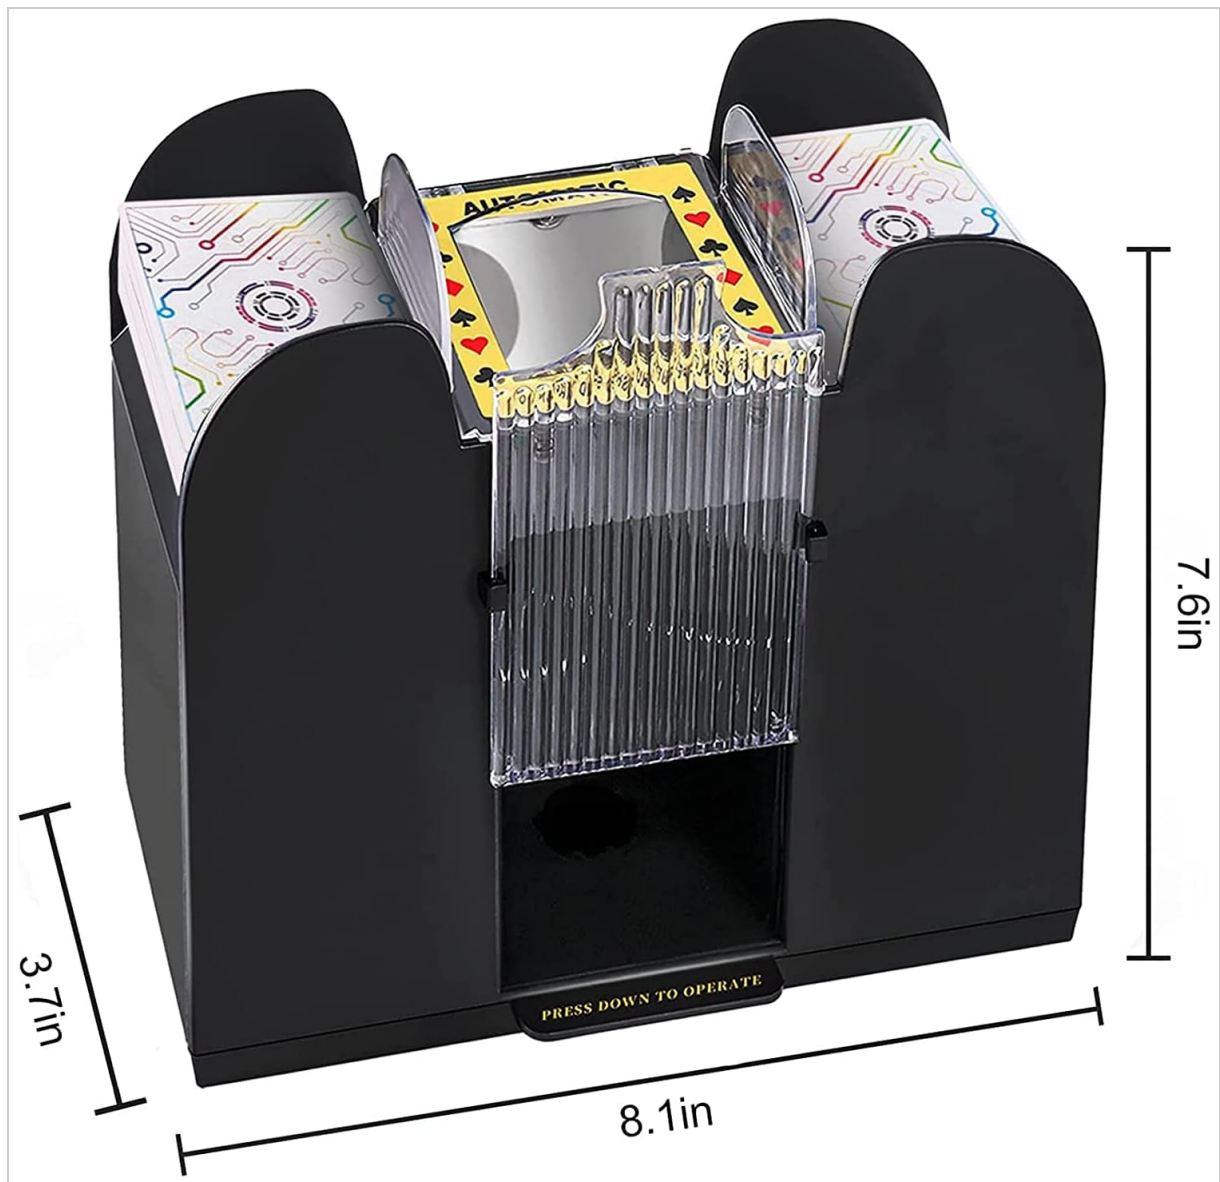


Figure 1: Nileole Automatic Card Shuffler with key dimensions: 8.1 inches wide, 7.6 inches high, and 3.7 inches deep.

SETUP

Battery Installation

The Nileole Automatic Card Shuffler requires 4 C batteries for operation. To install the batteries:

1. Locate the battery compartment on the underside of the shuffler.
2. Open the battery compartment cover.
3. Insert 4 C batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.


HOW TO USE



Insert the battery




Divide the cards in two and place them on both sides of the shuffler

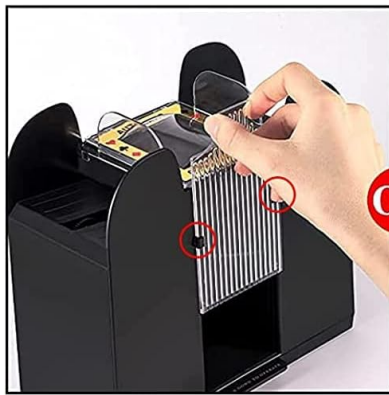

Pass the card removal transparent board through the fixing hook (Red circle) from above



Pass the card removal transparent board through the fixing hook (Red circle) from below

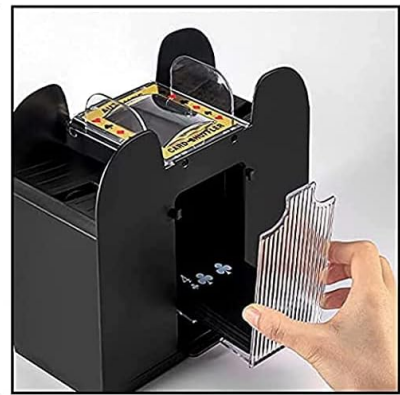

Press up the operation button and take out the card removal transparent board

Figure 2: Step-by-step diagram illustrating how to insert batteries into the shuffler's base.

Inserting the Card Removal Transparent Board

The transparent board is crucial for collecting shuffled cards neatly. It needs to be inserted correctly before use.

1. Locate the transparent card removal board.
2. Identify the two small hooks on the shuffler's front opening.
3. Slide the transparent board into the opening, ensuring it passes through these hooks. It can be inserted from either above or below the hooks, depending on your preference for initial card collection height.
4. Push the board down until it rests on the bottom platform.


HOW TO USE



Insert the battery




Divide the cards in two and place them on both sides of the shuffler

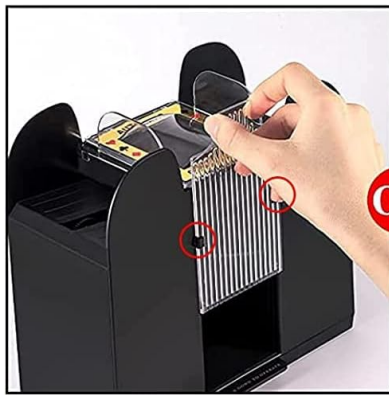

Pass the card removal transparent board through the fixing hook (Red circle) from above



Pass the card removal transparent board through the fixing hook (Red circle) from below

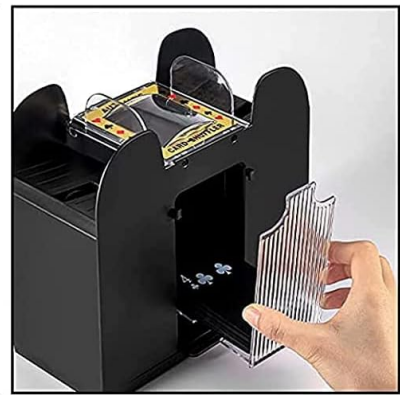

Press up the operation button and take out the card removal transparent board

Figure 3: Diagram illustrating the two methods for inserting the transparent card removal board into the shuffler's front slot.

Video 1: A demonstration of how to insert the transparent card collection tray and operate the shuffler with multiple decks of cards.

OPERATING INSTRUCTIONS

Shuffling Cards

Follow these steps to shuffle your cards:

1. Ensure the transparent card removal board is correctly inserted and resting on the bottom platform.
2. Divide your deck(s) of cards into two equal halves.
3. Place one half of the cards into the left input tray and the other half into the right input tray. Ensure the cards are stacked neatly.
4. Press and hold the 'PRESS DOWN TO OPERATE' button located at the front bottom of the shuffler. The internal rollers will activate, drawing cards from both sides and interweaving them into the central collection area.
5. Continue holding the button until all cards have been shuffled and collected.

HOW TO USE



Insert the battery




Divide the cards in two and place them on both sides of the shuffler



Pass the card removal transparent board through the fixing hook (Red circle) from **above**



Pass the card removal transparent board through the fixing hook (Red circle) from **below**

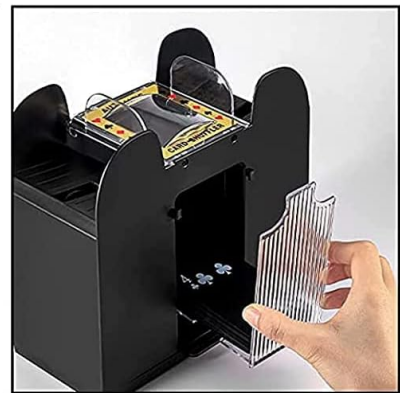

Press up the operation button and take out the card removal transparent board

Figure 4: Diagram illustrating how to divide cards and place them into the shuffler's input trays.

Video 2: A user demonstrating the automatic card shuffler in action, showing cards being loaded and shuffled.

Retrieving Shuffled Cards

Once shuffling is complete:

1. Release the 'PRESS DOWN TO OPERATE' button.
2. Gently pull the transparent card removal board upwards to extract the neatly shuffled stack of cards.

HOW TO USE



Insert the battery




Divide the cards in two and place them on both sides of the shuffler



Pass the card removal transparent board through the fixing hook (Red circle) from above



Pass the card removal transparent board through the fixing hook (Red circle) from below

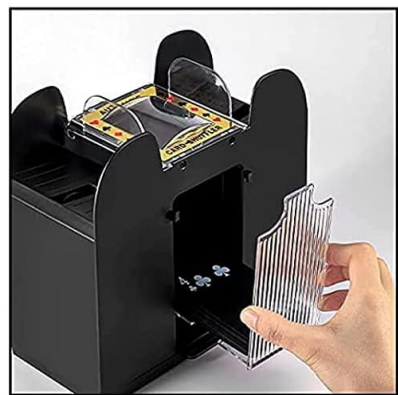

Press up the operation button and take out the card removal transparent board

Figure 5: Diagram illustrating how to retrieve the shuffled cards by lifting the transparent card removal board.

MAINTENANCE

To ensure the longevity and optimal performance of your Nileole Card Shuffler, regular maintenance is recommended:

- **Cleaning:** Periodically wipe the exterior of the shuffler with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** Replace all 4 C batteries when the shuffling speed decreases or the device stops functioning. Always replace all batteries at once with new ones.
- **Card Condition:** Using new or well-maintained cards can significantly improve shuffling efficiency and reduce wear on the shuffler's internal mechanisms. Worn, bent, or sticky cards may cause jams or uneven shuffling.
- **Internal Rollers:** If the rollers appear to lose grip over time, a product designed to rejuvenate rubber (such as 'Rubber Renew') can be applied carefully to the rollers using a cotton swab while the device is off and batteries are removed. Allow to dry completely before re-use.

TROUBLESHOOTING

If you encounter issues with your card shuffler, refer to the following common problems and solutions:

- **Shuffler not turning on:**

- Check if batteries are inserted correctly with the right polarity.
- Replace old batteries with new ones.

- **Cards not shuffling smoothly or getting jammed:**

- Ensure cards are placed evenly in both input trays.
- Check the condition of your playing cards; old, bent, or sticky cards can cause issues.
- Clean the internal rollers if they appear dirty or worn (refer to Maintenance section).
- Ensure the transparent card removal board is properly seated and not obstructing the cards.

- **Cards flipping upside down during shuffle:**

- While the shuffler aims for random distribution, occasional card flips can occur. This is generally not a functional defect.

- **Transparent card removal board not staying in place or breaking:**

- Ensure it is correctly aligned with the hooks in the shuffler's opening.
- If the clasp or board is damaged, contact customer support for assistance.

WARRANTY AND SUPPORT

Nileole provides a 180-day replacement or refund service for all customers in case of unexpected faults or issues. Your satisfaction is our priority.

For further assistance, troubleshooting, or warranty claims, please contact Nileole customer support through the retailer where you purchased the product or visit the official Nileole website for contact information.