

VISWIN ELGE_W11W_V

VISWIN Heavy-Duty H Frame Easel ELGE_W11W_V User Manual

Model: ELGE_W11W_V

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your VISWIN Heavy-Duty H Frame Easel. Designed for artists, this easel offers stability, adjustability, and convenience for various painting styles and canvas sizes. Please read these instructions carefully before use to ensure proper setup and safe operation.

1. SETUP INSTRUCTIONS

1.1 Unpacking and Component Check

Carefully unpack all components from the packaging. Verify that all parts and hardware are present according to the included parts list. Each wooden part is labeled with easy-peel number stickers, and hardware is individually packed and lettered for easy identification.



Square base

More stable structure than A-frame easel



Easy to move with 4 lockable casters

Image: All components and hardware are clearly labeled for straightforward assembly.

1.2 Assembly Process

Follow the clear step-by-step instructions provided in the assembly guide included with your easel. The kit includes necessary tools such as flat head and Philips screwdrivers, and a wrench key. An assembly video is also available for visual guidance.

Your browser does not support the video tag.

Video: This video demonstrates the assembly process and key operational features of the VISWIN Heavy-Duty H Frame Easel.

Ensure all screws and fasteners are securely tightened before using the easel to guarantee stability.

2. OPERATING INSTRUCTIONS

2.1 Adjusting Canvas Height and Size

The easel features dual extendable masts and a metal ratchet system to accommodate canvases up to 82 inches

(2083mm) in height. To adjust the canvas support tray:

1. Loosen the adjustment knobs on the side of the easel.
2. Slide the canvas support tray up or down to the desired height. The tray height can be adjusted from a minimum of 18 inches (460mm) to a maximum of 50 inches (1250mm) from the floor.
3. Tighten the adjustment knobs to secure the tray in place.
4. Use the flexible upper slider to firmly hold the top of your canvas. Adjust it by twisting the nut to secure the canvas.



Max loading capacity:
66 lbs - 30 Kg



Image: Easel dimensions and maximum canvas loading capacity of 66 lbs (30 Kg).

Double-mast

Sufficient loading capacity for large canvas up to 82" height



Image: The double-mast design provides sufficient loading capacity for large canvases up to 82 inches in height.

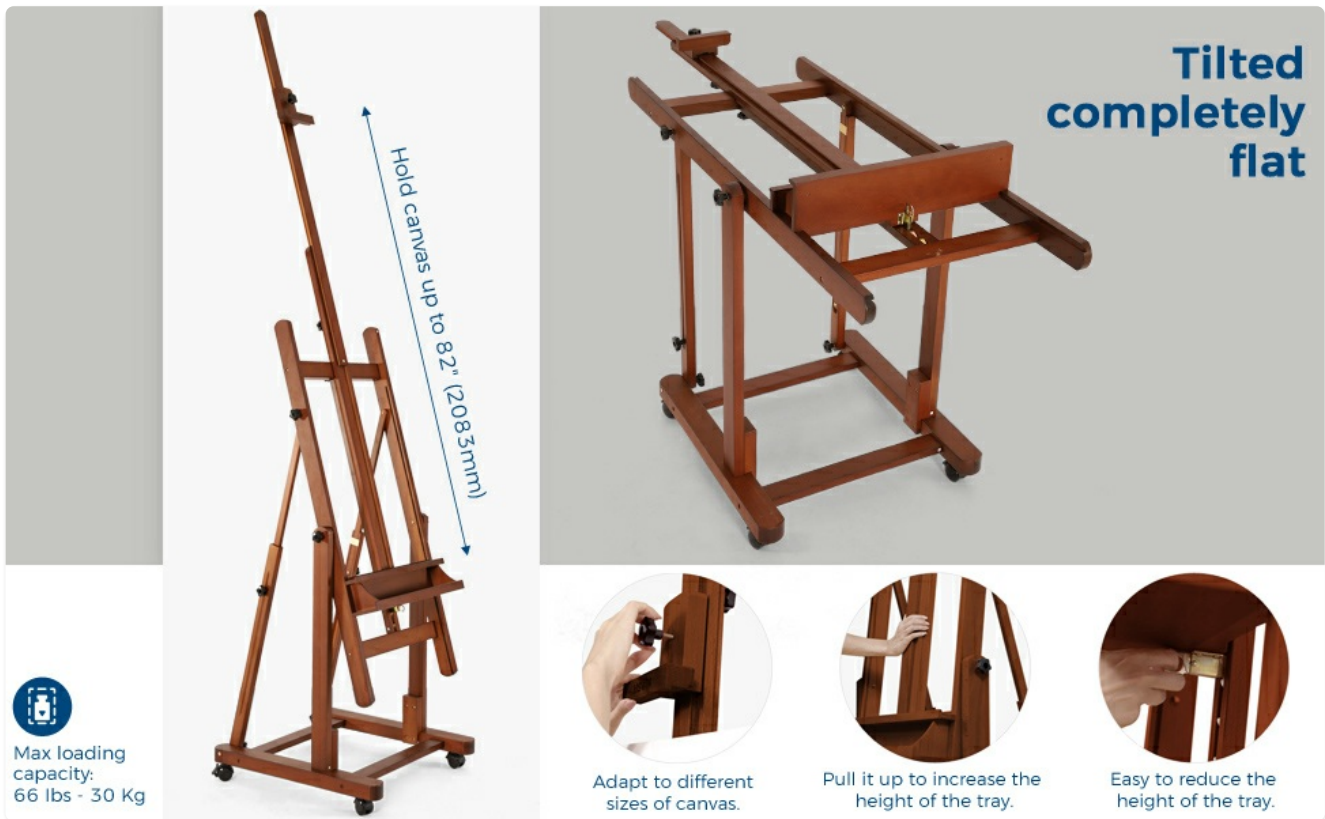


Image: The flexible upper slider is adjusted by twisting a nut to securely hold the canvas.

2.2 Adjusting Angle and Tilting Flat

The easel's angle can be adjusted from a slight forward tilt (approximately 5°) to a completely flat, horizontal position. This versatility is ideal for various mediums such as watercolors, pouring techniques, pastels, acrylics, and oils.


1. To change the angle, loosen the nuts located on the side supports of the easel.
2. Carefully adjust the easel to the desired angle.
3. For a flat position, continue adjusting until the easel surface is horizontal.
4. Tighten the nuts firmly to lock the easel in the chosen angle.

Adjust angle from vertical to horizontal

Perfect for watercolor, gesso, pouring paintings, etc



Image: The easel can be adjusted from vertical to a completely horizontal position.

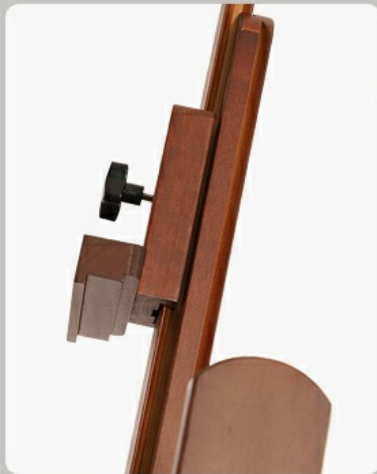

Flexible Upper Slider

Adjustable by twisting nut to secure the canvas

Stable structure

Can withstand up to 30 kg (66 lbs) weights.

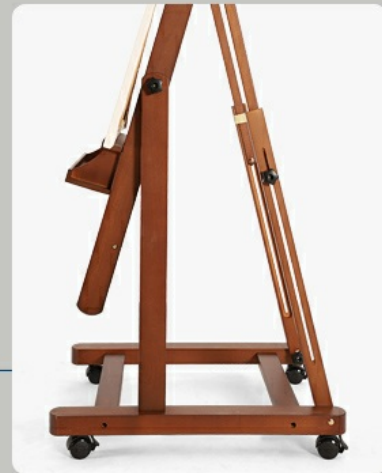


Image: The easel can be tilted completely flat, with detailed views of the adjustment mechanisms.

2.3 Using the Storage Tray

The easel includes a 10cm (4 inches) deep, double-layer storage tray. This tray is designed to keep your art supplies organized and within easy reach during your creative process.

Double-layer tray

Raised edge

Large-capacity

Adjustable height



Image: The double-layer tray provides ample space for organizing art supplies.



Image: The thicker double-layer tray offers large capacity, and the lockable casters allow for easy, silent movement.

2.4 Moving the Easel

The easel is equipped with four locking swivel casters for easy movement and secure placement. To move the easel:

1. Ensure all locking casters are unlocked.
2. Gently push the easel to its new location.
3. Once positioned, engage the locks on all four casters to prevent unintended movement and ensure stability during use.



Image: Overview of easel features, including the stable structure and four lockable wheels for mobility.

3. MAINTENANCE

3.1 Cleaning the Easel

To maintain the quality and appearance of your beech wood easel:

- Wipe down wooden surfaces with a soft, dry cloth regularly to remove dust.
- For stubborn marks or paint spills, use a slightly damp cloth with mild soap, then immediately wipe dry. Avoid harsh chemicals or abrasive cleaners, as these can damage the wood finish.
- Periodically check and clean the metal ratchet and adjustment mechanisms to ensure smooth operation.

3.2 Caster Care

The locking swivel casters should be kept free of debris (e.g., hair, lint) to ensure smooth movement. If casters become stiff, clean them and apply a small amount of silicone-based lubricant if necessary.

4. TROUBLESHOOTING

4.1 Easel Instability

- **Issue:** Easel wobbles or feels unstable during use.
- **Solution:** Ensure all assembly screws and adjustment knobs are securely tightened. Verify that the easel is placed on a flat, level surface. If using casters, ensure all four are locked when the easel is stationary.

4.2 Difficulty Adjusting Height or Angle

- **Issue:** Canvas support tray or easel angle is difficult to adjust.
- **Solution:** Loosen the corresponding adjustment knobs or nuts sufficiently before attempting to move the components. Check for any obstructions or debris in the sliding mechanisms. Ensure the metal ratchet is clean and free of paint buildup.

4.3 Casters Not Rolling Smoothly

- **Issue:** Easel casters are stiff or do not roll freely.
- **Solution:** Check for and remove any hair, dust, or debris wrapped around the caster wheels. Clean the casters thoroughly. If needed, apply a small amount of silicone lubricant to the wheel axles.

5. SPECIFICATIONS

Feature	Detail
Brand	VISWIN
Model Name	ELGE_W11W_V
Material	Premium Beech Wood
Color	Walnut Brown
Product Dimensions (D x W x H)	28"D x 26"W x 142"H (71cm D x 66cm W x 360cm H)
Item Weight	43 pounds (19.5 Kg)
Max Canvas Height	82 inches (2083mm)
Max Loading Capacity	66 lbs (30 Kg)
Tray Depth	4 inches (10cm)
Casters	4 Locking Swivel Casters
Adjustability	Adjustable Height, Tilts Flat (approx. 5° forward to horizontal)

6. WARRANTY AND SUPPORT

6.1 Lifetime Guarantee

VISWIN is committed to providing high-quality products. This easel comes with a lifetime guarantee. If you encounter any defects or issues with your product due to non-external reasons under normal use, please contact us. We are dedicated to ensuring your satisfaction.



Thicker Double-layer tray

Larger capacity helps you stay organized.



Four lockable casters

Move easily without noise.

Image: VISWIN's commitment to quality and customer support.

6.2 Customer Support

For any questions, concerns, or assistance with your VISWIN Heavy-Duty H Frame Easel, please refer to the contact information provided with your purchase or visit the official VISWIN website for support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question