

[Manuals.plus](#) /

› [Norelco](#) /

› Norelco Philips Nose Trimmer 3000 (NT3600/62) Instruction Manual

Norelco NT3600/62

Norelco Philips Nose Trimmer 3000 (NT3600/62) Instruction Manual

Model: NT3600/62

INTRODUCTION

Thank you for choosing the Norelco Philips Nose Trimmer 3000. This device is designed for safe and efficient trimming of unwanted hair in the nose, ears, and eyebrows. Please read this instruction manual carefully before first use and keep it for future reference.

PHILIPS
NORELCO

NT 3600/62

Ultimate comfort

Detail trimmer

For nose, ears
& brows

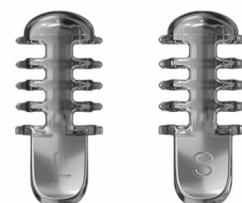


Image: The Norelco Philips Nose Trimmer 3000, showcasing its sleek design and the various attachments included for comprehensive grooming.

IMPORTANT SAFETY INFORMATION

- Keep the appliance dry.
- Do not use the appliance if it is damaged.
- Keep out of reach of children.
- This appliance is intended for trimming nose, ear, and eyebrow hair only. Do not use it for any other purpose.

SETUP

Inserting the Battery

1. Twist the bottom cap of the trimmer counter-clockwise and lift it off.
2. Insert one AA battery (included) into the battery compartment, ensuring the positive (+) and negative (-) terminals

are correctly aligned.

3. Replace the bottom cap and twist clockwise to secure it.

Attaching/Detaching Trimmer Heads

The trimmer comes with different heads for various grooming needs. To attach or detach a head, gently twist it counter-clockwise and lift it off. Align the new head and twist clockwise until it clicks into place.



Image: All components of the Norelco Philips Nose Trimmer 3000, including the main body, nose and ear trimming heads, two eyebrow combs (3mm and 5mm), and a small cleaning brush.

Video: An unboxing and initial setup guide for the Philips Norelco 3000 ear, nose, and eyebrow trimmer, demonstrating how to insert the battery and attach the different heads.

OPERATING INSTRUCTIONS

To turn the trimmer on, slide the power button up. To turn it off, slide the button down.

Nose Trimming

- Ensure the nose trimmer head is attached.
- Gently insert the trimmer tip into your nostril.
- Move the trimmer in a circular motion to cut unwanted hair. The Protective Guard System ensures comfort and prevents pulling.

Ultimate comfort: Protective guard system

No pulling,
guaranteed.



Image: A detailed view of the Protective Guard System on the nose trimmer head, designed to protect sensitive skin from direct contact with the blades.


Ear Trimming

- Attach the ear trimmer head.
- Carefully guide the trimmer around the inner and outer parts of your ear to remove unwanted hair.

Eyebrow Trimming

- Attach the nose trimmer head.
- Select either the 3mm or 5mm eyebrow comb and snap it over the nose trimmer head.
- Gently brush your eyebrows against the direction of hair growth to trim them to the desired length.

Dual-sided blades

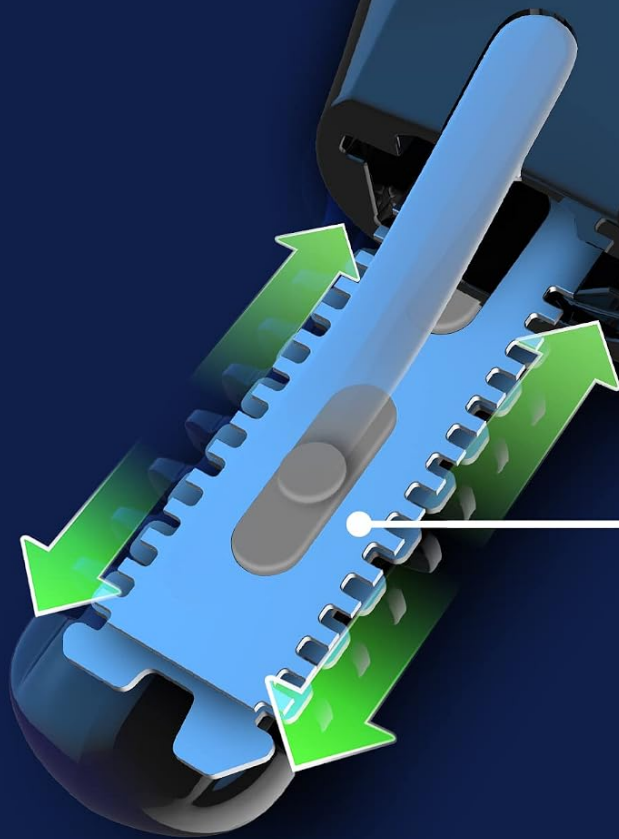

**No pulling,
guaranteed.**

Image: A close-up of the dual-sided steel blades, highlighting their design for efficient and precise hair cutting.

Video: Demonstrates the versatile usage of the trimmer for nose, upper lip, ears, and eyebrows, showing how to switch attachments and apply the device.

MAINTENANCE AND CLEANING

The Norelco Philips Nose Trimmer 3000 is fully washable, making cleaning simple and hygienic.

1. After each use, turn off the trimmer.
2. Remove the trimming head.
3. Rinse the trimming head and the main unit under warm running water.
4. Use the provided cleaning brush to remove any stubborn hair particles from the blades.
5. Allow all parts to air dry completely before reassembling or storing.



Fully washable

Easy to clean

Image: The trimmer head being rinsed under running water, illustrating its fully washable design for easy cleaning.

TROUBLESHOOTING

- **Trimmer not turning on:** Ensure the AA battery is correctly inserted and has sufficient charge. Replace the battery if necessary.
- **Reduced trimming performance:** Clean the trimming head thoroughly to remove any accumulated hair. Ensure the blades are free from debris.
- **Pulling or discomfort during use:** Ensure the Protective Guard System is intact and properly positioned. Clean the blades and ensure they are not dull. Replace the trimming head if performance does not improve.

SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Name	Philips Norelco Nose Trimmer 3000
Model Number	NT3600/62
Power Source	1 AA Battery (included)
Blade Material	Stainless Steel
Water Resistance	Fully Washable
Product Dimensions	3.94 x 1.18 x 0.79 inches
Item Weight	100 Grams (3.53 ounces)
Recommended Uses	Nose, Ears, Eyebrows, Face

WARRANTY & SUPPORT

This Norelco Philips Nose Trimmer 3000 comes with a **2-year manufacturer's warranty**. For warranty claims, product support, or further assistance, please refer to the contact information provided in the product packaging or visit the official Norelco website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

