



[Manuals.plus](#) /

› [Dreo](#) /

› Dreo Nomad One Tower Fan User Manual


Dreo DR-HTF007

Dreo Nomad One Tower Fan User Manual

Model: DR-HTF007

1. PRODUCT OVERVIEW

The Dreo Nomad One Tower Fan is designed to provide powerful, quiet, and customizable airflow for your indoor spaces. Featuring a sleek design, multiple speed and mode settings, and a wide oscillation angle, it ensures optimal comfort and air circulation.

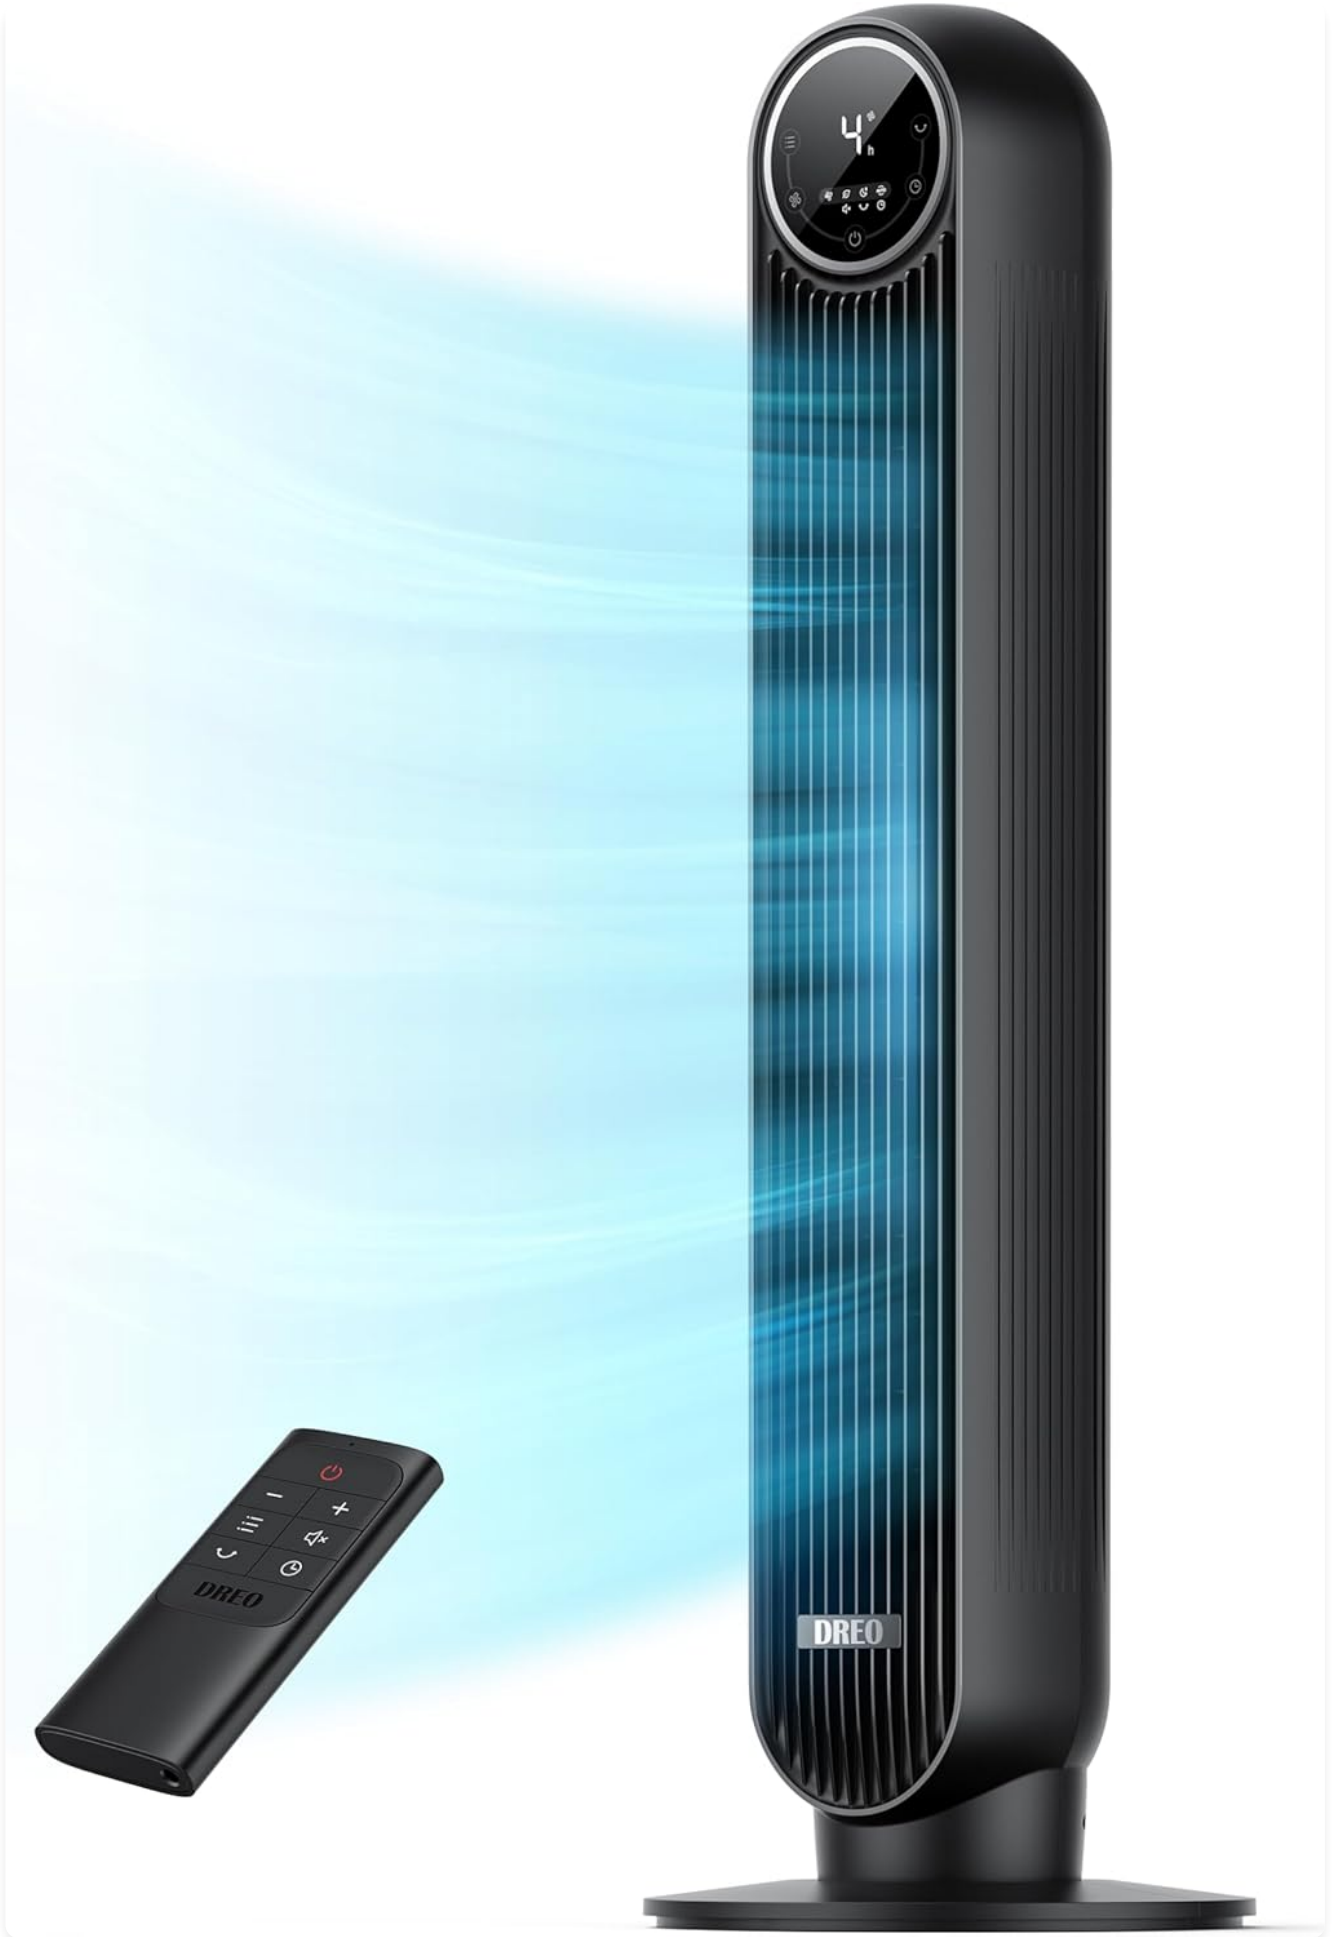

The Dreo Nomad One Tower Fan and its remote control.

Key features include:

- Powerful airflow up to 25ft/s.
- Ultra-quiet operation, as low as 28dB.
- 90° wide oscillation for expanded coverage.
- 4 speed settings and 4 operating modes (Normal, Natural, Sleep, Auto).
- 8-hour timer function.
- Easy-to-clean design with removable rear grille.

2. SETUP AND ASSEMBLY

Your Dreo Nomad One Tower Fan requires minimal assembly. Please ensure all components are present before beginning.

Included Components:

- Nomad One Tower Fan Body x 1
- Front Fan Base x 1
- Rear Fan Base x 1
- Remote Control x 1 (Battery Included)
- User Manual x 1

Assembly Steps:

1. Align the front and rear fan base pieces and snap them together.
2. Attach the assembled base to the bottom of the tower fan body. This is a tool-free assembly process.
3. Ensure the base is securely fastened to the fan body.
4. Place the fan on a flat, stable surface.
5. Plug the power cord into a standard electrical outlet.



The fan base attaches easily without tools.

3. OPERATING INSTRUCTIONS

The Dreo Nomad One Tower Fan offers various settings for personalized comfort.

Control Panel and Remote:

The fan can be operated using the intuitive LED control panel on top of the unit or the included remote control. The remote control allows for convenient adjustments from a distance.

Big Airflow. Tiny Noise.

HyperSilent

28 dB

Ultra Quiet

* Tested under internal laboratory conditions at lowest speed setting

The control panel displays current settings for modes and speeds.

Modes and Speeds:

Choose from 4 distinct modes and 4 speed settings:

- **Normal Mode:** Provides a consistent airflow at your selected speed.
- **Natural Mode:** Simulates natural breezes by varying fan speed.
- **Sleep Mode:** Operates at a lower, quieter speed with display auto-off and auto-mute for undisturbed rest.

- **Auto Mode:** Adjusts fan speed automatically based on the ambient room temperature for optimal comfort.

Airflow Changes with Your Room Temp



Auto Mode intelligently adjusts airflow according to room temperature.

Oscillation:

Activate the 90° oscillation feature to distribute airflow across a wider area, ensuring comprehensive room coverage.

Never Run Out of Airflow Options



The fan oscillates 90 degrees to cover a larger area.

Timer Function:

Set the fan to automatically turn off after a specified period, up to 8 hours, using the timer function. This is ideal for energy saving or for use during sleep.

Quiet Operation:

Engineered with an algorithmic impeller design and the Coanda effect, the fan operates quietly, with noise levels ranging from 28dB to 48dB depending on the speed setting. This ensures a peaceful environment.

Official Product Video:

Your browser does not support the video tag.

Official video demonstrating the features of the Dreo Nomad One Tower Fan, including its velocity and quiet operation.

4. MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your fan.

Cleaning the Fan:

1. Always unplug the fan from the power outlet before cleaning.
2. The rear grille and impeller wheel are removable for easy cleaning. Locate the single screw on the back panel, remove it, and detach the panel.
3. Carefully remove the impeller wheel.
4. Clean the grille and impeller wheel with a soft, damp cloth or rinse under water. Ensure they are completely dry before reassembling.
5. Wipe the exterior of the fan with a soft, dry cloth. Do not use abrasive cleaners or solvents.
6. Reassemble the impeller wheel and rear grille, securing the screw.

Easy to Clean All the Way Through



Steps for detaching and cleaning the fan's internal components.

5. TROUBLESHOOTING

If you encounter any issues with your Dreo Nomad One Tower Fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; power outlet malfunction; power button not pressed.	Ensure the fan is securely plugged into a working outlet. Press the power button on the control panel or remote.
Weak airflow.	Fan speed too low; air intake/outlet blocked; dust buildup.	Increase the fan speed. Check for obstructions around the air intake and outlet. Clean the fan as described in the Maintenance section.
Fan is noisy.	Dust buildup; unstable surface; internal component issue.	Clean the fan thoroughly. Ensure the fan is placed on a flat, stable surface. If noise persists, contact customer support.
Remote control not working.	Battery depleted; obstruction between remote and fan; remote not aimed correctly.	Replace the remote control battery. Ensure there are no obstructions. Aim the remote directly at the fan's receiver.

If the problem persists after attempting these solutions, please contact Dreco Customer Support for further assistance.

6. SPECIFICATIONS

Detailed technical specifications for the Dreco Nomad One Tower Fan (Model: DR-HTF007).

Specification	Value
Brand	Dreco
Model Name	Nomad One
Item Model Number	DR-HTF007
Color	Black
Product Dimensions (D x W x H)	11.81"D x 11.81"W x 36.22"H
Item Weight	9 Pounds
Power Source	Corded Electric
Wattage	42 watts
Voltage	120.0 V
Noise Level	28 dB (minimum)
Air Flow Capacity	1408 Cubic Feet Per Minute
Speed	1350 RPM
Number of Power Levels	4
Control Method	Remote, Touch
Blade Material	Acrylonitrile Butadiene Styrene (ABS)

Specification	Value
Indoor/Outdoor Usage	Indoor
Specification Met	ETL
Batteries Required	Yes (1 Lithium Metal battery included)

DREO | Tower Fan Series

36.22"


• Height

11.81"

• Width

11.81"

• Depth

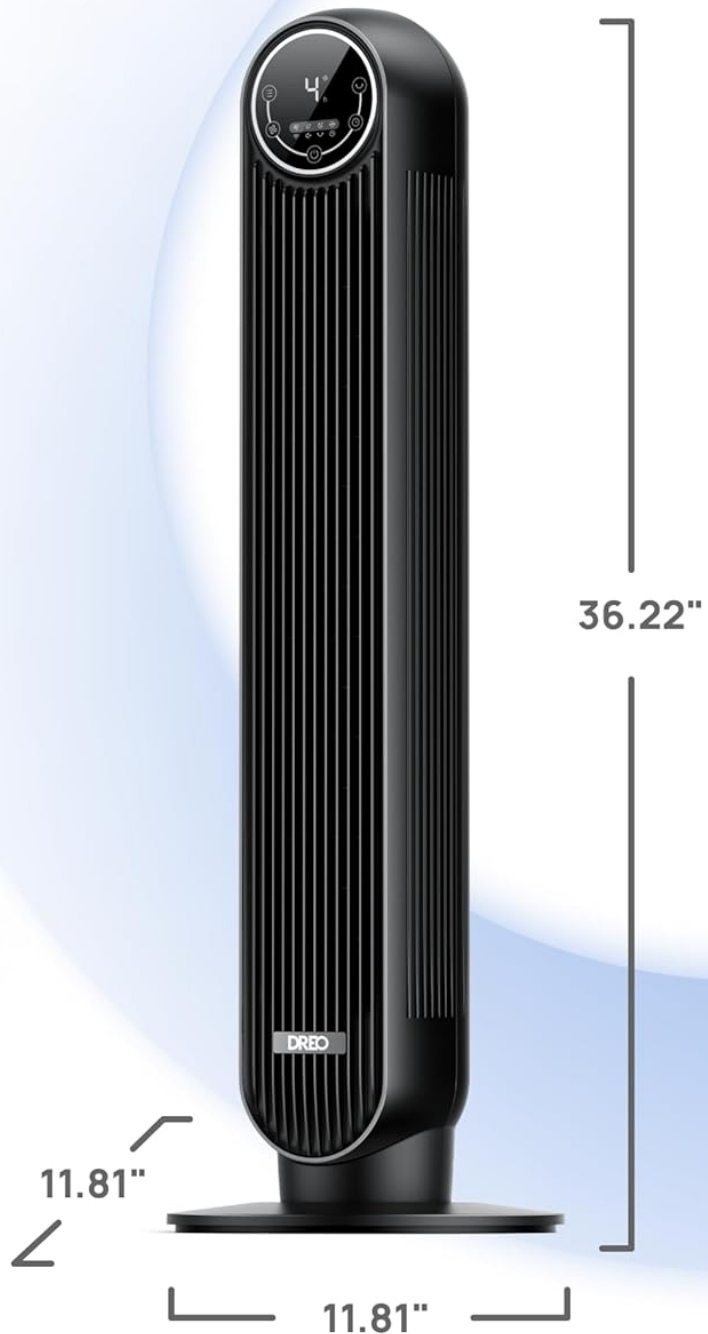

Dimensions of the Dreo Nomad One Tower Fan.

7. WARRANTY AND SUPPORT

Dreo stands behind the quality of its products.

Warranty Information:

The Dreo Nomad One Tower Fan comes with a **12-month default warranty**. You can extend this warranty up to **30 months** by registering your product on the official Dreo website. Please refer to the product packaging or the official Dreo website for detailed warranty terms and conditions.

Customer Support:

For any questions, concerns, or technical assistance, please contact Dreo Customer Support. You can find contact information on the official Dreo website or in the Quick Start Guide included with your product.

An electronic version of this user manual is also available for download: [Download User Manual \(PDF\)](#)