

## Canon XF605

# Canon XF605 UHD 4K HDR Pro Camcorder Instruction Manual

Model: XF605 (5076C002)

## 1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Canon XF605 UHD 4K HDR Pro Camcorder. The XF605 combines high-resolution capture with a mobile workflow, making it suitable for ENG, sports, entertainment, and narrative applications. This compact 1" CMOS sensor camera with a DIGIC DV 7 engine offers high sensitivity, Canon cinema color matrix choices, Canon Log 3, HDR support, and advanced autofocus modes like Eye AF and EOS iTR AF X (head detection). It supports up to UHD 4K60 4:2:2 10-bit capture in various XF-AVC and MP4 H.264/H.265 formats, with simultaneous recording to dual SD card slots. Features include a Direct Touch Control touchscreen menu, four-channel XLR audio, simultaneous outputs, a USB Type-C video output, and an iPhone app for enhanced workflow.

## 2. KEY FEATURES

- High-Resolution Video Capture:** Supports UHD 4K60 4:2:2 10-bit recording with a 1" CMOS sensor and DIGIC DV 7 engine. Dual SD card slots allow simultaneous capture of different codecs and rates (XF-AVC and MP4 H.264/H.265).
- Advanced Optics and Autofocus:** Features a 15x optical zoom (25.5-382.5mm 35mm equivalent) with separate controls for focus, iris, and zoom. Includes Eye AF and EOS iTR AF X (head detection) for sharp focus.
- Creative Recording Modes:** Offers Frame Recording and Interval Recording for time-lapse effects. Provides cinema color matrix selections including Canon Log3, HLG, and PQ HDR for detailed imaging.
- Robust Connectivity and Control:** USB-C video output for streaming and webcam use. Intuitive touchscreen control interface (adapted from Canon C70) and a dedicated iPhone app for content transfer and mobile workflow.
- Superior Audio Quality and Ergonomics:** Incorporates 4-channel XLR audio inputs. Lightweight and compact design, approximately 25% lighter and 10% smaller than its predecessor, for comfortable handling during extended shoots.

## 3. SETUP GUIDE

### 3.1. Battery Installation

To install the battery, ensure the camcorder is powered off. Open the battery compartment cover, align the battery with the terminals, and slide it into place until it clicks securely. To remove, press the release latch and slide the battery out.

### 3.2. Memory Card Insertion

The XF605 features dual SD card slots. Open the SD card slot cover. Insert the SD card(s) into the designated slot(s) with the label facing the correct direction (usually towards the front of the camera) until it clicks. Close the cover. Ensure cards are formatted in-camera before first use.

### 3.3. Powering On/Off

To power on the camcorder, slide the POWER switch to the ON position. The camcorder will initiate its startup sequence. To power off, slide the POWER switch to the OFF position. For extended storage, remove the battery.

## 4. OPERATING INSTRUCTIONS

### 4.1. Basic Recording

After powering on and ensuring a formatted SD card is inserted, select your desired recording mode (e.g., UHD 4K60) and codec (XF-AVC or MP4) via the menu. Press the REC START/STOP button to begin recording. Press it again to stop. The recording indicator will illuminate during active recording.

### 4.2. Zoom Control

The camcorder features a 15x optical zoom lens. Use the zoom rocker on the handle or the zoom ring on the lens to adjust the focal length. The zoom speed can often be controlled by the pressure applied to the rocker or through menu settings.

### 4.3. Focus Adjustment

The XF605 offers advanced autofocus (AF) modes, including Eye AF and EOS iTR AF X (head detection). To switch between AF and manual focus (MF), use the AF/MF switch on the lens barrel. In MF mode, rotate the focus ring to adjust focus. For precise AF, utilize the touchscreen to select focus points.

### 4.4. Audio Settings

The camcorder supports 4-channel XLR audio inputs. Connect external microphones or audio sources to the XLR ports. Adjust audio levels using the dedicated dials and switches on the camcorder body. Monitor audio levels via the on-screen display or headphones connected to the headphone jack.

### 4.5. Touchscreen Interface

The Direct Touch Control touchscreen LCD provides intuitive access to menu settings, playback, and focus point selection. Tap icons to navigate menus and adjust parameters. Swipe gestures may be used for certain functions.

### 4.6. Connectivity

Utilize the HDMI output for external monitoring or live streaming. The USB Type-C port can be used for video output, enabling webcam functionality. An iPhone app is available for remote control and content transfer.

## 5. PRODUCT OVERVIEW

## 5.1. Product Images



Front view of the Canon XF605 camcorder, showcasing the lens and integrated handle.



Rear view of the Canon XF605 with the vari-angle LCD screen extended, showing the control panel.



Side view of the Canon XF605, highlighting the various function buttons and dials for precise control.



Top view of the Canon XF605, illustrating the ergonomic handle and accessory shoe for external microphones.



Side view of the Canon XF605, detailing the professional 4-channel XLR audio inputs.



Angled front-side view of the Canon XF605, providing a comprehensive look at the lens and primary controls.



Another front view of the Canon XF605, emphasizing the lens and the array of control buttons on the side.

## 5.2. Product Videos

No official seller videos are available for embedding at this time.

## 6. TECHNICAL SPECIFICATIONS

---

<b>Brand Name</b>	Canon
<b>Item Weight</b>	13.21 pounds
<b>Product Dimensions</b>	15 x 12 x 11 inches
<b>Item Model Number</b>	5076C002_ED1_1_RE
<b>Color Name</b>	Black
<b>Special Features</b>	Lightweight, Time Lapse
<b>Photo Sensor Technology</b>	CMOS
<b>Video Capture Resolution</b>	4K
<b>Maximum Focal Length</b>	382.5 Millimeters
<b>Flash Memory Type</b>	SD
<b>Video Capture Format</b>	MP4
<b>Supported Audio Format</b>	WAV, AAC
<b>Screen Size</b>	1 Inches
<b>Connectivity Technology</b>	HDMI, USB

## 7. MAINTENANCE

---

### 7.1. Cleaning

Regularly clean the camcorder body with a soft, dry cloth. For the lens and LCD screen, use a specialized lens cleaning cloth and solution. Avoid abrasive materials or harsh chemicals. Ensure no dust or debris enters the lens or sensor area.

### 7.2. Storage

Store the camcorder in a cool, dry place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the battery and memory cards. Use a protective case to prevent physical damage.

## 8. TROUBLESHOOTING

---

### 8.1. Common Issues

- Camcorder not powering on:** Check battery charge, ensure battery is correctly inserted, or try connecting to AC adapter.
- Recording issues:** Verify memory card is inserted and formatted, check available storage space, ensure correct recording mode is selected.

- **Focus problems:** Ensure AF/MF switch is in the desired position. If in AF, try selecting a specific focus point on the touchscreen. If in MF, adjust the focus ring carefully.
- **No audio:** Check microphone connections, audio input levels, and ensure internal/external mic selection is correct.

## 8.2. Factory Reset

If persistent issues occur, a factory reset may resolve them. Refer to the camcorder's on-screen menu for the 'Reset Settings' or 'Initialize' option. Be aware that this will erase all custom settings and return the camcorder to its default state.

## 9. WHAT'S IN THE BOX

---

The Canon XF605 UHD 4K HDR Pro Camcorder typically includes the following items:

- Canon XF605 UHD 4K HDR Pro Camcorder
- Battery
- USB Cable
- AC Adapter

*Note: Additional accessories may be included depending on the specific package or retailer.*

## 10. WARRANTY AND SUPPORT

---

Your Canon XF605 UHD 4K HDR Pro Camcorder is covered by a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms, conditions, and duration. For technical support, service, or further inquiries, please visit the official Canon support website or contact their customer service department. Keep your proof of purchase for warranty claims.