

[manuals.plus](#) /› [Datel](#) /› [Datel GO-TCHA Classic for Pokémon GO - Instruction Manual](#)**Datel BS002731**

Datel GO-TCHA Classic for Pokémon GO

INSTRUCTION MANUAL

Introduction

The Datel GO-TCHA Classic is an accessory designed to enhance your Pokémon GO experience by automatically catching Pokémons and collecting items from PokéStops. This manual provides essential information for setting up, operating, and maintaining your device.



THIS PRODUCT IS **NOT**
SPONSORED, ENDORSED, OR
APPROVED BY NIANTIC.



THIS PRODUCT IS **NOT**
SPONSORED, ENDORSED, OR
APPROVED BY NINTENDO.

Image: The GO-TCHA Classic device, a sleek black wristband with a color touch screen.

Setup

1. What's in the Box

- GO-TCHA Classic unit
- Magnetic charge cable
- Wristband to hold GO-TCHA unit



Image: The GO-TCHA Classic in its retail packaging, showing the device and wristband.

2. Charging the Device

Before first use, fully charge your GO-TCHA Classic. Connect the magnetic charge cable to the charging points on the back of the GO-TCHA unit. Ensure the cable is securely attached and connected to a USB power source (e.g., computer USB port, USB wall adapter). The device features an animated battery charge indicator on its screen.

3. Pairing with Pokémon GO

1. Ensure Bluetooth is enabled on your smartphone.
2. Open the Pokémon GO app.
3. Tap the Main Menu button (Poké Ball icon).
4. Tap 'Settings'.
5. Select 'Pokémon GO Plus'.
6. Tap the button on your GO-TCHA Classic to make it discoverable. It should appear in the 'Available Devices' list in the app.
7. Tap the GO-TCHA Classic in the app to pair. Once paired, the icon in the app will turn blue.

Operating the GO-TCHA Classic

Automatic Catch & Collect Mode

The GO-TCHA Classic features a fully automatic auto-catch and collect mode. Once paired, the device will automatically attempt to catch Pokémons and collect items from PokéStops within range without requiring you to press a button on the device or your smartphone.

Screen and Feedback

The device has a bright, sharp color touch LED 0.96-inch animation screen. It provides on-screen animated alerts and vibration feedback for various events:

- **Pokémon in Range:** Alerts you when a PokéMon is nearby.
- **PokéMon Found:** Indicates a PokéMon has been detected.
- **PokéMon Caught:** Confirms a successful PokéMon capture.
- **PokéStop in Range:** Notifies you of a nearby PokéStop.
- **PokéStop Items Collected:** Confirms items have been gathered from a PokéStop.
- **Battery Charge Indicator:** Displays the current battery level.

You can tap the GO-TCHA screen to interact with alerts or to manually grab items if auto-collect is not enabled or preferred.



Image: A graphic illustrating the GO-TCHA Classic's color touch screen and various animated alerts for PokéMon and PokéStops.

Customizing Settings

The GO-TCHA Classic allows for screen rotation and other settings adjustments directly on the device. Refer to the on-screen menus for specific customization options.

Maintenance

Cleaning

Wipe the device regularly with a soft, dry cloth to remove dust and grime. Avoid using harsh chemicals or abrasive materials, which can damage the screen or casing.

Battery Care

To prolong battery life, avoid fully discharging the device frequently. Charge the device regularly, especially if it will be stored for an extended period. Use only the provided magnetic charge cable.

Troubleshooting

Device Not Pairing

- Ensure Bluetooth is active on your smartphone.
- Verify the GO-TCHA Classic is charged.
- Restart both your smartphone and the GO-TCHA Classic.
- In Pokémons GO settings, try unpairing and re-pairing the device.

Charging Issues

- Ensure the magnetic charge cable is firmly and correctly aligned with the charging pins on the GO-TCHA unit.
- Try a different USB power source or adapter.
- Check the charging cable for any visible damage.

Frequent Disconnections

- Ensure your smartphone and GO-TCHA Classic are in close proximity.
- Check for any interference from other Bluetooth devices.
- Ensure the Pokémons GO app is running in the foreground or background and not being closed by your phone's power-saving features.

Specifications

Model Number	BS002731
Dimensions	2.36 x 3.15 x 4.72 inches
Weight	1 ounce
Battery	1 Lithium Ion battery (included)
Display	0.96 inch Color Touch LED Screen
Connectivity	Bluetooth

Warranty and Support

For warranty information and technical support, please refer to the manufacturer's official website or contact their customer service directly. You can find more information at www.go-tcha-classic.co.uk.

© 2026 Datel. All rights reserved. Pokémon GO and Pokémons are trademarks of Nintendo.