

YAOHUIMI A420211125-30

YAOHUIMI Replacement Remote Control User Manual

Model: A420211125-30

INTRODUCTION

This manual provides instructions for the YAOHUIMI replacement remote control, designed for use with specific Olimpia Splendid air conditioner models. Please review this guide to ensure proper setup and operation of your new remote control.

Compatibility: This remote control is compatible with various R57 series air conditioner models, including but not limited to: RG57A3/BGEF, RG57A2/BGEF, RG57B/BGE, RG57D/BGE, RG57A6/BGEFU1, RG57A7/BGEF, RG57B2/BGE, RG57/BGE, RG57A/BGE, RG57B1/BGE, RG57A4/BGEF, RG57A6/BGEF, RG57H3(B), RAC-PD0811CRU, RAC-PD1011CRU, RAC-PD1211CRU, RG57H4B/BGEFU1, RG57HB/BGE, RG57K7(B)/BGEF, RG57K7/BGEF, RG57K7B/BGEF, RG57OB/BGE-OS, RG70E/BGEF.

Important Note: This is not a universal remote control. Please verify your air conditioner model or original remote control model before use.



UPGRADE!

Display in Fahrenheit



Display in Celsius



°C ⇌ °F



GREEN BACKLIGHT



Compatible with All R57 Series



R57** / ******

R57B/BGE	RG57D1(C)/BGEF
R57B1/BGE	RG57A3/BGEF
R57B2/BGE	R57E1/BGEU1
RG57D/BGE	RG57A7/BGEF
RG57A6/BGEFU1	RG57A6/BGEF
RG57A2/BGEF	RG57A2/BGE
RG57K7(B)/BGEF	RG57A3/BGEF
RG57B(B)/BGE	RG57B/BGE
RG57A1(B)/BGE	



Image: Overview of the replacement remote control, highlighting its features such as Fahrenheit and Celsius display, green backlight, and compatible R57 series models.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries (not included), ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image: Rear view of the remote control with the battery compartment open, showing where to insert batteries.





Image: Rear view of the remote control with the battery compartment closed after battery installation.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your compatible air conditioner. Familiarize yourself with the buttons and their functions:

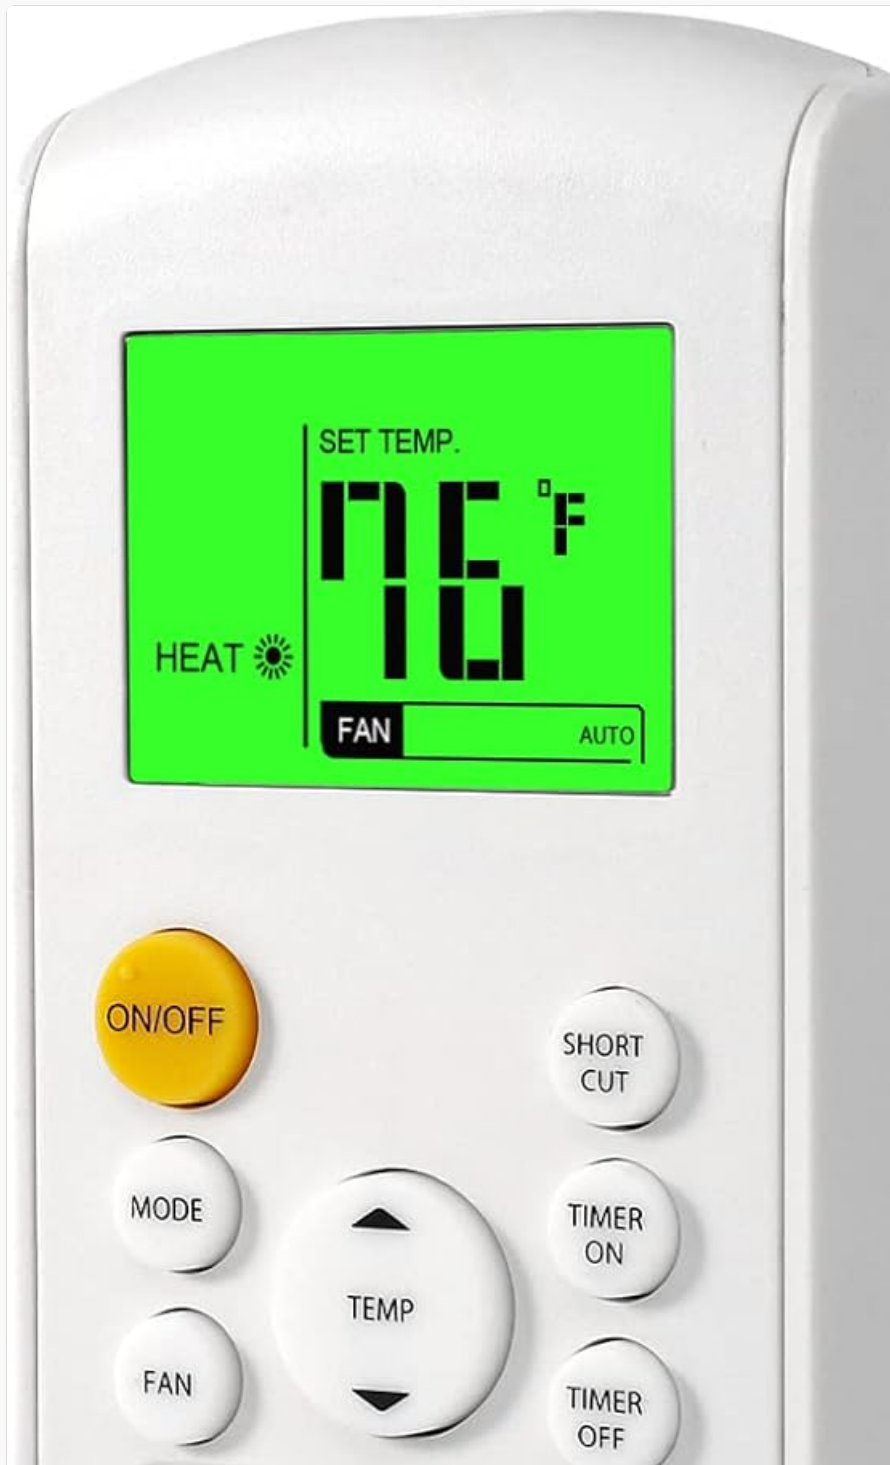





Image: Front view of the remote control, displaying all buttons and the LCD screen.

- **ON/OFF Button:** Press to power the air conditioner on or off.
- **MODE Button:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **TEMP Buttons (Up/Down Arrows):** Adjusts the desired temperature setting.
- **FAN Button:** Changes the fan speed (e.g., Low, Medium, High, Auto).
- **TIMER ON/OFF Buttons:** Sets a timer for the air conditioner to turn on or off automatically.
- **SLEEP Button:** Activates sleep mode for comfortable night operation.
- **SWING Button:** Controls the air conditioner's louver swing function.
- **DIRECT Button:** Adjusts the louver direction.
- **TURBO Button:** Activates rapid cooling or heating.
- **LED Button:** Turns the display light on or off on the air conditioner unit.
- **SHORT CUT Button:** Recalls preferred settings.

Temperature Display (Fahrenheit/Celsius)

The remote control display supports both Fahrenheit (°F) and Celsius (°C) temperature units. The unit can be switched as needed.

Display in both Fahrenheit and Celsius

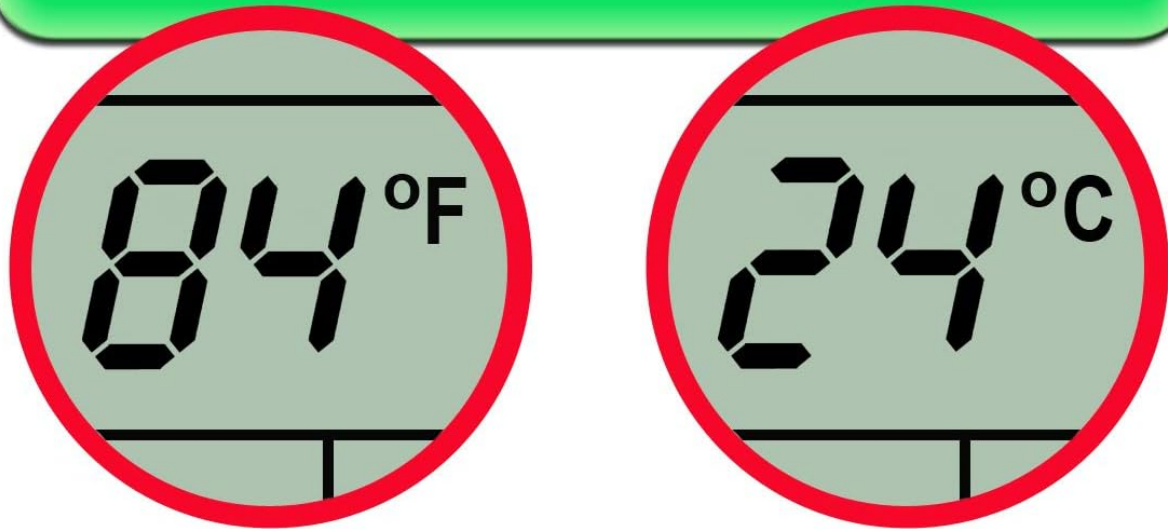

°C ⇌ °F

Image: Close-up of the remote control's LCD screen, illustrating the display of both Fahrenheit and Celsius temperature units.



Image: Two remote controls side-by-side, one displaying 76°F and the other 26°C, demonstrating the temperature unit conversion.

Green Backlight Feature

The remote control features a green backlight for easy operation in low-light conditions. The backlight illuminates the display, making it convenient to view settings at night.



Image: The remote control with its green backlight illuminated, enhancing visibility of the display.

MAINTENANCE

Battery Replacement

When the remote control's display becomes dim or the remote becomes unresponsive, it is time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section.

Note: Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or chemical solvents, as these may damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote control and the air conditioner's receiver.
- Confirm that the remote control is pointed directly at the air conditioner unit.

- **Display is dim or blank:**
 - Replace the batteries.
- **Air conditioner not responding to commands:**
 - Verify that your air conditioner model is listed as compatible with this remote control. This remote is not universal.
 - Ensure the air conditioner unit is powered on.

SPECIFICATIONS

- **Model Number:** A420211125-30
- **Brand:** YAOHUIMI
- **Compatible Air Conditioner Models:** RG57A3/BGEF, RG57A2/BGEF, RG57B/BGE, RG57D/BGE, RG57A6/BGEFU1, RG57A7/BGEF, RG57B2/BGE, RG57/BGE, RG57A/BGE, RG57B1/BGE, RG57A4/BGEF, RG57A6/BGEF, RG57H3(B), RAC-PD0811CRU, RAC-PD1011CRU, RAC-PD1211CRU, RG57H4B/BGEFU1, RG57HB/BGE, RG57K7(B)/BGEF, RG57K7/BGEF, RG57K7B/BGEF, RG57OB/BGE-OS, RG70E/BGEF (and others in the R57 series).
- **Display:** LCD with Green Backlight
- **Temperature Units:** Fahrenheit (°F) and Celsius (°C)
- **Power Source:** 2 x AAA Batteries (not included)

WARRANTY AND SUPPORT

For any questions, technical assistance, or warranty inquiries regarding your YAOHUIMI replacement remote control, please contact the seller or manufacturer directly through the platform where the purchase was made. Please have your order details and product model number (A420211125-30) available when contacting support.